YAMAHA

U

# RX-V565

## AV Receiver

OWNER'S MANUAL

# IMPORTANT SAFETY INSTRUCTIONS

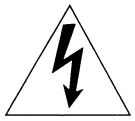

**CAUTION**

**RISK OF ELECTRIC SHOCK DO NOT OPEN**

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

- Explanation of Graphical Symbols

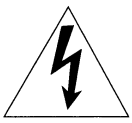

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert you to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert you to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**Note to CATV system installer:**

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

1 Read these instructions.
2 Keep these instructions.
3 Heed all warnings.
4 Follow all instructions.
5 Do not use this apparatus near water.
6 Clean only with dry cloth.
7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11 Only use attachments/accessories specified by the manufacturer.
12 Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13 Unplug this apparatus during lightning storms or when unused for long periods of time.
14 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

## FCC INFORMATION (for US customers)

1 **IMPORTANT NOTICE: DO NOT MODIFY THIS UNIT!**
This product, when installed as indicated in the instructions contained in this manual, meets FCC requirements. Modifications not expressly approved by Yamaha may void your authority, granted by the FCC, to use the product.
2 **IMPORTANT:** When connecting this product to accessories and/or another product use only high quality shielded cables. Cable/s supplied with this product MUST be used. Follow all installation instructions. Failure to follow instructions could void your FCC authorization to use this product in the USA.
3 **NOTE:** This product has been tested and found to comply with the requirements listed in FCC Regulations, Part 15 for Class "B" digital devices. Compliance with these requirements provides a reasonable level of assurance that your use of this product in a residential environment will not result in harmful interference with other electronic devices.
This equipment generates/uses radio frequencies and, if not installed and used according to the instructions found in the users manual, may cause interference harmful to the operation of other electronic devices.
Compliance with FCC regulations does not guarantee that interference will not occur in all installations. If this product is found to be the source of interference, which can be determined by turning the unit "OFF" and "ON", please try to eliminate the problem by using one of the following measures:

Relocate either this product or the device that is being affected by the interference.

Utilize power outlets that are on different branch (circuit breaker or fuse) circuits or install AC line filter/s.

In the case of radio or TV interference, relocate/reorient the antenna. If the antenna lead-in is 300 ohm ribbon lead, change the lead-in to coaxial type cable.

If these corrective measures do not produce satisfactory results, please contact the local retailer authorized to distribute this type of product. If you can not locate the appropriate retailer, please contact Yamaha Electronics Corp., U.S.A. 6660 Orangethorpe Ave, Buena Park, CA 90620.

The above statements apply ONLY to those products distributed by Yamaha Corporation of America or its subsidiaries.

# Caution: Read this before operating your unit.

1 To assure the finest performance, please read this manual carefully. Keep it in a safe place for future reference.

2 Install this sound system in a well ventilated, cool, dry, clean place – away from direct sunlight, heat sources, vibration, dust, moisture, and/or cold. Allow ventilation space of at least 30 cm on the top, 20 cm on the left and right, and 20 cm on the back of this unit.

3 Locate this unit away from other electrical appliances, motors, or transformers to avoid humming sounds.

4 Do not expose this unit to sudden temperature changes from cold to hot, and do not locate this unit in an environment with high humidity (i.e. a room with a humidifier) to prevent condensation inside this unit, which may cause an electrical shock, fire, damage to this unit, and/or personal injury.

5 Avoid installing this unit where foreign objects may fall onto this unit and/or this unit may be exposed to liquid dripping or splashing. On the top of this unit, do not place:
- Other components, as they may cause damage and/or discoloration on the surface of this unit.
- Burning objects (i.e. candles), as they may cause fire, damage to this unit, and/or personal injury.
- Containers with liquid in them, as they may fall and liquid may cause electrical shock to the user and/or damage to this unit.

6 Do not cover this unit with a newspaper, tablecloth, curtain, etc. in order not to obstruct heat radiation. If the temperature inside this unit rises, it may cause fire, damage to this unit, and/or personal injury.

7 Do not plug in this unit to a wall outlet until all connections are complete.

8 Do not operate this unit upside-down. It may overheat, possibly causing damage.

9 Do not use force on switches, knobs and/or cords.

10 When disconnecting the power cable from the wall outlet, grasp the plug; do not pull the cable.

11 Do not clean this unit with chemical solvents; this might damage the finish. Use a clean, dry cloth.

12 Only voltage specified on this unit must be used. Using this unit with a higher voltage than specified is dangerous and may cause fire, damage to this unit, and/or personal injury. Yamaha will not be held responsible for any damage resulting from use of this unit with a voltage other than specified.

13 To prevent damage by lightning, keep the power cord and outdoor antennas disconnected from a wall outlet or the unit during a lightning storm.

14 Do not attempt to modify or fix this unit. Contact qualified Yamaha service personnel when any service is needed. The cabinet should never be opened for any reasons.

15 When not planning to use this unit for long periods of time (i.e. vacation), disconnect the AC power plug from the wall outlet.

16 Install this unit near the AC outlet and where the AC power plug can be reached easily.

17 Be sure to read the "Troubleshooting" section on common operating errors before concluding that this unit is faulty.

18 Before moving this unit, press Ⓐ**STANDBY/ON** to set this unit in the standby mode, and disconnect the AC power plug from the wall outlet.

19 VOLTAGE SELECTOR (Asia and General models only)
The VOLTAGE SELECTOR on the rear panel of this unit must be set for your local main voltage BEFORE plugging into the AC wall outlet. Voltages are:
.....AC 110/120/220/230–240 V, 50/60 Hz (General model)
..... AC 220/230–240 V, 50/60 Hz (Asia model)

20 The batteries shall not be exposed to excessive heat such as sunshine, fire or like.

21 Excessive sound pressure from earphones and headphones can cause hearing loss.

22 When replacing the batteries, be sure to use batteries of the same type. Danger of explosion may happen if batteries are incorrectly replaced.

**WARNING**
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

As long as this unit is connected to the AC wall outlet, it is not disconnected from the AC power source even if you turn off this unit by Ⓐ**STANDBY/ON**. In this state, this unit is designed to consume a very small quantity of power.

**FOR CANADIAN CUSTOMERS**
To prevent electric shock, match wide blade of plug to wide slot and fully insert.
This Class B digital apparatus complies with Canadian ICES-003.

**POUR LES CONSOMMATEURS CANADIENS**
Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.
Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

**IMPORTANT**
Please record the serial number of this unit in the space below.
MODEL:
Serial No.:
The serial number is located on the rear of the unit.
Retain this Owner's Manual in a safe place for future reference.

# Contents

## INTRODUCTION


**Features** ..... **2**
**About this manual** ..... **3**
**Supplied accessories** ..... **3**
**Part names and functions** ..... **4**
Front panel ..... 4
Rear panel ..... 5
Front panel display ..... 6
Remote control ..... 7
**Quick start guide** ..... **8**


## PREPARATION


**Preparing remote control** ..... **9**
Installing batteries in the remote control ..... 9
Using the remote control ..... 9
**Connections** ..... **10**
Placing speakers ..... 10
Connecting speakers ..... 11
Information on jacks and cable plugs ..... 13
Connecting a TV monitor or projector ..... 14
Connecting other components ..... 15
Connecting a Yamaha iPod universal dock or Bluetooth™ wireless audio receiver ..... 16
Using the VIDEO AUX jacks on the front panel ..... 16
Connecting the FM and AM antennas ..... 17
Connecting the power cable ..... 17
Turning this unit on and off ..... 17
**Optimizing the speaker setting for your listening room (YPAO)** ..... **18**
Using Auto Setup ..... 18
When an error message is displayed during measurement ..... 20
When a warning message is displayed after measurement ..... 20


## BASIC OPERATION


**Playback** ..... **21**
Basic procedure ..... 21
Using the SCENE function ..... 21
Muting audio output temporarily (MUTE) ..... 22
Adjusting high/low frequency sound (tone control) 22
Enjoying pure hi-fi sound ..... 22
Using the sleep timer ..... 22
Using your headphones ..... 22
Displaying input signal information ..... 23
Changing information on the front panel display ..... 23
**Enjoy the sound field programs** ..... **24**
Selecting sound field programs ..... 24
Enjoying unprocessed input sources (Straight decoding mode) ..... 27
Enjoying sound field programs without surround speakers (Virtual CINEMA DSP) ..... 27
Enjoy sound field programs with headphones (SILENT CINEMA™) ..... 27
**FM/AM tuning** ..... **28**
Tuning in to the desired FM/AM station (Frequency tuning) ..... 28
Registering FM/AM stations and tuning in (Preset tuning) ..... 28
**Using iPod™** ..... **30**
Controlling iPod™ ..... 30
**Using Bluetooth™ components** ..... **32**
Pairing the Bluetooth™ wireless audio receiver and your Bluetooth component ..... 32
Playback of the Bluetooth™ component ..... 32


## ADVANCED OPERATION


**Setting the option menu for each input source (OPTION menu)** ..... **33**
OPTION menu items ..... 33
**Editing surround decoders/sound field programs** ..... **36**
Selecting a decoder used with a sound field program ..... 36
Setting sound field parameters ..... 36
Sound field parameters ..... 36
**Operating various settings for this unit (Setup menu)** ..... **38**
Basic operation of the setup menu ..... 39
Speaker Setup ..... 39
Sound Setup ..... 41
Function Setup ..... 42
DSP Parameter ..... 43
Memory Guard ..... 43
**Controlling other components with the remote control** ..... **44**
Setting remote control codes ..... 44
Resetting all remote control codes ..... 44
**Advanced setup** ..... **45**


## APPENDIX


**Troubleshooting** ..... **46**
General ..... 46
HDMI ..... 49
Tuner (FM/AM) ..... 49
Remote control ..... 50
iPod™ ..... 50
Bluetooth™ ..... 51
Auto Setup (YPAO) ..... 51
**Glossary** ..... **53**
**Sound field program information** ..... **55**
**Information on HDMI™** ..... **55**
**Specifications** ..... **56**
**Index** ..... **57**

**(at the end of this manual)**
**List of remote control codes** ..... **i**

# Features

### ■ Built-in 7-channel power amplifier

- Minimum RMS Output Power (1 kHz, 0.9% THD, 8 Ω)
- FRONT L/R: 90 W + 90 W
- CENTER: 90 W
- SURROUND L/R: 90 W + 90 W
- SURROUND BACK L/R: 90 W + 90 W

### ■ Speaker/Preout outputs

- Speaker jacks (7-channel), preout output jacks (subwoofer)

### ■ Input/Output terminals

#### Input terminals

- HDMI input x 4
- Audio/Visual input
  [Audio] Digital input (coaxial) x 2, digital input (optical) x 2, analog input x 2
  [Video] Component video x 2, composite video x 4
- Audio input (analog) x 2
- Dock input x 1
- V-AUX input
  [Audio] Analog x 1
  [Video] Composite video x 1

#### Output terminals

- Monitor output
  [Audio/Video] HDMI x 1
  [Video] Component video x 1, Composite video x 1
- Audio/Visual output
  [Audio] Analog x 1
  [Video] Composite video x 1
- Audio output
  Analog x 1

### ■ Proprietary Yamaha technology for the creation of sound fields

- CINEMA DSP
- Compressed Music Enhancer mode
- Virtual CINEMA DSP
- SILENT CINEMA

### ■ Digital audio decoders

- Dolby TrueHD, Dolby Digital Plus decoder
- DTS-HD Master Audio, DTS-HD High Resolution Audio, DTS Express
- Dolby Digital/Dolby Digital EX decoder
- DTS, DTS 96/24 decoder, DTS-ES Matrix 6.1, DTS-ES Discrete 6.1
- Dolby Pro Logic/Dolby Pro Logic II/Dolby Pro Logic IIx decoder
- DTS NEO:6 decoder

### ■ Sophisticated FM/AM tuner

- 40-station random and direct preset tuning
- Automatic preset tuning

### ■ HDMI™ (High-Definition Multimedia Interface)

- HDMI interface for standard, enhanced or high-definition video as well as multi-channel digital audio.
  – Automatic audio and video synchronization (lip sync) information capability
  – Deep Color video signal (30/36 bit) transmission capability
  – "x.v.Color" video signal transmission capability
  – High refresh rate and high resolution video signals capability
  – High definition digital audio format signals capability
- Analog video to HDMI digital video up-conversion (composite video → HDMI, component video → HDMI) capability for monitor out
- Analog video input up-scaling for HDMI digital video output 480i or 480p → 720p, 1080i or 1080p

### ■ DOCK terminal

- DOCK terminal to connect a Yamaha iPod universal dock (such as YDS-11, sold separately) or Bluetooth wireless audio receiver (such as YBA-10, sold separately)

### ■ Automatic speaker setup features

- "YPAO" (Yamaha Parametric Room Acoustic Optimizer) for automatically optimizing speaker outputs suitable for listening environments.

### ■ Other features

- 192-kHz/24-bit D/A converter
- OSD (on-screen display) menus that allow you to optimize this unit to suit your individual audiovisual system
- Direct mode for pure hi-fi sound for all sources
- Adaptive dynamic range controlling capability
- Sleep timer

# About this manual

- ☼ indicates a tip for your operation.
- Some operations can be performed by using either the keys on the front panel or the ones on the remote control. In case the key names differ between the front panel and the remote control, the key name on the remote control is given in parentheses.
- This manual is printed prior to production. Design and specifications are subject to change in part as a result of improvements, etc. In case of differences between the manual and product, the product has priority.
- "Ⓐ**STANDBY/ON**" or "7**HDMI 1**" (example) indicates the name of the parts on the front panel or the remote control. Refer to the attached sheet or the pages at the end of this manual for the information about each position of the parts.
- ☞ indicates the page describing the related information.



DOLBY. TRUEHD

Manufactured under license from Dolby Laboratories.
Dolby, Pro Logic and the double-D symbol are trademarks of Dolby Laboratories

dts-HD Master Audio

Manufactured under license under U.S. Patent No's: 5,451,942;5,956,674;5,974,380;5,978,762;6,226,616;6,487,535 & other U.S. and worldwide patents issued & pending. DTS is a registered trademark and the DTS logos, Symbol, DTS-HD and DTS-HD Master Audio are trademark of DTS, Inc. © 1996-2007 DTS, Inc. All Rights Reserved.

### iPod™

"iPod" is a trademark of Apple Inc., registered in the U.S. and other countries.

### Bluetooth™

Bluetooth is a registered trademark of Bluetooth SIG and is used by Yamaha in accordance with a license agreement.

HDMI

"HDMI," the "HDMI" logo and "High-Definition Multimedia Interface" are trademarks, or registered trademarks of HDMI Licensing LLC.

### x.v.Color™

"x.v.Color" is a trademark of Sony Corporation. "SILENT CINEMA" is a trademark of Yamaha Corporation.

SILENT ™ CINEMA

"SILENT CINEMA" is a trademark of Yamaha Corporation.

# Supplied accessories

Check that you received all of the following parts.

- Remote control
- Batteries (2) (AAA, R03, UM-4)
- Optimizer microphone
- AM loop antenna
- Indoor FM antenna

# Part names and functions

## Front panel

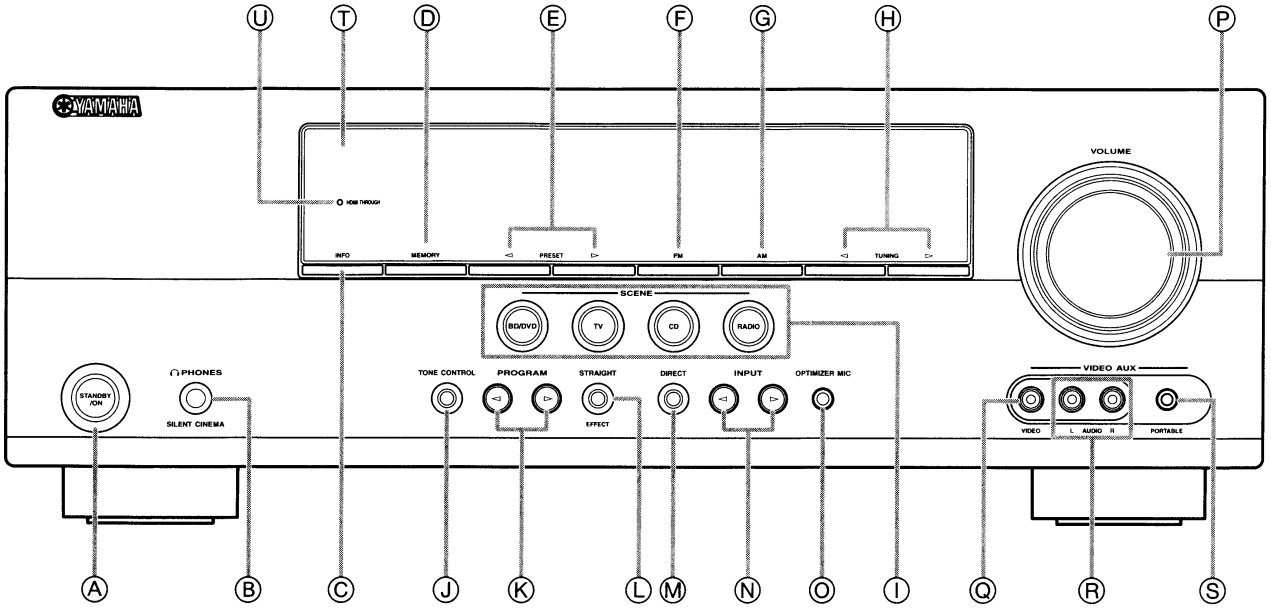


Ⓐ **STANDBY/ON**
Switches this unit between standby and on (see page 17).

Ⓑ **PHONES jack**
For plugging headphones (see page 22).

Ⓒ **INFO**
Changes information display screens on the front panel display (see page 23).

Ⓓ **MEMORY**
Registers FM/AM stations as preset stations (see page 29).

Ⓔ **PRESET ◁ / ▷**
Selects an FM/AM preset station (see page 29).

Ⓕ **FM**
Sets the FM/AM tuner band to FM (see page 28).

Ⓖ **AM**
Sets the FM/AM tuner band to AM (see page 28).

Ⓗ **TUNING ◁ / ▷**
Changes FM/AM tuner frequencies (see page 28).

Ⓘ **SCENE**
Switches between linked sets of input sources and sound field programs (see page 21).

Ⓙ **TONE CONTROL**
Adjusts high-frequency/low-frequency output of speakers (see page 22).

Ⓚ **PROGRAM ◁ / ▷**
Changes sound field programs (see page 24).

Ⓛ **STRAIGHT**
Changes a sound field program to straight decoding mode (see page 27).

Ⓜ **DIRECT**
Changes a sound field program to direct mode (see page 22).

Ⓝ **INPUT ◁ / ▷**
Selects an input source (see page 21).

Ⓞ **OPTIMIZER MIC jack**
For connecting the supplied optimizer microphone and adjusting output characteristics of speakers (see page 18).

Ⓟ **VOLUME control**
Controls the volume of this unit (see page 21).

Ⓠ **VIDEO (VIDEO AUX) jack**
For connecting the video output cable of a camcorder or game console (see page 16).

Ⓡ **AUDIO L/R (VIDEO AUX) jack**
For connecting the audio output cable of a camcorder or game console (see page 16).

Ⓢ **PORTABLE (VIDEO AUX) jack**
For connecting the audio output cable of a portable music player (see page 16).

Ⓣ **Front panel display**
Displays information on this unit (see page 6).

Ⓤ **HDMI THROUGH**
Lights up during pass-through output of an HDMI signal input to this unit while this unit is on standby (see page 42).

# Rear panel

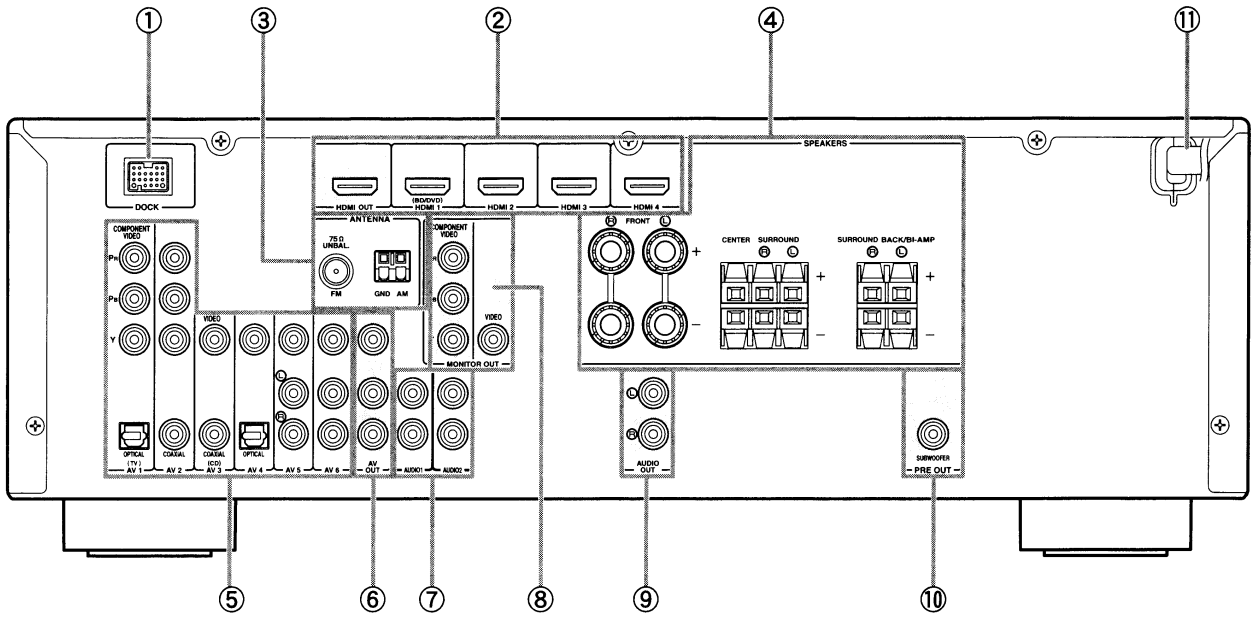


① **DOCK terminal**
For connecting an optional Yamaha iPod universal dock (YDS-11) or Bluetooth wireless audio receiver (YBA-10) (see page 16).

② **HDMI OUT/HDMI 1-4**
For connecting an HDMI-compatible video monitor or external components for HDMI inputs 1-4 (see page 15).

③ **ANTENNA jack**
For connecting supplied FM and AM antennas (see page 17).

④ **SPEAKERS terminal**
For connecting front right and left, center, surround and surround back speakers (see page 11).

⑤ **AV 1-6**
For connecting external components for audio/visual inputs 1-6 (see page 15).

⑥ **AV OUT**
Outputs audio/visual signals from a selected analog input source to an external component (see page 16).

⑦ **AUDIO 1/2**
For connecting external components for audio inputs 1-2 (see page 16).

⑧ **MONITOR OUT**
Outputs visual signals from this unit to a video monitor, such as a TV (see page 14).

⑨ **AUDIO OUT**
Outputs audio signals from a selected analog input source to an external component (see page 16).

⑩ **PRE OUT**
For connecting a subwoofer with a built-in amplifier (see page 11).

⑪ **Power Cable**
For connecting this cable to an AC wall outlet (see page 17).

# Front panel display

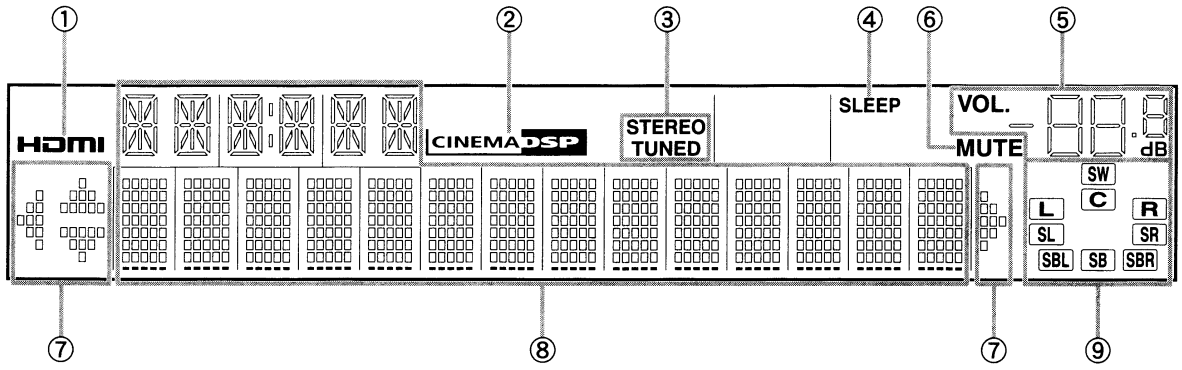


① **HDMI indicator**
Lights up during normal communication when HDMI is selected as an input source.

② **CINEMA DSP indicator**
Lights up when a sound field program that uses CINEMA DSP is selected.

③ **Tuner indicator**
Lights up while receiving a radio broadcast signal from an FM/AM station (see page 28).

④ **SLEEP indicator**
Lights up when the sleep timer is activated (see page 22).

⑤ **VOLUME indicator**
Displays volume levels.

⑥ **MUTE indicator**
Flashes when audio is muted.

⑦ **Cursor indicators**
Light up if corresponding cursors on the remote control are available for operations.

⑧ **Multi information display**
Displays menu items and settings for the current operation.

⑨ **Speaker indicators**
Indicate speaker terminals from which signals are currently output.

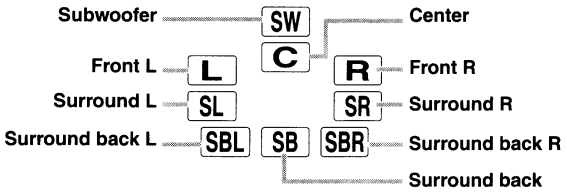

# Remote control

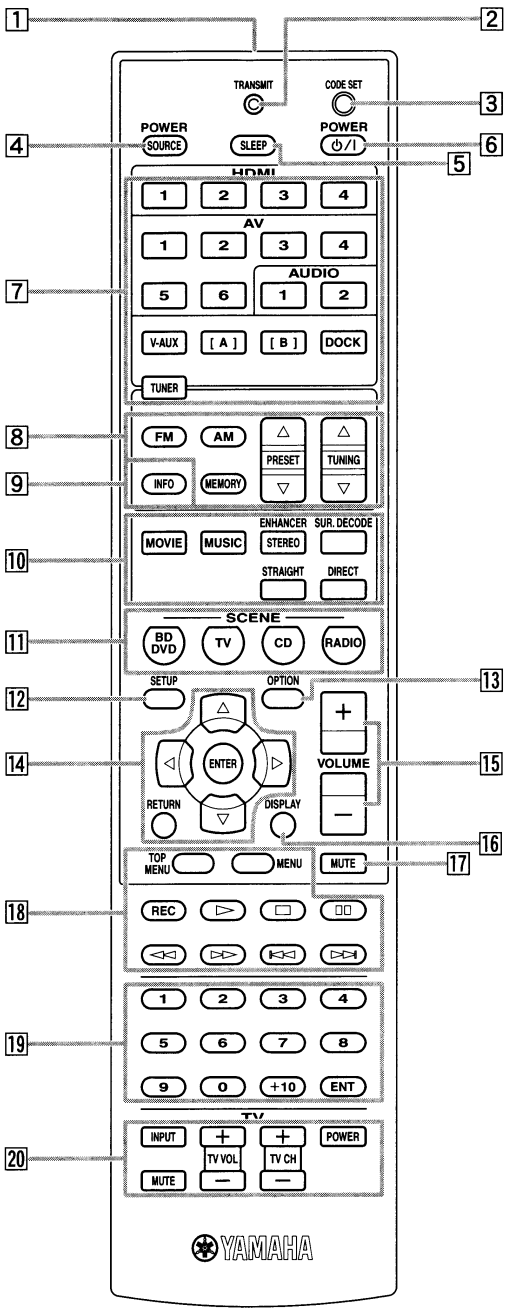


1 **Remote control signal transmitter**
Transmits infrared signals.

2 **TRANSMIT**
Lights up when a signal is output from the remote control.

3 **CODE SET**
Sets remote control codes for external component operations (see page 44).

4 **SOURCE POWER**
Switches an external component on and off.

5 **SLEEP**
Switches the sleep timer operations (see page 22).

6 **POWER**
Switches this unit on and standby.

7 **Input selection keys**

**HDMI 1-4** Selects HDMI inputs 1 through 4.
**AV 1-6** Selects AV inputs 1 through 6.
**AUDIO 1/2** Selects AUDIO inputs 1 and 2.
**V-AUX** Selects the V-AUX jack on the front panel of this unit.
**[A]/[B]** To control external components using the 18 **External component operation keys** separately from operations of this unit (see page 44).
**DOCK** Selects a Yamaha iPod universal dock/ Bluetooth wireless audio receiver connected to the DOCK jack.
**TUNER** Selects the FM/AM tuner.

8 **Tuner keys**

**FM** Switches a band between FM and AM.
**AM**
**MEMORY** Presets radio stations.
**PRESET △ / ▽** Selects a preset station.
**TUNING △ / ▽** Changes tuning frequencies.

9 **INFO**
Changes the information shown on the front panel display (see page 23).

10 **Sound selection keys**
Selects sound field programs (see page 24).

11 **SCENE**
Switches between linked sets of input sources and sound field programs (see page 21).

12 **SETUP**
Displays the setup menu (see page 39).

13 **OPTION**
Displays the option menu (see page 33).

14 **Cursors △ / ▽ / ◁ / ▷/ENTER/RETURN**

**Cursors △ / ▽ / ◁ / ▷** Select menu items displayed on the front panel display or on a video monitor, or change settings.
**ENTER** Confirms a selected item.
**RETURN** Returns to the previous screen or ends the menu display.

15 **VOLUME +/–**
Adjust the volume of this unit (see page 21).

16 **DISPLAY**
Changes the operation mode of the iPod connected to the Yamaha iPod universal dock (see page 30).

17 **MUTE**
Turns the mute function of the sound output on and off (see page 22).

18 **External component operation keys**
Operate recording, playback etc. of external components (see page 44).

19 **Numeric keys**
Enter numbers.

20 **TV control keys**
Operate a monitor such as a TV or projector.

# Quick start guide

When you use this product for the first time, perform setup following the steps below. See the related pages for details on operations and settings.

## Step 1: Prepare items for setup

Prepare speakers, DVD player, cables, and other items necessary for setup.
For example, prepare the following items for setting up a 5.1-channel sound system.

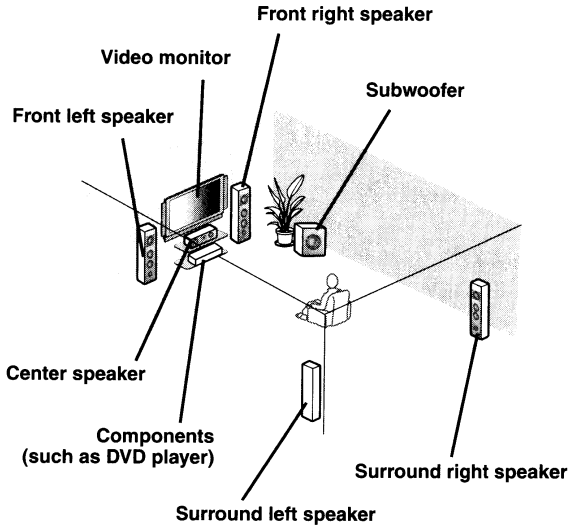


| Requirements | | qty. |
|---|---|---|
| Speakers | Front speaker | 2 |
| | Center speaker | 1 |
| | Surround speaker | 2 |
| Active subwoofer | | 1 |
| Speaker cable | | 5 |
| Subwoofer cable | | 1 |
| Reproduction component such as DVD player | | 1 |
| Video monitor such as TV | | 1 |
| Video cable or HDMI cable | | 2 |
| Audio cable | | 2 |

- Prepare two speakers (for front). The priority of the requirement of other speakers is as follows:
  1 Two surround speakers
  2 One center speaker
  3 One (or two) surround back speaker(s)
- If your video monitor is a CRT, we recommend that you use magnetically shielded speakers.

## Step 2: Set up your speakers

Place your speakers in the room and connect them to this unit.


- Placing speakers ☞P. 10
- Connecting speakers ☞P. 11


- This unit has a YPAO (Yamaha Parametric Room Acoustic Optimizer) that automatically optimizes this unit based on room acoustic characteristics (audio characteristics of the speakers, speaker positions, and room acoustics, etc.).
  You can enjoy good balanced sound without special knowledge by using the YPAO technology (see page 18).

## Step 3: Connect your components

Connect your TV, DVD player, or other components.


- Connecting a TV monitor or projector ☞P. 14
- Connecting other components ☞P. 15
- Connecting a Yamaha iPod universal dock or Bluetooth wireless audio receiver ☞P. 16
- Connecting the FM and AM antennas ☞P. 17


## Step 4: Turn on the power

Connect the power cable and turn on this unit.


- Connecting the power cable ☞P. 17
- Turning this unit on and off ☞P. 17


## Step 5: Select the input source and start playback

Select the component connected in the step 3 as an input source and start playback.


- Basic procedure ☞P. 21
- Selecting sound field programs ☞P. 24


- This unit supports the SCENE function that changes the input source and sound field program at one time. Four scenes are preset for different purposes for Blu-ray disc, DVD and CD, and you can select from a scene from those just by pressing a remote control key. See page 21 for details.

# Preparing remote control

## Installing batteries in the remote control

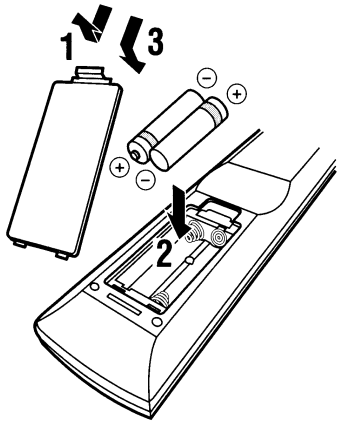


**1 Take off the battery compartment cover.**

**2 Insert the two supplied batteries (AAA, R03, UM-4) according to the polarity markings (+ and –) on the inside of the battery compartment.**

**3 Snap the battery compartment cover back into place.**

### Notes

- Change all batteries if you notice the following conditions:
  – the operation range of the remote control narrows
  – the transmit indicator does not flash or is dim
- Do not use old batteries together with new ones. This may shorten the life of the new batteries or cause old batteries to leak.
- Do not use different types of batteries (such as alkaline and manganese batteries) together. Specification of batteries may be different even though they look the same.
- If you find leaking batteries, discard the batteries immediately, taking care not to touch the leaked material. If the leaked material comes into contact with your skin or gets into your eyes or mouth, rinse it away immediately and consult a doctor. Clean the battery compartment thoroughly before installing new batteries.
- Dispose of the old batteries correctly in accordance with your local regulations.
- If the remote control is without batteries for more than 2 minutes, or if exhausted batteries remain in the remote control, the contents of the memory may be cleared. In such a case, install new batteries and set the remote control code.

## Using the remote control

The remote control transmits a directional infrared ray. Be sure to aim the remote control directly at the remote control sensor on this unit during operation.

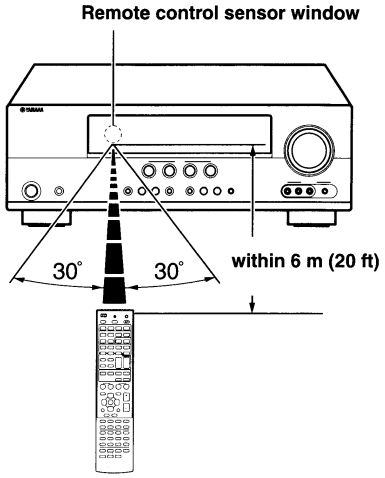


### Notes

- Do not spill water or other liquids on the remote control.
- Do not drop the remote control.
- Do not leave or store the remote control in the following conditions:
  – places of high humidity, such as near a bath
  – places of high temperatures, such as near a heater or stove
  – places of extremely low temperatures
  – dusty places

- You can operate external components with this remote control by setting the remote control code. See page 44 for details.

## Placing speakers

This unit supports up to 7.1-channel surround. We recommended the following speaker layout in order to obtain the optimum surround effect.

### 7.1-channel speaker layout

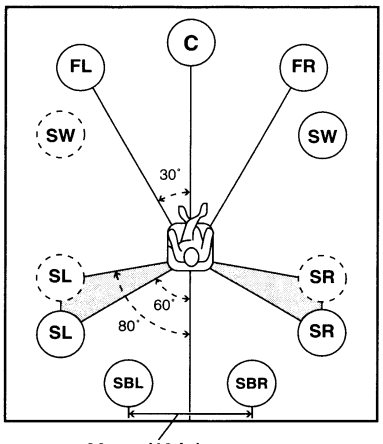


### 6.1-channel speaker layout

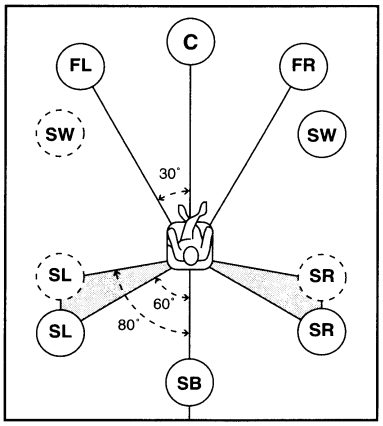


### 5.1-channel speaker layout

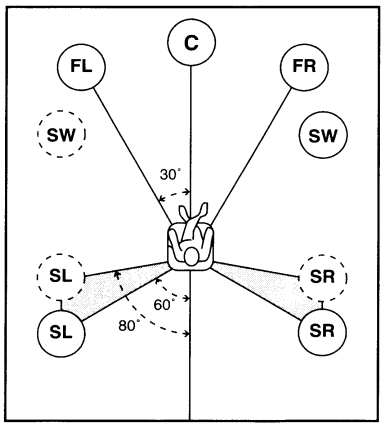


### Speaker channels

#### ■ Front left and right speakers (FL and FR)

The front speakers are used for the front channel sounds (stereo sound) and effect sounds. Place these speakers at an equal distance from the ideal listening position. When using a screen, the appropriate top positions of the speakers are about 1/4 of the screen from the bottom.

#### ■ Center speaker (C)

The center speaker is for the center channel sounds (dialog, vocals, etc.). Place it halfway between the left and right speakers. When using a TV, place the speaker just above or just under the center of the TV with the front surfaces of the TV and the speaker aligned. When using a screen, place it just under the center of the screen.

#### ■ Surround left and right speakers (SL and SR)

The surround speakers are used for effect and surround sounds.
Place them at the rear left and rear right facing the listening position.
To obtain a natural sound flow in the 5.1-channel speaker layout, place them slightly further back than in the 7.1-channel speaker layout.

#### ■ Surround back left and right speakers (SBL and SBR) / Surround back speaker (SB)

The surround back left and right speakers are used for rear effect sounds. Place them at the rear of the room facing the listening position at least 30 cm away from each other, ideally at the same distance as that between the front left and right speakers.
In the 6.1-channel speaker layout, surround back left and right channel sound signals are mixed down and output from the single surround back speaker.
In the 5.1-channel speaker layout, surround back left and right channel sound signals are output from the surround left and right speakers.

#### ■ Subwoofer (SW)

The subwoofer speaker is used for bass sounds and low-frequency effect (LFE) sounds included in Dolby Digital and DTS signals. Use a subwoofer with a built-in amplifier, such as the Yamaha Active Servo Processing Subwoofer System. Place it exterior to the front left and right speakers facing slightly inward to reduce reflections from a wall.

# Connecting speakers

When you connect speakers, connect them to the respective terminals as follows, according to your speaker layout.

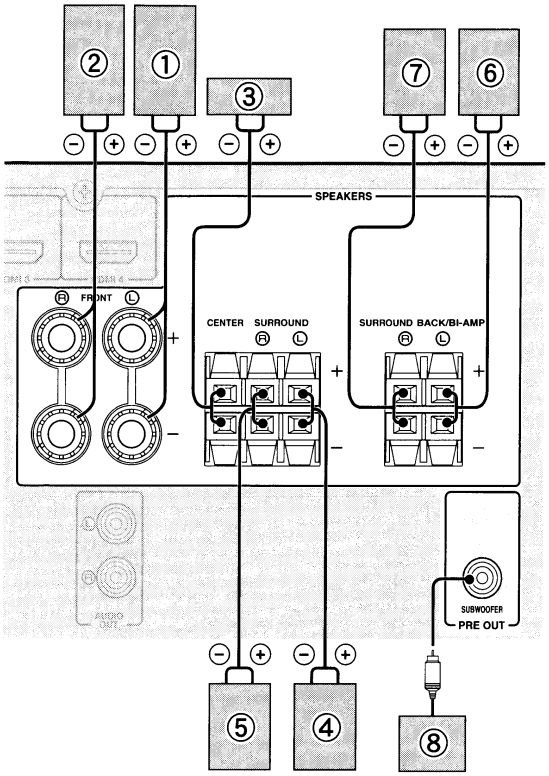


## ■ 7.1-channel

| Speakers | Jacks on this unit |
|---|---|
| ① Front speaker L | **FRONT (L)** |
| ② Front speaker R | **FRONT (R)** |
| ③ Center speaker | **CENTER** |
| ④ Surround speaker L | **SURROUND (L)** |
| ⑤ Surround speaker R | **SURROUND (R)** |
| ⑥ Surround back speaker L | **SURROUND BACK/BI-AMP (L)** |
| ⑦ Surround back speaker R | **SURROUND BACK/BI-AMP (R)** |
| ⑧ Subwoofer | **SUB WOOFER** |

## ■ 6.1-channel

| Speakers | Jacks on this unit |
|---|---|
| ① Front speaker L | **FRONT (L)** |
| ② Front speaker R | **FRONT (R)** |
| ③ Center speaker | **CENTER** |
| ④ Surround speaker L | **SURROUND (L)** |
| ⑤ Surround speaker R | **SURROUND (R)** |
| ⑥ Surround back speaker | **SURROUND BACK/BI-AMP (L)** |
| ⑧ Subwoofer | **SUB WOOFER** |

## ■ 5.1-channel

| Speakers | Jacks on this unit |
|---|---|
| ① Front speaker L | **FRONT (L)** |
| ② Front speaker R | **FRONT (R)** |
| ③ Center speaker | **CENTER** |
| ④ Surround speaker L | **SURROUND (L)** |
| ⑤ Surround speaker R | **SURROUND (R)** |
| ⑧ Subwoofer | **SUB WOOFER** |

## Connecting the speaker cable

**Caution**

- A speaker cable is a pair of insulated cables running side by side in general. One of the cables is colored differently or striped to indicate a polarity. Connect one end of the colored/striped cable to the "+" (red) terminal of this unit and the other end to that of your speaker, and connect one end of the other cable to the "–" (black) terminal of this unit and the other end to that of your speaker.
- Before connecting the speakers, be sure to disconnect the power cable.
- Do not let the bare speaker wires touch each other or any metal part of this unit. This could damage this unit and/or speakers. If the circuit shorts out, "CHECK SP WIRES!" appears on the front panel display when this unit is turned on.
- Use magnetically shielded speakers. If images on the monitor are still distorted even when you use the magnetically shielded speakers, place the speakers away from the monitor.
- Use speakers with an impedance of 6-ohm or larger. Set speaker impedance in "ADVANCED SETUP" before connecting the speakers (see page 45).

### ■ Connecting to the FRONT terminals

**1 Remove approximately 10 mm (0.4 in) of insulation from the end of each speaker cable and then twist bare wires of the cable together so that they will not cause a short circuits.**

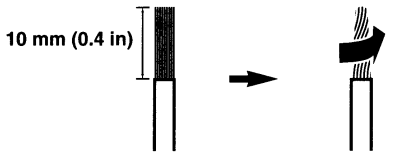


**2 Loosen the knob, insert the twisted bare wires into the hole, and then tighten the knob.**

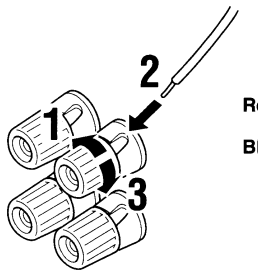


Red: positive (+)

Black: negative (–)

**Connecting the banana plug (Except U.K., Europe, Asia and Korea models)**

Tighten the knob, and then insert the banana plug into the end of the terminal.

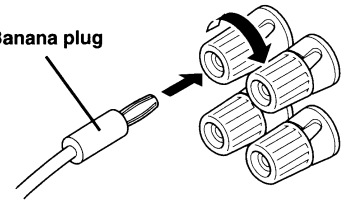


### ■ Connecting to the CENTER, SURROUND, SURROUND BACK/BI-AMP terminals

**1 Press down the tab and insert the bare end of the speaker cable into the hole in the terminal.**

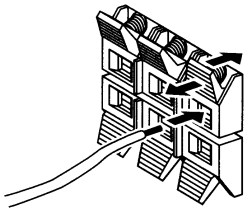

Red: positive (+)

Black: negative (–)

**2 Release the tab to secure the wire.**

### Using bi-amplification connections

You can connect speakers that support bi-amplification connections to this unit. Before connecting the speakers, set this unit to enable bi-amplification connections in "ADVANCED SETUP" (see page 45), and connect the speakers to this unit as shown below.

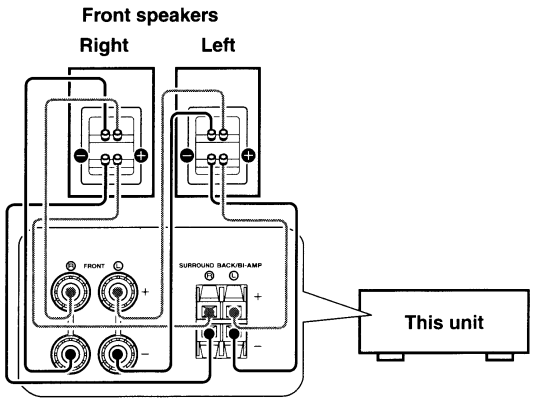


**Caution**

Before making bi-amplification connections, remove any or cables that connect a woofer with a tweeter. Refer to the instruction manuals of speakers for details. When not making bi-amplification connections, make sure that the brackets or cables are connected before connecting the speaker cables.

# Information on jacks and cable plugs

This unit has the following input and output jacks. Use jacks and cables appropriate for components that you are connecting.

## ■ Audio jacks

| Jack and cables | Description |
|---|---|
| **AUDIO jacks**<br> 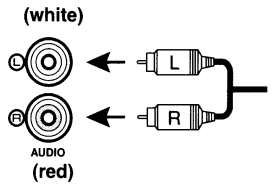 | To transmit conventional analog left and right audio signals. Use stereo pin cables. Connect red plugs to red jacks (R) and white plugs to white jacks (L). |
| **COAXIAL jacks**<br>  | To transmit coaxial digital audio signals. Use pin cables for digital audio signals. |
| **OPTICAL jacks**<br>  | To transmit optical digital audio signals. Use optical fiber cables for optical digital audio signals. |

## ■ Video jacks

| Jack and cables | Description |
|---|---|
| **VIDEO jacks**<br>  | To transmit conventional composite video signals. Use video pin cables. |
| **COMPONENT VIDEO jacks**<br> 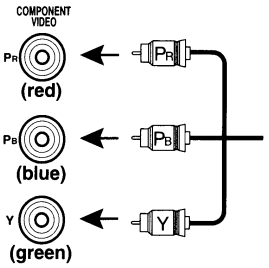 | To transmit component video signals that include luminance (Y), chrominance blue (PB) and chrominance red (PR) components. Use component video cables. |

## ■ Video/audio jacks

| Jack and cables | Description |
|---|---|
| **HDMI jacks**<br>  | To transmit digital video and digital audio signals. Use HDMI cables. |

- We recommend that you use a commercially available 19-pin HDMI cable no longer than 5 meters (16 feet) with the HDMI logo printed on it.
- You can check the potential problem about the HDMI connection (see page 23).
- You can check error information on HDMI connections (see page 23).

A video signal input to this unit is output from the output terminals in MONITOR OUT for the same kind of signal as the input signal.
For example, if a VCR with a composite output signal and a DVD player with a COMPONENT VIDEO output signal are connected, connect both VIDEO jack and COMPONENT VIDEO jack in MONITOR OUT to the video monitor.
If an HDMI input compatible monitor is connected, this unit automatically converts an analog signal that is input from a video input terminal to a digital video signal, and then output it from the HDMI OUT jack.

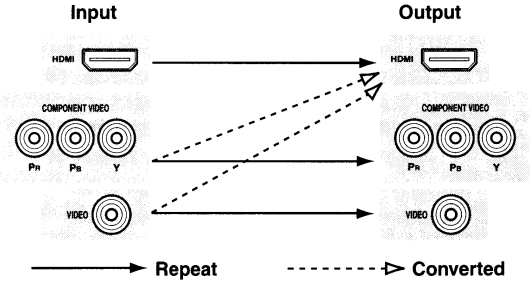


PREPARATION

English

# Connecting a TV monitor or projector

Connect a video monitor such as a TV or projector to an output terminal of this unit. You can select one of the following three types according to the input signal format supported by the video monitor.

**Note**

- When you connect this unit to the video monitor, make sure that this unit is on standby.

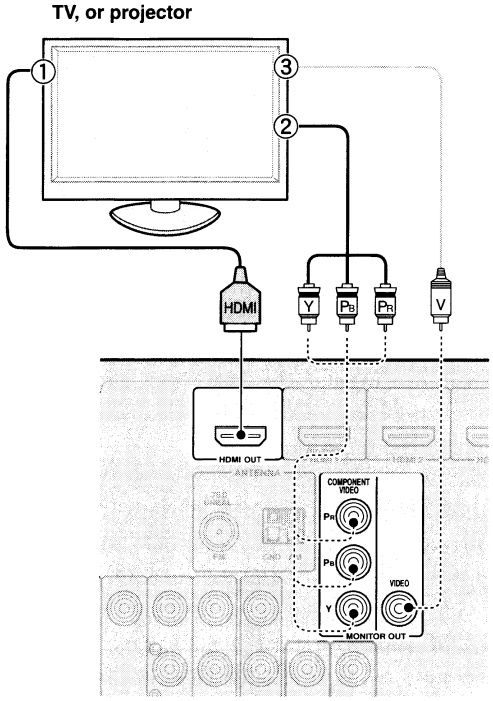


## ■ To connect an HDMI video monitor

| Jacks on components | Jacks on this unit |
|---|---|
| ① HDMI input | HDMI OUT |

## ■ To connect component video monitor

**Note**

- Only video signals input from this unit via the component input terminal are output from the component output terminal.

| Jacks on components | Jacks on this unit |
|---|---|
| ② Component video output | MONITOR OUT (COMPONENT VIDEO) |

## ■ To connect composite video monitor

**Note**

- Only video signals input from this unit via the composite video input terminal are output from the composite video output terminal.

| Jacks on components | Jacks on this unit |
|---|---|
| ③ Video input (composite) | MONITOR OUT (VIDEO) |

## Outputting sound of a TV from this unit

To output sound of a TV from this unit, make connection between the AV input 1-6 and an audio output terminal. If the TV supports an optical digital output, we recommend that you use the AV input 1. Connecting to the AV input 1 allows you to switch an input source to the AV input 1 with just a single key operation using the SCENE function (see page 21).

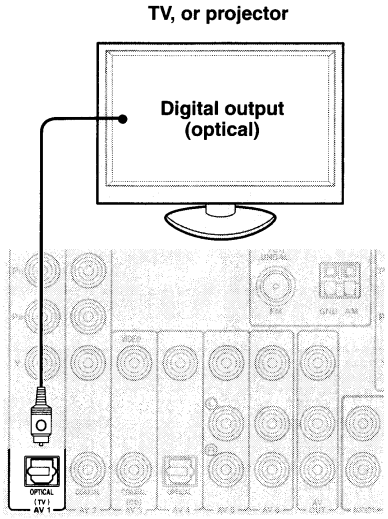

# Connecting other components

This unit has input and output terminals for respective input and output sources. You can reproduce sound and movies from input sources selected with the front panel display or remote control.

**Note**

- When you connect this unit to the external components, make sure that this unit is on standby.

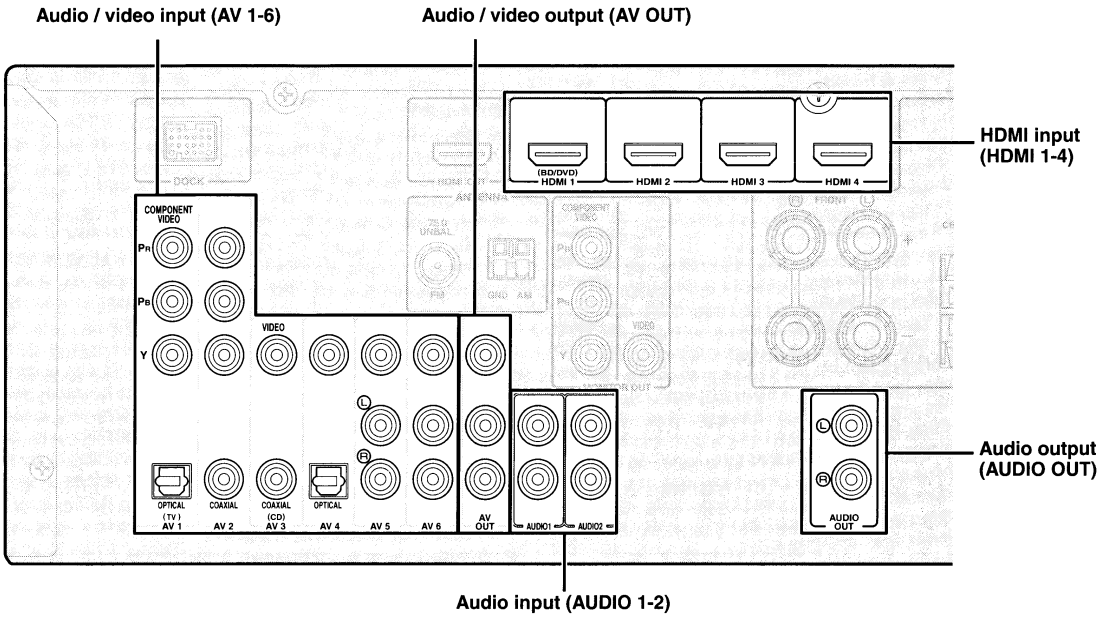


## ■ Audio and video player / Set-top box

| Output jacks on the connected external component | | | Input sources/jacks of this unit | |
|---|---|---|---|---|
| External components | Signals | Output jacks | | |
| External component with HDMI output | Audio/Video | HDMI output | HDMI 1 (BD/DVD) | HDMI 1 |
| | | | HDMI 2 | HDMI 2 |
| | | | HDMI 3 | HDMI 3 |
| | | | HDMI 4 | HDMI 4 |
| External component with component video output | Audio | Optical digital output | AV 1 (TV) | OPTICAL |
| | Video | Component video | | COMPONENT VIDEO |
| | Audio | Coaxial digital output | AV 2 | COAXIAL |
| | Video | Component video output | | COMPONENT VIDEO |
| External component with composite video output | Audio | Coaxial digital output | AV 3 (CD) | COAXIAL |
| | Video | Composite output | | VIDEO |
| | Audio | Optical digital output | AV 4 | OPTICAL |
| | Video | Composite output | | VIDEO |
| | Audio | Analog audio output | AV 5 | AUDIO |
| | Video | Composite output | | VIDEO |
| | Audio | Analog audio output | AV 6 | AUDIO |
| | Video | Composite output | | VIDEO |

- Input sources in parentheses are recommended to connect to the respective jacks. If your Yamaha component has the Remote in/out terminal, you can switch the input source to that component with a single key operation using the SCENE function (see page 21).
- You can change the name of the input source displayed on the front panel display or the OSD on the video monitor as necessary (see page 43).

## ■ Audio player

| Output jacks on the connected external component | | Input sources/jacks of this unit | |
|---|---|---|---|
| External components | Output jacks | | |
| External component with optical digital output | Optical digital output | AV 1 (TV) | OPTICAL |
| | | AV 4 | OPTICAL |
| External component with coaxial digital output | Coaxial digital output | AV 2 | COAXIAL |
| | | AV 3 (CD) | COAXIAL |
| External component with analog audio output | Analog audio output | AV 5 | AUDIO |
| | | AV 6 | AUDIO |
| | | AUDIO 1 | AUDIO |
| | | AUDIO 2 | AUDIO |

- We recommend connecting the coaxial digital output terminal of a CD player to the AV3 jack.

**About audio/video output terminals**

Among the analog audio and analog video signals input to this unit via input terminals, the audio/video signals of the selected input sources are output from the AV OUT jack and AUDIO OUT jack. An HDMI input signal, COMPONENT VIDEO input signal or digital audio input signal cannot be output.
When using the AV OUT jack: connect an external component to the composite or analog audio terminal.
When using the AUDIO OUT jack: connect an external component to the analog audio terminal.

## Connecting a Yamaha iPod universal dock or Bluetooth™ wireless audio receiver

This unit has the DOCK jack, to which you can connect a Yamaha iPod universal dock (YDS-11, sold separately) or a Bluetooth wireless audio receiver (YBA-10, sold separately). You can play an iPod or a Bluetooth component with this unit by connecting it to the DOCK jack.
Use a dedicated cable for connection between the dock/receiver and this unit.

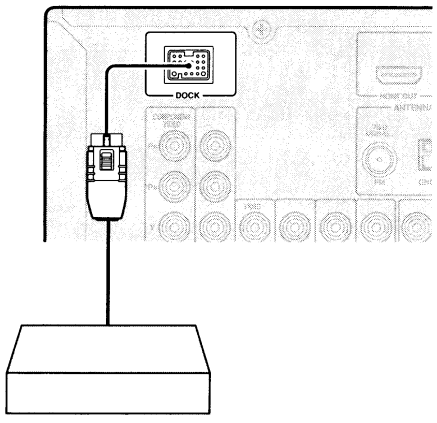


**Yamaha iPod universal dock/Bluetooth wireless audio receiver**

## Using the VIDEO AUX jacks on the front panel

Use the VIDEO AUX jacks on the front panel to connect a game console or a video camera to this unit. Be sure to turn down the volume of this unit and other components before making connections.

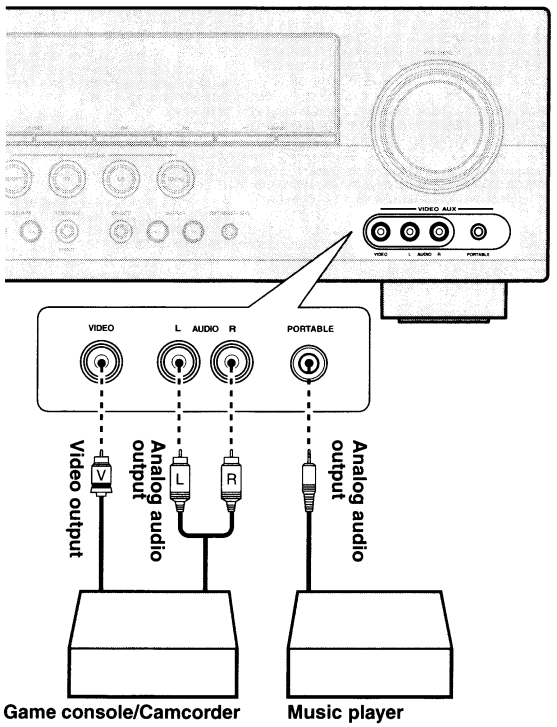


**Game console/Camcorder** **Music player**

**Note**

- When external components are connected both the PORTABLE jack and AUDIO jack, sound input from the PORTABLE jack is output.

## Connecting the FM and AM antennas

An indoor FM antenna and an AM loop antenna are supplied with this unit. Connect these antennas properly to the respective jacks.

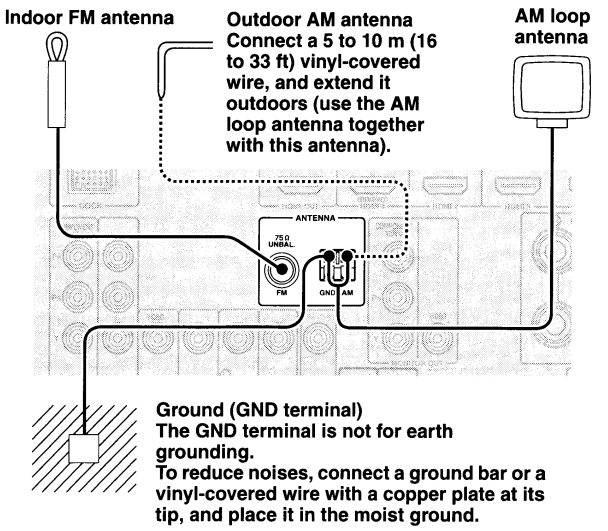
Indoor FM antenna
Outdoor AM antenna
Connect a 5 to 10 m (16 to 33 ft) vinyl-covered wire, and extend it outdoors (use the AM loop antenna together with this antenna).
AM loop antenna
ANTENNA
75Ω UNBAL.
FM
GND
AM
Ground (GND terminal)
The GND terminal is not for earth grounding.
To reduce noises, connect a ground bar or a vinyl-covered wire with a copper plate at its tip, and place it in the moist ground.

- The supplied antennas are normally sensitive enough to obtain good reception.
- Position the AM loop antenna away from this unit.
- If you cannot get good reception, we recommend that you use an outdoor antenna. For more details, consult the nearest authorized Yamaha dealer or service center.
- Always use the AM loop antenna even when the outdoor antenna is connected.

### Assembling the AM loop antenna

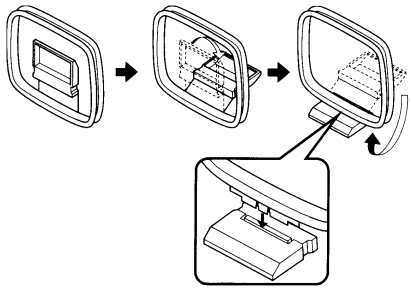

### Connecting the AM loop antenna

The wires of the AM loop antenna have no polarity. You can connect either wire to the AM terminal and the other to the GND terminal.

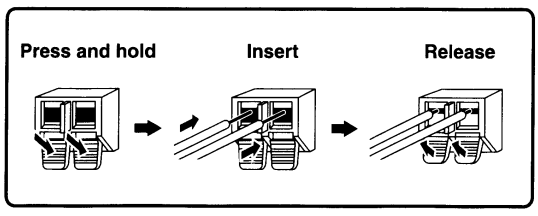


## Connecting the power cable

After all connections are complete, plug the AC power cable of this unit into an AC wall outlet.

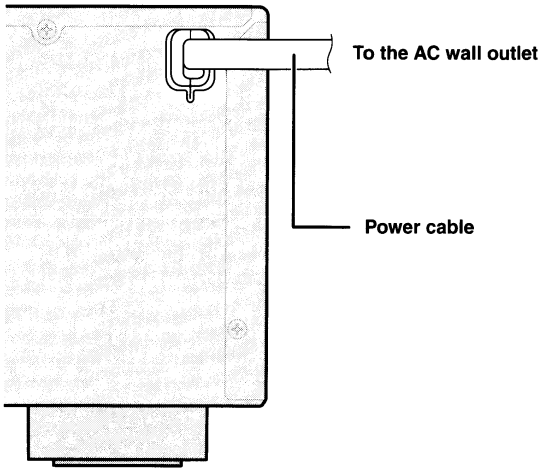


## Turning this unit on and off

**1 Press ⒶSTANDBY/ON on the front panel (or 6POWER on the remote control) to turn on this unit.**

**2 Press ⒶSTANDBY/ON (or 6POWER) again to turn off this unit (standby mode).**

- The unit needs a few seconds until ready to play back.
- You can also turn on this unit by pressing ⓘSCENE (or 11SCENE).
- This unit consumes a small amount of electricity even in the standby mode. We recommend disconnecting the power cable from the AC wall outlet.

**Caution**

Do not unplug this unit while it is turned on. Doing so may damage this unit or cause the settings of this unit to be saved incorrectly.

# Optimizing the speaker setting for your listening room (YPAO)

This unit has a Yamaha Parametric Acoustic Optimizer (YPAO). With the YPAO, this unit automatically adjusts the output characteristics of your speakers based on speaker position, speaker performance, and the acoustic characteristics of the room. We recommend that you first adjust the output characteristics with the YPAO when you use this unit.

**Caution**

- Be advised that it is normal for loud test tones to be output during the "Auto Setup" procedure. Do not allow small children to enter the room during the procedure.
- To achieve the best results, make sure the room is as quiet as possible while the "Auto Setup" procedure is in progress. If there is too much ambient noise, the results may not be satisfactory.

• See page 39 for the "Manual Setup" procedure.

## Using Auto Setup

### 1 Check the following points.

Before starting the automatic setup, check the following.

- All speakers and subwoofer are connected properly.
- Headphones are disconnected from this unit.
- The video monitor is connected properly.
- This unit and the video monitor are turned on.
- This unit is selected as the video input source of the video monitor.
- The connected subwoofer is turned on and the volume level is set to about half way (or slightly less).
- The crossover frequency controls of the connected subwoofer are set to the maximum.

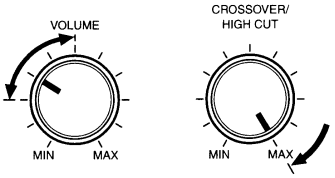


Subwoofer

### 2 Connect the supplied optimizer microphone to the OPTIMIZER MIC jack on the front panel.

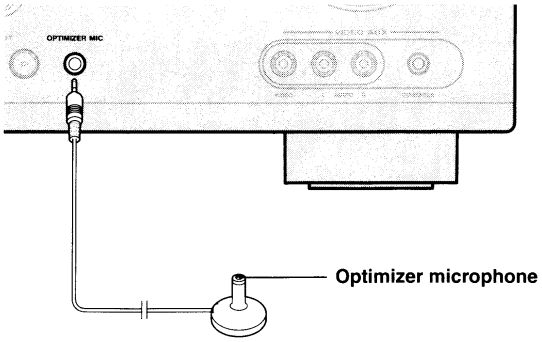


"MIC ON. View OSD MENU" appears on the front panel display.
The following menu screen appears on the video monitor.

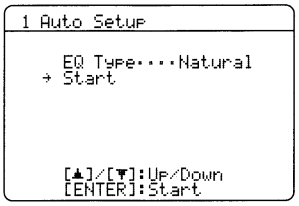


• You can bring up the above menu screen from the setup menu (see page 39).

### 3 Place the optimizer microphone at your normal listening position on a flat level surface with the omni-directional microphone heading upward.

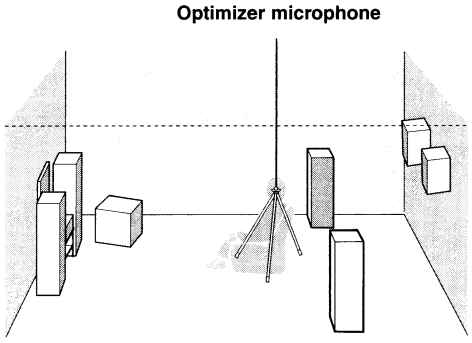


• It is recommended that you use a tripod or something similar to fix the optimizer microphone at the same height as your ears would be when seated in your listening position. You can fix the optimizer microphone to the tripod with the attaching screw of the tripod.

### 4 To select a sound character for adjustment, press [14]Cursor △ to select "EQ Type" and then press [14]Cursor ◁ / ▷.

If this unit does not work when you press [14]**Cursor**, press [12]**SETUP** once and then operate this unit.
This unit has a parametric equalizer that adjusts the output levels for each frequency range. The equalizer is adjusted to produce a cohesive sound field based on automatically measured speaker characteristics.
In "EQ Type," you can select the following parametric equalizer characteristics suitable for the desired sound characteristics.

Natural
This adjusts all speakers to achieve natural sound. Select this if sounds in the high frequency range seem too strong when "EQ Type" is set to "Flat."

Flat
This adjusts each speaker to obtain the same characteristics. Select this if your speakers have similar qualities.

Front
This adjusts each speaker to obtain the same characteristics as the front left and right speakers. Select this if your front left and right speakers have significantly better qualities than the other speakers.

## 5 Press [14]Cursor ▽ to select "Start" and then press [14]ENTER to start the setup procedure.

A countdown starts and a measurement starts in 10 seconds. A loud test tone is output during measurement.

### Notes

- During the automatic setup procedure, do not perform any operation on this unit.
- Press [14]**Cursor** △ to cancel the automatic setup procedure.

Measurement takes about 3 minutes. To obtain precise results, stay where you will not disturb the measurement, such as to the side of or behind the speakers or outside the room.

When measurement is successfully completed, "YPAO Complete" appears on the front panel display and the results appear on the monitor.

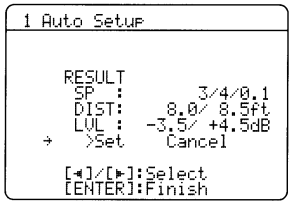


SP
Displays the number of speakers connected to this unit in the following order:
Total of Front and Center/Total of Surround and Surround Back/Subwoofer

DIST
Displays the speaker distance from the listening position in the following order:
Closest speaker distance/Farthest speaker distance

LVL
Displays the speaker output levels in the following order:
Lowest speaker output level/Highest speaker output level

### Notes

- If "ERROR" appears on the video monitor during "Auto Setup," measurement is canceled and the type of error is displayed. For details, see "When an error message is displayed during measurement" (page 20).
- If problems occur during measurement, "WARNING (XX)" (xx indicates the number of warning) appears above "RESULT" (see page 20).

## 6 Press [14]ENTER to confirm the settings.

The speaker characteristics are adjusted according to measurement results.
To cancel the operation, press [14]**Cursor** ◁ / ▷ to select "Cancel" and press [14]**ENTER**.
When the following screen appears, remove the optimizer microphone. "Auto Setup" is now complete.

The optimizer microphone is sensitive to heat. Store it in a cool place and away from direct sunlight after measurement. Do not leave it in a place where it will be subjected to high temperatures such on an AV component.

- If you do not want to apply the measurement results, select "Cancel."
- Perform "Auto Setup" again if you change the number or positions of speakers.
- If you press [14]**ENTER** before removing the optimizer microphone, "1 Auto Setup" of "Speaker Setup" in the setup menu (see page 39) is displayed.

## When an error message is displayed during measurement

**Select "Retry" or "Exit" using 14Cursor ◁ / ▷ and then press 14ENTER.**

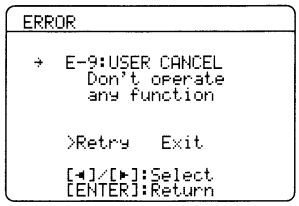


Retry

Performs "Auto Setup" again.

Exit

Terminates the measurement and "Auto Setup."

- See page 51 for details on error messages.
- When "E-5:NOISY" appears, you can continue measurement. To continue measurement, select "Proceed." However, we recommend that you solve the problem first and then perform measurement again.

## When a warning message is displayed after measurement

If a problem occurs during measurement, "WARNING" is displayed on the result display screen. Check the error and solve the problems.

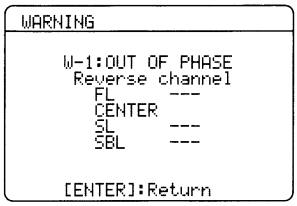


- See page 52 for details on warning messages.
- Optimization will not be performed while a warning message is displayed. We recommend that you solve the problem and perform "Auto Setup" again.

**1 Check if "→" is displayed on the left of "WARNING" and press 14ENTER.**

Details of the warning message are displayed. If there are multiple warning messages, you can display the next message using 14Cursor ▷.

**2 To return to the top result display, press 14ENTER again.**

# Playback

## Basic procedure

**1 Turn on external components (TV, DVD player, etc.) connected to this unit.**

**2 Press ⓃINPUT ◁ / ▷ (or 7Input selection keys) to select an input source.**

The name of the selected input source is displayed for a few seconds.

Input source name

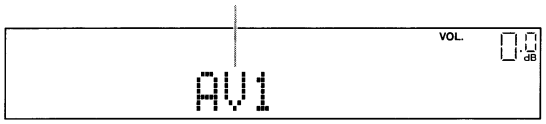


- You can change the input source name displayed on the front panel display or the OSD on the video monitor as necessary (see page 43).

**3 Play the external component that you have selected as the source input, or select a radio station on the tuner.**

Refer to the operating instructions of the external component for details on playback. For selecting radio stations or playback of an iPod or Bluetooth component using this unit, see the following.

- FM/AM radio tuning (see page 28)
- Bluetooth component playback (see page 32)
- iPod playback (see page 30)

**4 Turn the ⓅVOLUME control to adjust the volume (or press 15VOLUME +/–).**

Volume




**Note**

When you play back a DTS-CD, noise may be output in some conditions, which may cause a speaker malfunction. Make sure that the volume is set to low before starting playback. If noise is output, do the following.

1) When only noise is output
If a DTS bitstream signal is not properly input to this unit, only noise is output. Connect the playback component to this unit by digital connection and play back the DTS-CD. If the condition is not improved, the problem may results from the playback component. Consult the manufacturer of the playback component.

2) When noise is output during playback or skip operation
Before playing back the DTS-CD, display the option menu after selecting the input source and set "Decoder Mode" to "DTS" (see page 33).

## Using the SCENE function

This unit has a SCENE function that allows you to change input sources and sound field programs with one key. Four scenes are available for different usages, such as playing movies or music. The following input sources and sound field programs are provided as the initial factory settings.

| | Input source | Sound field program |
|---|---|---|
| **BD/DVD** | HDMI 1 | Straight |
| **TV** | AV 1 | Straight |
| **CD** | AV 3 | Straight |
| **RADIO** | TUNER | 7ch Enhancer |

- When this unit is on standby, you can turn on this unit by pressing the SCENE key.

### Selecting a SCENE

**Press ⓘSCENE (or 11SCENE).**

### Registering input source/sound field program

**Select the desired input source/sound field program, and pressing down ⓘSCENE (or 11SCENE) until "SET Complete" appears on the front panel display.**

While display in the OPTION menu or SETUP menu, "SCENE Setting Complete" appears on the video monitor (OSD).

### Switching remotely controlled external components linked to scene selections

You can operate an external component with the remote control of this unit by setting a remote control code for the external component for each input source. Setting remote control codes for desired input sources allows you to switch between external components linked to scene selections.

**1 Register the remote control code of an external component to the desired input source (see page 44).**

***Note***

- Remote control codes cannot be registered to TUNER input.

**2 Press [7]Input selection keys on the remote control for the input source whose remote control code was registered in step 1 for about 3 seconds while pressing down [11]SCENE key whose assignment you want to change.**

The external component can now be controlled remotely just by selecting a scene.

## Muting audio output temporarily (MUTE)

**1 Press [17]MUTE on the remote control to mute the audio output.**

The MUTE indicator on the front panel display flashes while audio output is muted.

**2 Press [17]MUTE again to resume audio output.**

## Adjusting high/low frequency sound (tone control)

You can adjust the balance of the high frequency range (Treble) and low frequency range (Bass) of sounds output from the front left and right speakers to obtain desired tone.

**1 Press ⓙTONE CONTROL on the front panel repeatedly to select "Treble" or "Bass."**

The current setting is displayed on the front panel display.




**2 Adjust the frequency range using ⓚPROGRAM ◁ / ▷.**

Control range: –10.0 dB to +10.0 dB

The display returns the previous screen soon after you release the key.

### Notes

- The tone control settings are not effective during playback in direct mode.
- If you set the balance extremely off, sounds may not match those from other channels well.

## Enjoying pure hi-fi sound

Use Direct mode to enjoy the pure high fidelity sound of the selected source. When Direct mode is activated, this unit plays back the selected source with the least circuitry.

**Press ⓂDIRECT (or [10]DIRECT) to turn the Direct mode on or off.**

The following features are disabled in Direct mode.

- sound field program, tone control
- display and operation of the option menu and setup menu

- While direct mode is on, the front panel display screen becomes dim. When setting it back off, the brightness of the screen returns to the previous setting.

## Using the sleep timer

The sleep timer is useful if you want to go to sleep while this unit is playing or recording a source.

**Press [5]SLEEP repeatedly to set the amount of time.**

Each time you press [5]SLEEP, the front panel display changes as shown below.




When the sleep timer is set, the SLEEP indicator on the front panel display lights up.

Press [5]SLEEP on the remote control repeatedly until "Sleep Off" appears on the front panel display.

## Using your headphones

**Plug your headphones in the ⓑPHONES jack on the front panel.**

When you select a sound field program while using the headphones, the mode is automatically set to SILENT CINEMA mode.

### Notes

- When you connect headphones, no signals are output at the speaker terminals.
- When multi-channel signals are processed, sounds in all channels are divided to left and right channels.

## Displaying input signal information

When HDMI1-4 or AV1-4 is selected as the input source, you can display audio/video signal information.

- Input signal information is displayed on both a video monitor and the front panel display.
- Information on the input signal is also displayed on the front panel display. You can select the desired item using [14]**Cursor** Δ / ∇.

**1 Select the desired input source, and press [13]OPTION.**

The option menu for the selected input source is displayed (see page 33).

**2 Press [14]Cursor Δ / ∇ to select "Signal Info," and press [14]ENTER.**

Information on input signals is displayed. See page 34 on messages displayed on the screen.

***Notes***

- If an HDMI related error occurs, error information is displayed at the bottom of the screen.
- Information on the input signal is also displayed on the front panel display. You can select the desired item using [14]**Cursor** Δ / ∇.

**3 To end the information display, press [13]OPTION.**

## Changing information on the front panel display

Information displayed on the front panel display can be changed by pressing ©**INFO** (or [9]**INFO**).
The following information can be displayed according to the input source.
For example, if you select HDMI1 input and display "DSP Program," the following screen appears on the front panel display.

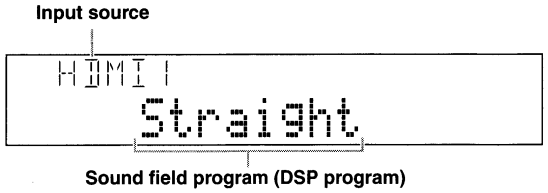


| | |
|---|---|
| HDMI1-4: | Input, DSP Program, Audio Decoder |
| AV1-6: | Input, DSP Program, Audio Decoder |
| AUDIO1-2: | Input, DSP Program, Audio Decoder |
| V-AUX: | Input, DSP Program, Audio Decoder |
| FM/AM: | Frequency, DSP Program, Audio Decoder |
| iPod (Simple remote mode): | Input, DSP Program, Audio Decoder |
| iPod (Menu browse mode): | (in PlayInfo displayed) Artist, Album, Song, DSP Program, Audio Decoder<br>(in Play menu displayed) List |
| Bluetooth: | Input, DSP Program, Audio Decoder |

# Enjoy the sound field programs

This unit is also equipped with a Yamaha digital sound field processing (DSP) chip. You can enjoy multi-channel sounds for almost all input sources using various sound field programs stored on the chip and a variety of surround decoders.

## Selecting sound field programs

### ■ Selecting a sound field program on the front panel

Press Ⓚ**PROGRAM** ◁ / ▷ repeatedly to select a desired sound field program.

### ■ Selecting a sound field program with the remote control

Perform the following operations depending on the category of the sound field programs.

Sound field programs for movies/TV programs ..... Press [10]**MOVIE** repeatedly.
Sound field programs for music ..... Press [10]**MUSIC** repeatedly.
Stereo reproduction ..... Press [10]**STEREO** repeatedly.
Multi-channel stereo reproduction ..... Press [10]**STEREO** repeatedly.
Compressed music enhancer ..... Press [10]**STEREO** repeatedly.
Surround decoder ..... Press [10]**SUR.DECODE** repeatedly.

For example, if you select "Sci-Fi" in "movie/TV program," the following screen appears on the front panel display.

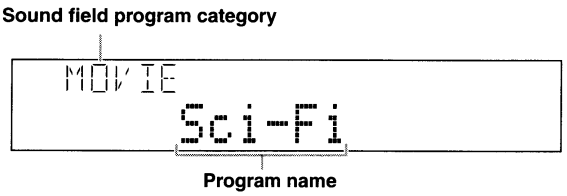


**Notes**

- Sound field programs are stored for each input source. When you change the input source, the sound field program previously selected for that input source is applied again.
- When you play back the Dolby Digital Plus, Dolby TrueHD, DTS Express, DTS-HD Master Audio, or DTS-HD High Resolution Audio sources, this unit does not apply any sound field program other than the surround decoder and they are played back in straight decode mode.
- If the sampling frequency of an input source is higher than 96 kHz, this unit does not apply any sound field programs.

## Sound field program descriptions

This unit provides sound field programs for multiple categories including music, movies and stereo reproduction. Select a sound field program based on your listening preference, not merely on the name of the program, etc.

- You can check what speakers are currently outputting signals with the speaker indicators on the front panel display (see page 6).
- Each program can adjust sound field elements (sound field parameters). For details, see page 36.
- CINEMA DSP in the table indicates the sound field program with CINEMA DSP.

### For movie/TV program sources CINEMA DSP

| Program | Descriptions |
|---|---|
| **Standard** | This program creates a sound field emphasizing the surrounding feeling without disturbing the original acoustic positioning of multi-channel audio such as Dolby Digital and DTS. It has been designed with the concept of "an ideal movie theater," in which the audience is surrounded by beautiful reverberations from the left, right and rear. |
| **Spectacle** | This program represents the spectacular feeling of large-scale movie productions.<br>It reproduces a broad theater sound field matching the cinemascope and wider-screen movies with an excellent dynamic range from very small to extremely large sound. |
| **Sci-Fi** | This program clearly reproduces the finely elaborated sound design of the latest science fiction and special effects-featuring movies.<br>You can enjoy a variety of cinematographically created virtual spaces reproduced with clear separation between dialog, sound effects and background music. |
| **Adventure** | This program is ideal for precisely reproducing the sound design of action and adventure movies.<br>The sound field restrains reverberations but puts emphasis on reproducing a powerful space expanded widely to the left and right. The reproduced depth is also restrained relatively to ensure the separation between audio channels and the clarity of the sound. |

| Program | Descriptions |
|---|---|
| **Drama** | This sound field features stable reverberations that match a wide range of movie genres from serious dramas to musicals and comedies. The reverberations are modest but offer an optimum 3D feeling, reproducing effects tones and background music softly but cubically around clear words and center positioning in a way that does not fatigue the listener even after long hours of viewing. |
| **Mono Movie** | This program is provided for reproducing monaural video sources such as a classic movie in an atmosphere of a good old movie theater.<br>The program produces the optimum expansion and reverberation to the original audio to create a comfortable space with a certain sound depth. |
| **Sports** | This program allows the listeners to enjoy stereo sport broadcasts and studio variety programs with enriched live feeling. In sports broadcasts, the voices of the commentator and sportscaster are positioned clearly at the center while the atmosphere of the stadium expands in an optimum space to offer the listeners with a feeling of presence in the stadium. |
| **Action Game** | This sound field has been suitable for action games such as car racing and FPS games. It uses the reflection data that limits the effects range per channel in order to offer a powerful playing environment with a being-there feeling by enhancing various effects tones while maintaining a clear sense of directions. |
| **Roleplaying Game** | This sound field has been suitable for role-playing and adventure games. It combines the sound field effects for movies and the sound field designs for "Action Game" to represent the depth and 3D feeling of the field during play, while offering movie-like surround effects in the movie scenes in the game. |

## For audio music sources CINEMA DSP

| Program | Descriptions |
|---|---|
| **Hall in Munich** | This sound field simulates a concert hall with approximately 2500 seats in Munich, using stylish wood for the interior finishing as normal standards for European concert halls. Fine, beautiful reverberations spread richly, creating a calming atmosphere. The listener's virtual seat is at the center left of the arena. |
| **Hall in Vienna** | This is an approximately 1700-seated, middle-sized concert hall with a shoebox shape that is traditional in Vienna. Pillars and ornate carvings create extremely complex reflections from all around the audience, producing a very full, rich sound. |
| **Chamber** | This program creates a relatively wide space with a high ceiling like an audience hall in a palace. It offers pleasant reverberations that are suitable for courtly music and chamber music. |
| **Cellar Club** | This program simulates a live house with a low ceiling and homey atmosphere. A realistic, live sound field features powerful sound as if the listener is in a row in front of a small stage. |
| **The Roxy Theatre** | This is the sound field of a rock music live house in Los Angeles, with approximately 460 seats. The listener's virtual seat is at the center left of the hall. |
| **The Bottom Line** | This is the sound field at stage front in The Bottom Line, that was a famous New York jazz club once. The floor can seat 300 people to the left and right in a sound field offering real and vibrant sound. |
| **Music Video** | This sound field offers an image of a concert hall for live performance of pop, rock and jazz music. The listener can indulge oneself in a hot live space thanks to the presence sound field that emphasizes the vividness of vocals and solo play and the beat of rhythm instruments, and to the surround sound field that reproduces the space of a big live hall. |

## For stereo reproduction

| Program | Descriptions |
|---|---|
| **2ch Stereo** | Use this program to mix down multi-channel sources to 2 channels. |

- When multi-channel signals (Dolby Digital and DTS) are input, they are downmixed to 2 channels and output from the front left and right speakers.

## For Multi-channel stereo reproduction CINEMA DSP

| Program | Descriptions |
|---|---|
| **7ch Stereo** | Use this program to output sound from all speakers. When you play back multi-channel sources, this unit downmixes the source to 2 channels, and then outputs the sound from all speakers. This program creates a larger sound field and is ideal for background music at parties, etc. |

## The Compressed Music Enhancer

| Program | Descriptions |
|---|---|
| **Straight Enhancer** | Use this program to enhance the sound nearest to the original depth and width of the 2-channel or multi-channel compression artifacts. |
| **7ch Enhancer** | Use this program to play back compression artifacts in 7-channel stereo. |

## Surround decode mode

Select this program to playback sources with selected decoders. You can playback 2-channel sources on multi-channels.

| Decoder | Descriptions |
|---|---|
| **Pro Logic** | Dolby Pro Logic decoder suitable for all kinds of sources. |
| **PLIIx Movie / PLII Movie** | Dolby Pro Logic IIx (or Dolby Pro Logic II) decoder suitable for movies. If your listening environment is as follows, you cannot select the Dolby Pro Logic IIx decoder.<br>• When the surround back speakers are not connected<br>• When headphones are connected |
| **PLIIx Music / PLII Music** | Dolby Pro Logic IIx (or Dolby Pro Logic II) decoder suitable for music. If your listening environment is as follows, you cannot select the Dolby Pro Logic IIx decoder.<br>• When the surround back speakers are not connected<br>• When headphones are connected |
| **PLIIx Game / PLII Game** | Dolby Pro Logic IIx (or Dolby Pro Logic II) decoder suitable for games. If your listening environment is as follows, you cannot select the Dolby Pro Logic IIx decoder.<br>• When the surround back speakers are not connected<br>• When headphones are connected |
| **Neo:6 Cinema** | DTS decoder suitable for movies. |
| **Neo:6 Music** | DTS decoder suitable for music. |

• An input source is played back in straight decode mode (see page 27) when multi-channel audio signal is input.

## Enjoying unprocessed input sources (Straight decoding mode)

In straight decoding mode, sounds are reproduced without sound field effect. 2-channel stereo sources are output from only the front left and right speakers. Multi-channel input sources are decoded straight into the appropriate channels and multi-channel sounds are reproduced without a sound field effect.

**1 To enable straight decoding mode, press ⓁSTRAIGHT (or 10STRAIGHT).**

"Straight" appears on the front panel display.

**2 To cancel straight decoding mode, press ⓁSTRAIGHT (or 10STRAIGHT) again.**

A sound field program name appears on the front panel display, and sound is reproduced with that sound field effect.

## Enjoying sound field programs without surround speakers (Virtual CINEMA DSP)

Virtual CINEMA DSP allows you to enjoy DSP sound field surround effects even without any surround speakers by using virtual surround speakers. You can even enjoy Virtual CINEMA DSP using a minimal two-speaker system that does not include a center speaker.
When "Sur. L/R SP" in the setup menu is set to "None" (see page 40), this unit operates in Virtual CINEMA DSP mode.

### Note

- Virtual CINEMA DSP mode is not available in the following conditions even if you set "Sur. L/R SP" to "None" (see page 40).
  - headphone plug is connected to the PHONES jack.
  - 7ch Stereo of the field sound program is selected.
  - direct mode or straight decoding mode is used.

## Enjoy sound field programs with headphones (SILENT CINEMA™)

SILENT CINEMA allows you to enjoy multi-channel sources with your headphones. SILENT CINEMA mode is automatically selected when you connect the headphone plug to the PHONES jack.

### Note

- SILENT CINEMA mode is not available in the following conditions.
  - 2ch Stereo of the sound field program is selected.
  - direct mode or straight decoding mode is selected.

# FM/AM tuning

The FM/AM tuner of this unit provides the following two modes for tuning.

■ **Frequency tuning mode (Auto tuning / Manual tuning)**

You can tune in to a desired FM/AM station by searching or specifying its frequency.

■ **Preset tuning mode (Preset tuning)**

You can preset the frequencies of FM/AM stations by registering them to specific numbers, and later just select those numbers to tune in.

***Note***

- Adjust the FM/AM antennas connected to this unit for the best reception.

## Tuning in to the desired FM/AM station (Frequency tuning)

**1 Press ⓃINPUT ◁ / ▷ (or 7TUNER) repeatedly and switch the input source to "TUNER."**

**2 Press ⒻFM (8FM) or ⒼAM (8AM) to select a band.**

"FM" or "AM" appears on the front panel display according to the band that you have selected.

**3 Press ⒽTUNING ◁ / ▷ (or 8TUNING △ / ▽) to specify the frequency.**

To adjust the frequency to a higher range, press ▷ (or △). To adjust it to the lower range, press ◁ (or ▽). The TUNED indicator on the front panel display lights up when the tuner is tuned in to a station. The STEREO indicator also lights up if the program being broadcasted is in stereo.




The frequency changes in the following manner according to how you press ⒽTUNING ◁ / ▷ (or 8TUNING △ / ▽).

### When you press the key more than 1 second

The tuner searches the frequency of a station that is detectable around the current frequency. This is effective when the tuner can receive strong signals without any interference. Once the search starts, release the key. When you keep holding the key, the search continues even when a station is detected. This is useful when you want to tune in to a specific station.

### When you press and release the key

The tuner increases or decreases the frequency in steps. Use this method when the tuner cannot receive strong signals and stations are skipped during the search. You can listen to better quality sound even when the tuner cannot receive a strong signal.

- You can switch between stereo and monaural for FM broadcast in the option menu (see page 34).

**4 To tune in by direct frequency tuning, enter the frequency of the desired station using the numeric keys on the remote control.**

Enter only integers. For example, if you want to set the frequency to 88.9 MHz, enter "889" using 19**Numeric keys**.

***Note***

- "Wrong Station!" appears on the front panel display when you enter a frequency that is out of receivable range. Make sure that the entered frequency is correct.

## Registering FM/AM stations and tuning in (Preset tuning)

You can register up to 40 FM/AM stations (Preset) using "Automatic station preset" or "Manual station preset."

### Registering stations by automatic station preset

The tuner automatically detects FM stations with strong signals and registers up to 40 stations. AM stations cannot be automatically registered. Use manual station preset.

**1 Press ⓃINPUT ◁ / ▷ repeatedly (or press 7TUNER) to switch the input source to "TUNER."**

**2 Press 13OPTION on the remote control.**

The option menu screen for setting options of tuner input appears on the front panel display.

- For details on the option menu, see page 33.
- The option menu is displayed on monitor components.

**3 Select "Auto Preset," and press 14ENTER.**




Automatic station preset starts about 5 seconds later from the lowest frequency upwards.

- You can select the preset number at which the preset starts by pressing 8**PRESET** △ / ▽ or 14**Cursor** △ / ▽ while the front panel display is in the state as shown in the below figure.
- To cancel registration, press 14**RETURN** on the remote control.

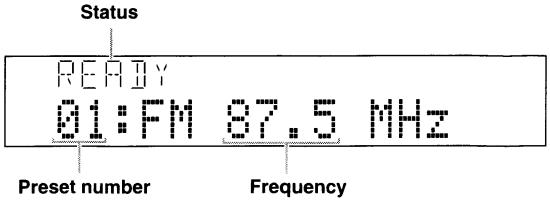

During the automatic station preset, the upper area of the screen changes as follows: READY → SEARCH → MEMORY each time a station is registered. When registration is complete, "FINISH" appears and the option menu screen automatically reappears. When you press [13]**OPTION** on the remote control, the screen returns to the original state.

## Registering stations by manual station preset

You can manually register AM stations or FM stations with weak signals.

**1 Tune in to a station referring to "Tuning in to the desired FM/AM station (Frequency tuning)" (see page 28).**

**2 Press ⒹMEMORY (or [8]MEMORY).**

"Manual Preset" appears on the front panel display, followed soon by the preset number to which the station will be registered.

- By pressing down ⒹMEMORY (or [8]MEMORY) for more than 2 seconds, you can skip step 3 and register the preset number to be one higher than the last preset number.

**3 Press ⒺPRESET ◁ / ▷ (or [8]PRESET △ / ▽) on the remote control to select the preset number to which the station will be registered.**

When you select a preset number to which no station is registered, "Empty" appears on the display. When you select a registered preset number, a registered frequency is displayed on the right of the preset number.

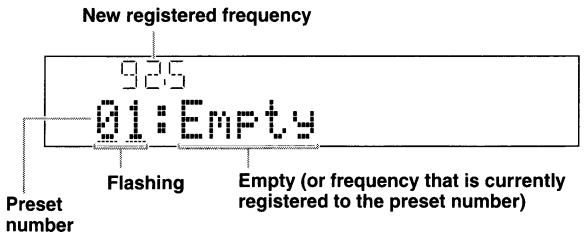


- You can select a preset number using the [19]**Numeric keys**.

**4 Press ⒹMEMORY (or [8]MEMORY) again to register.**

When registration is complete, the screen returns to the original state.

To end the operation, press [13]**OPTION**.

- To cancel registration, press [14]**RETURN** on the remote control or leave the tuner without any operations for about 30 seconds.

## Calling a preset station (Preset tuning)

You can call preset stations registered by automatic station preset or manual station preset.

**Press ⒺPRESET ◁ / ▷ (or [8]PRESET △ / ▽) to select a preset number.**

- Preset numbers to which no stations are registered will be skipped.
- When "No Presets" or "No Presets in Memory" is displayed it means that no stations are registered. See page 28 and register stations.
- You can directly select a preset number by pressing a [19]**Numeric keys** while calling a preset station. "Empty" appears on the display if you enter a preset number to which no station is registered. "Wrong Num." appears if you enter an invalid number.

## Clearing the preset station

**1 Press ⓃINPUT ◁ / ▷ repeatedly (or press [7]TUNER) to switch the input source to "TUNER."**

**2 Press [13]OPTION on the remote control.**

The option menu screen for setting options of tuner input appears on the front panel display.

**3 Display "Clear Preset" using the [14]Cursor △ / ▽ and press [14]ENTER.**

The following screen appears on the display.




Preset number of the registered station you want to clear.

- You can cancel the operation and return to the option menu screen by pressing [14]**RETURN** on the remote control.

**4 Select the preset number of the registered station you want to clear using the [14]Cursor △ / ▽ and press [14]ENTER.**

The preset station registered to the selected preset number is cleared. To clear the registration of multiple preset numbers, repeat the above steps.

To end the operation, press [13]**OPTION**.

# Using iPod™

Once you have stationed your iPod in a Yamaha iPod universal dock (such as the YDS-11, sold separately) connected to the DOCK terminal on the rear panel of this unit (see page 16), you can enjoy playback of your iPod using the supplied remote control or the menu displayed on the video monitor. You can also use the Compressed Music Enhancer mode of this unit to improve the sound quality of the compression artifacts (such as MP3 format) stored on your iPod (see page 24).

### Notes

- iPod touch, iPod (Click and Wheel including iPod classic), iPod nano, and iPod mini are supported.
- Some features may not be compatible depending on the model or the software version of your iPod.
- Some features may not be available depending on the model of Yamaha iPod universal dock. The following sections describe the procedure when using the YDS-11.

- Once the connection between your iPod and this unit is complete, "iPod connected" appears on the front panel display.
- For a complete list of status messages that appear on the front panel display and on the video monitor, see the "iPod" section on page 50.

## Controlling iPod™

You can control your iPod when you set it in the iPod universal dock and switch the input source to DOCK. The operations of your iPod can be done with the aid of the video display (menu browse mode) or without it (simple remote mode).
When you connect your iPod to this unit, you can perform the following operations with the remote control.

| | Key | Function |
|---|---|---|
| | **ENTER** | Subsequent menu |
| | △ | Menu up |
| 14 | ▽ | Menu down |
| | ◁ | Previous menu |
| | ▷ | Subsequent menu |
| | ◁◁ | Search backward (Press and hold) |
| | ▷▷ | Search forward (Press and hold) |
| | ▷▷\| | Skip forward |
| | \|◁◁ | Skip backward |
| 18 | □ | Stop |
| | ▯▯ | Pause (Menu browse mode)<br>Play/Pause (Simple remote mode) |
| | ▷ | Play (Menu browse mode)<br>Play/Pause (Simple remote mode) |
| 16 | **DISPLAY** | Switch between Menu browse mode and Simple remote mode |

### Controlling iPod in simple remote mode

You can perform basic iPod operations (play, stop, skip, etc.) using the supplied remote control without displaying the menu on the video monitor. You can also directly control your iPod in this mode.

### Controlling iPod in menu browse mode

You can perform advanced iPod operations using the remote control while looking at the menu displayed on the video monitor. You can browse the song files or video files stored on your iPod and displayed on the monitor, and change the settings of your iPod to suit your personal preferences. You cannot directly control your iPod in this mode.

- "_"(underscore) is displayed for characters that this unit cannot display.

**1 Change the input source to "iPod (DOCK)" using ⓃINPUT ◁ / ▷ (or 7DOCK).**

**2 Press 16DISPLAY on the remote control.**
The following screen appears on the video monitor.

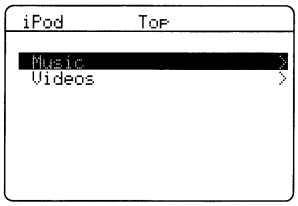


**3 Press 14Cursor △ / ▽ to select "Music," "Videos" or "Settings" and press 14Cursor ▷.**

- Select "Music" to browse music files.
- Select "Videos" to browse video files.

### Note

- "Videos" will not be displayed when your iPod or Yamaha iPod universal dock do not support the browser function for browsing video files.

**4 Press [14]Cursor △ / ▽ / ◁ / ▷ to select a menu item and then [14]ENTER to start playback.**

**Menu items of "Music"**

Playlists, Artists, Albums, Songs, Genres, Composers

- Playlists > Songs
- Artists > Albums > Songs
- Albums > Songs
- Songs
- Genres > Artists > Albums > Songs
- Composers > Albums > Songs

**Menu items of "Videos"**

Menu items vary depending on the files stored on your iPod.

## ■ Description of the play information display

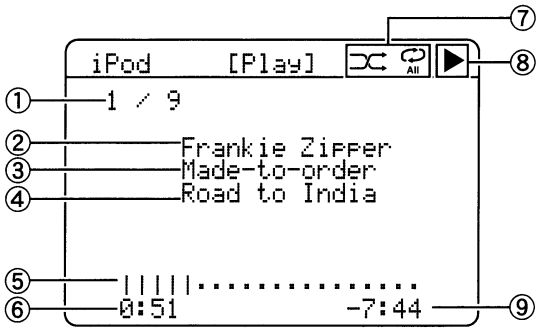


① Track number/total tracks
② Artist name
③ Album title
④ Song title
⑤ Progress bar
⑥ Elapsed time
⑦ Shuffle and repeat icons
⑧ ▶ (playback), ❚❚ (pausing), ▶▶ (search forward) and ◀◀ (search backward)
⑨ Remaining time

- You can change information screens on the front panel display using ©**INFO** (or [9]**INFO**) (see page 23). Items displayed on the front panel display vary depending on mode that is currently selected.

## Shuffle/repeat playback

You can use a special playback function such as shuffle playback and repeat playback by setting the option menu.

**1 Press [16]DISPLAY to switch to menu browse mode while "DOCK" is selected as the input source.**

The option menu can be displayed only in menu browse mode. Press [16]**DISPLAY** to switch to menu browse mode before starting shuffle or repeat playback.

**2 Press [13]OPTION.**

The option menu is displayed.

**3 Press [14]Cursor △ / ▽ to select the desired playback function, Shuffle or Repeat, then press [14]ENTER.**

The following playback styles are available depending on the playback function selected.

Shuffle: Plays back songs or albums in random order (Choices: Off, Songs, Albums).

- Select "Off" if you do not want to play back in random order.
- Select "Songs" to play back songs in random order.
- Select "Albums" to play back albums in random order.

Repeat: Plays back songs or albums repeatedly (Choices: Off, One, All).

- Select "Off" if you do not want to play back repeatedly.
- Select "One" to repeat each song.
- Select "All" to repeat all songs.

**4 Select the desired style using [14]Cursor ◁ / ▷.**

The style is selected. Playback starts with the function selected in step 3.
To return to the previous screen, press [14]**RETURN**.
To return to the previous playback function, redo the above steps.

- When the shuffle function is on, "⇄" appears on the video monitor.
- When "Repeat" is set to "One" or "All," "↻1" or "↻All" appears on the video monitor.

BASIC OPERATION

English

# Using Bluetooth™ components

You can connect a Yamaha Bluetooth wireless audio receiver (such as YBA-10, sold separately) to the DOCK terminal of this unit and enjoy the music contents stored in your Bluetooth component (such as a portable music player) without wiring between this unit and the Bluetooth component. You need to perform "Pairing" the connected Bluetooth wireless audio receiver and your Bluetooth component in advance.

***Note***

- This unit supports A2DP (Advanced Audio Distribution Profile) of the Bluetooth profile.

## Pairing the Bluetooth™ wireless audio receiver and your Bluetooth component

"Pairing" refers to the operation of registering a Bluetooth component for Bluetooth communications. Pairing must be performed when using a Bluetooth component with the Bluetooth wireless audio receiver connected to this unit for the first time or if the pairing data has been deleted.

- You only need the pairing operation for the first time that you use the Bluetooth component with the Bluetooth wireless audio receiver.
- Pairing requires operations on this unit and on the other component with which Bluetooth communications are to be established. If necessary, refer to the other component's operating instructions.

### ■ Pairing the Bluetooth™ wireless audio receiver and your Bluetooth™ component

To ensure security, a time limit of 8 minutes is set for the pairing operation. You are recommended to read and fully understand all the instructions before starting.

**1 Change the input source to "DOCK" using ⓃINPUT ◁ / ▷ (or 7DOCK).**

**2 Turn on the Bluetooth component you want to pair with and set it to pairing mode.**

For details on operation of the Bluetooth component, refer to its operating instructions.

**3 Press 13OPTION.**

The option menu for DOCK input appears on the video monitor.

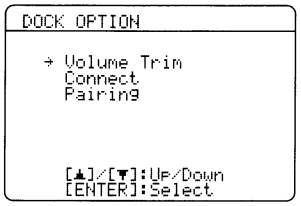


**4 Press 14Cursor ▽ to select "Pairing" and press 14ENTER.**

"Searching" appears on the front panel display and the pairing operation starts.

- To cancel pairing, press 14**RETURN**.
- You can also start pairing operation by pressing and holding ⒹMEMORY on the front panel.

**5 Make sure the Bluetooth component recognizes the Bluetooth wireless audio receiver.**

If the Bluetooth have recognized the Bluetooth wireless audio receiver, "YBA-10 YAMAHA," for instance, is displayed in the Bluetooth device list.

**6 Select the Bluetooth wireless audio receiver from the Bluetooth device list, and enter a path key "0000" into the Bluetooth component.**

When pairing is complete, "Completed" appears on the front panel display.

- The Yamaha Bluetooth wireless audio receiver can be paired with up to eight Bluetooth components. When pairing is conducted successfully with a ninth component and the pairing data is registered, the pairing data for the least recently used other component is cleared.

## Playback of the Bluetooth™ component

**1 Change the input source to "DOCK" using ⓃINPUT ◁ / ▷ (or 7DOCK).**

**2 Press 13OPTION.**

**3 Press 14Cursor ▽ repeatedly to select "Connect" and press 14ENTER.**

After you execute "Connect," communication with the Bluetooth component is established. When the connected Bluetooth wireless audio receiver recognizes the Bluetooth component, "BT Connected" appears on the front panel display.

- When you press 14**ENTER** on the remote control, the connected Bluetooth wireless audio receiver searches and connects to the last connected Bluetooth component. If the Bluetooth wireless audio receiver cannot find the Bluetooth component, "Not found" appears on the front panel display.
- To disconnect the Bluetooth wireless audio receiver from the Bluetooth component, display the option menu again, select "Disconnect," and press 14**ENTER**.

**4 Start playback of the Bluetooth component.**

## Setting the option menu for each input source (OPTION menu)

This unit has an OPTION menu of frequently used menu items for input sources compatible with this unit. The procedure for setting the OPTION menu items is described below.

**1 Select an input source using ⓃINPUT ◁ / ▷ (7Input selection keys).**

**2 Press 13OPTION on the remote control.**

The OPTION menu appears. The displayed OPTION menu items differ depending on the input source. For details, see the following section.

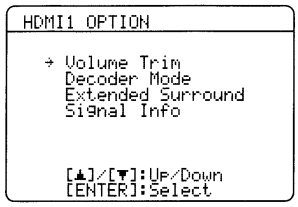


**3 Select the desired menu item using 14Cursor △ / ▽, and press 14ENTER.**

Parameters of the selected menu item are displayed.

**4 Change the setting of the selected menu item (or enable a function) using 14Cursor △ / ▽ / ◁ / ▷ and 14ENTER.**

Details of the selected menu item are displayed. Parameters you can set differ depending on the menu items.

**5 To close the OPTION menu, press 13OPTION.**

You can also use 14**RETURN** to return to the previous screen or close the OPTION menu.

- When 14**Cursor** or other keys do not work after completing the menu, select the input source again using 7**Input selection keys**.

### OPTION menu items

The following menu items are provided for each input source.

| Input Source | Menu item | | | |
|---|---|---|---|---|
| HDMI1-4 | Volume Trim | Decoder Mode | Extended Surround | Signal Info |
| AV1-4 | Volume Trim | Decoder Mode | Extended Surround | Signal Info |
| AV5-6 | Volume Trim | | | |
| AUDIO1-2 | Volume Trim | | | |
| V-AUX | Volume Trim | | | |
| TUNER | Volume Trim | FM Mode | Auto Preset | Clear Preset |
| iPod (DOCK) | Volume Trim | Shuffle | Repeat | |
| Bluetooth (DOCK) | Volume Trim | Connect/ Disconnect | Pairing | |

Details of the menu items are as follows:

- The default settings are marked with "*."

#### ■ Volume Trim

**Input source:** All
**Adjustable range:** -6.0 dB to 0.0 dB* to +6.0 dB (in 0.5 dB steps)

Reduces any change in volume when switching input sources by correcting volume differences between input sources.
You can set this parameter for each input source.

## ■ Decoder Mode

**Input source:** HDMI1-4, AV1-4
**Choices:** Auto*/DTS

Selects DTS digital audio signals for reproduction.

| | |
|---|---|
| Auto | Automatically selects audio input signals. |
| DTS | Selects DTS signals only. Other input signals are not reproduced. |

## ■ Extended Surround

**Input source:** HDMI1-4, AV1-4
**Choices:** Auto*/PLIIxMovie/PLIIxMusic/EX/ES/Off

Selects whether to reproduce multi-channel input signals in 6.1- or 7.1-channel when surround back speakers are used.

| | |
|---|---|
| Auto | Automatically selects the most suitable decoder according to whether a flag for reproducing surround back channel is present, and reproduces the signals in 6.1- or 7.1-channel. |
| PLIIx Movie | Always reproduces signals in 6.1- or 7.1-channel using the PLIIxMovie decoder whether or not surround back channel signals are contained. You can select this parameter when one or two speakers are connected. |
| PLIIx Music | Always reproduces signals in 6.1- or 7.1-channel using the PLIIxMusic decoder whether or not surround back channel signals are contained. You can select this parameter when one or two speakers are connected. |
| EX/ES | Automatically selects the most suitable decoder for input signals whether or not the flag for reproducing surround back channel is present, and always reproduces signals in 6.1-channel. |
| Off | Always reproduces signals in 5.1-channel whether or not the flag for reproducing surround back channel is present. |

## ■ Signal Info

**Input source:** HDMI1-4, AV1-4

Displays information on audio and video signals on the video monitor and front panel display. You can change information to be displayed on the front panel display using 14**Cursor** △ / ▽.

### Signal Info parameters

#### ■ Audio information

| Information | Description |
|---|---|
| Format | Format of digital audio signals. |
| Channel | The number of input signal channels (front/surround/LFE).<br>For example, if input signal channels are 3 front channels, 2 surrounds and LFE, "3/2/0.1" is displayed.<br>If a channel that cannot be expressed as the above, a total number of channels such as "5.1ch" may be displayed. |
| Sampling | The sampling frequency per second in analog-to-digital conversion. |
| Bitrate | The bit rate of input signal per second. |

***Notes***

- "No Signal" is displayed when no signals are input and "---" is displayed when signals that this unit cannot recognize are input.
- The bit rate may vary during playback.

#### ■ Video information

| Information | Description |
|---|---|
| In | Format and resolution of video input signal. |
| Out | Format and resolution of video output signal. |
| Message | Error messages about HDMI signals and HDMI components. See the following for details of the error messages. |

**HDMI error message (appears only when an error has occurred)**

| | |
|---|---|
| HDCP Error | HDCP authentication failed. |
| Device Over | The number of HDMI components connected is over the limit. |
| Out of Res. | The connected monitor is not compatible with the video input signal. |

## ■ FM Mode

**Input source:** TUNER
**Choices:** Stereo*/Mono

Sets FM broadcasting receiving mode.

| | |
|---|---|
| Stereo | Receives in stereo mode. |
| Mono | Receives in monaural mode. You can get better reception in MONO mode. |

## ■ Auto Preset

**Input source:** TUNER

Automatically detects radio stations in the FM frequency band and registers them as preset stations (see page 28).

## ■ Clear Preset

**Input source:** TUNER

Clears the preset stations (see page 29).

## ■ Shuffle

**Input source:** iPod (DOCK)
**Choices:** Off*/Songs/Albums

Changes the shuffle playback style (see page 31).

## ■ Repeat

**Input source:** iPod (DOCK)
**Choices:** Off*/One/All

Changes the repeat playback style (see page 31).

## ■ Connect / Disconnect

**Input source:** Bluetooth (DOCK)

Switches communication with a Bluetooth component on and off (see page 32).

## ■ Pairing

**Input source:** Bluetooth (DOCK)

Performs pairing of this unit and a Bluetooth component (see page 32).

# Editing surround decoders/sound field programs

## Selecting a decoder used with a sound field program

When using sound field programs for movies or TV programs (except for Mono Movie), you can select a surround decoder to be used with the sound field program after setting the parameters from the following decoders. To set the parameters for sound field programs, see the following section.

### Decoders that can be used with a sound field program

- PLIIx Movie (PLII Movie)
- Neo:6 Cinema

## Setting sound field parameters

Although the field sound programs would satisfy you as they are with the default parameters, you can arrange sound effect or decoders suitable for acoustical conditions of sources or rooms by setting the parameters (sound field elements).

- You can protect the sound field against the changes of parameters the sound filed parameters when "Memory Guard" of the setup menu is set to "On" (see page 43). To change the parameters, set it to "Off."

**1 Turn on the video monitor connected to this unit.**

**2 Press [12]SETUP on the remote control.**

The setup menu appears on the monitor.

**3 Press [14]Cursor △ / ▽ to select "DSP Parameter" and press [14]ENTER.**

The screen changes as follows.

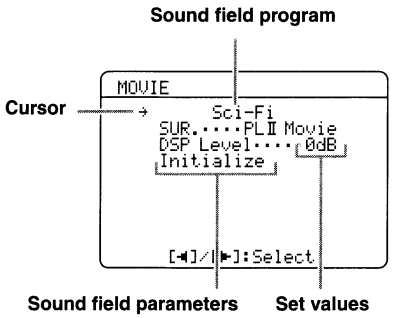


**4 Press [14]Cursor △ / ▽ to move "→" to the sound field program and press [14]Cursor ◁ / ▷ to select the sound field program.**

**5 Press [14]Cursor △ / ▽ to select the parameter that you want to change, and press [14]Cursor ◁ / ▷ to change the parameter.**

An asterisk (*) appears on the left of the sound field parameter name displayed on the monitor when you change the parameter from its default setting. For details on functions and adjustable ranges of the sound field parameters, see "Sound field parameters" on this page.

- Repeat steps 4 and 5 to change other sound field program parameters.

**6 To end the edit, press [14]RETURN.**

To initialize the parameters of the selected sound field program, **[14]Cursor ▽** repeatedly to select "Initialize" and then press, **[14]Cursor ▷**. When the confirmation screen appears on the monitor, press **[14]Cursor ▷** to confirm the initialization or **[14]Cursor ◁** to cancel it.

## Sound field parameters

- The default settings are marked with "*."

### CINEMA DSP parameters

#### DSP Level

**Adjustable range:** -6 dB to 0 dB* to +3 dB

Fine adjusts an effect level (level of the sound field effect to be added). You can adjust the level of the sound field effect while checking sound levels. Adjust "DSP Level" as follows.

- The effect sound is too soft.
- There are no differences between effects of the sound field programs.
  →Increase the effect level.

- The sound is dull.
- The sound field effect is added too much.
  →Reduce the effect level.

## Parameters only usable in certain sound field programs

### ■ 2ch Stereo only

Direct

**Choices:** Auto*/Off

Automatically bypasses the DSP circuit and tone control circuit when an analog sound source is selected as the input source. You can enjoy a higher quality sound.

Auto Outputs sound by bypassing the DSP circuit and tone control circuit when the "Bass" and "Treble" tone controls are both set to 0 dB.

Off Do not bypass the DSP circuit and tone control circuit.

### ■ 7ch Stereo only

CT Level/SL Level/SR Level/ SB Level

**Adjustable range:** 0 to 100%

Adjusts the volume of the center (CT), surround L (SL) surround R (SR) and surround back (SB) channels in the 7ch Stereo program. The available parameters differ depending on the setting of the speakers.

### ■ Straight Enhancer/7ch Enhancer only

Effect Level

**Choices:** High*/Low

Adjusts the Compressed Music Enhancer effect level. When the high-frequency signals of the source is emphasized too much, set the effect level to "Low." To reduce the effect, set this parameter to "Low." To increase the effect, set it to "High."

## Decoder parameters

You can customize decoder effects by setting the following parameters. For kinds of decoders, see page 26.

### ■ When PLIIx Music/PLII Music is selected

Panorama

**Choices:** Off*/On

Adjusts the soundscape of the front sound field. Sends stereo signals to the surround speakers as well as the front speakers for a wraparound effect.

Dimension

**Adjustable range:** -3 to STD* to +3

Adjusts the difference in level between the front sound field and the surround sound field. You can adjust the difference in level created by the software being played back to obtain the preferred sound balance. The surround sound gets stronger as you make the value more negative and the front sound gets stronger as you make the value more positive.

Center Width

**Adjustable range:** 0 to 3* to 7

You can spread the center sound toward left and right according to your preference. Set this parameter to 0 for outputting the center sound from the center speaker only, or to 7 for outputting it from the front left/right speaker.

### ■ When Neo:6 Music is selected

C.Image

**Adjustable range:** 0.0 to 0.3 to 1.0

Adjusts the front left and right channel output relative to the center channel to make the center channel more or less dominant as necessary.

# Operating various settings for this unit (Setup menu)

You can call the setup menu using the remote control and change the settings of various menus.
You can change the following settings in the setup menu. For details, read "Basic operation of the setup menu" first, and see the respective pages.

| Menu/Submenu | Function | Page |
|---|---|---|
| Speaker Setup | Sets items for speakers. | 39 |
| 1 Auto Setup (YPAO) | Automatically adjusts output characteristics of speakers. | 39 |
| 2 Manual Setup | Manually adjusts output characteristics of speakers. | 39 |
| A)Config | Sets speaker configurations, such as connection status of speaker and a size of the connected speaker (sound reproduction capacity), suitable for the listening environment. | 39 |
| B)Level | Separately adjusts volume of each speaker. | 41 |
| C)Distance | Adjusts timing at which each speaker outputs sound based on distances between speakers and the listening position. | 41 |
| D)Equalizer | Selects an equalizer that adjusts speaker output characteristics. | 41 |
| E)Test Tone | Generates test tones. | 41 |
| Sound Setup | Sets various items for sound outputs. | 41 |
| 1 Dynamic Range | Adjusts dynamic ranges of speakers and headphones. | 41 |
| 2 Lipsync | Adjusts delay in output timing between video signals and audio signals. | 41 |
| HDMI Auto | Sets on or off of automatic adjustments for delay between output timing between video signals input from the HDMI jack and audio signals. | 41 |
| Auto Delay | Fine adjusts a delay time of HDMI Auto. | 42 |
| Manual Delay | Manually fine adjusts the delay of audio and visual output. | 42 |
| Function Setup | Set various items for HDMI and display. | 42 |
| 1 HDMI | Sets various items for input sources. | 42 |
| Standby Through | Selects on or off of output of HDMI signals input from the HDMI IN jack to the HDMI OUT jack when this unit is on standby. | 42 |
| Audio Output | Selects this unit or a component connected to this unit via the HDMI OUT jack of this unit for reproducing sound signals input from the HDMI IN jack. | 42 |
| Resolution | Sets resolution of the HDMI output that is converted from analogy visual input signals. | 42 |
| Aspect | Set an aspect ratio of images reproduced by HDMI signals converted from analog video input signals. | 42 |
| 2 Display | Set items for a monitor or the front panel display. | 42 |
| Dimmer | Sets brightness of the front panel display. | 42 |
| FL Scroll | Selects the way to display characters on the front panel display. | 42 |
| OSD Shift | Adjusts top and bottom positions of the screen displayed on the video monitor. | 43 |
| 3 Volume | Sets items for volumes. | 43 |
| Adaptive DRC | Adjust the dynamic range (difference between the maximum volume and the minimum volume) in conjunction with the volume level. | 43 |
| Max Volume | Sets the maximum volume level so that the volume will not be accidentally increased. | 43 |
| Init. Volume | Sets the volume at the time this unit is turned on. | 43 |
| 4 Input Rename | Changes input source names to be displayed on a video monitor or the front panel display. | 43 |
| DSP Parameter | Sets parameters for the sound field programs. | 43 |
| Memory Guard | Protects some settings against accidental alteration. | 43 |

## Basic operation of the setup menu

The setup menu screen appears on both video display (OSD) and front panel display.

### Video display (OSD)

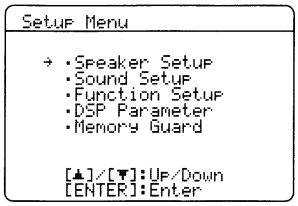


### Front panel display




In this section, procedures of setting menus using the video monitor are described.

**1 Press [12]SETUP on the remote control.**

The setup menu screen appears.

**2 Select a menu using [14]Cursor △ / ▽, and press [14]ENTER.**

Items of the selected menu are displayed. For example, the following screen appears when you select "Function Setup."

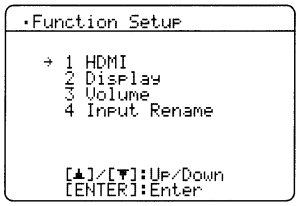


- You can return to the previous screen by pressing [14]**RETURN**.

**3 To display submenus, select a menu that you want to set using [14]Cursor △ / ▽, and press [14]ENTER.**

For example, the following screen appears when you select "2 Display."

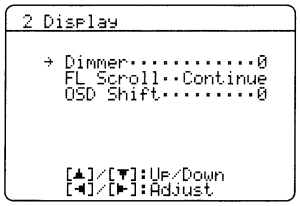


**4 Select an item using [14]Cursor △ / ▽, and change the setting of the item using [14]Cursor ◁ / ▷.**

Some items in the Manual Setup menu of Speaker Setup take up a full screen. To display other items in the Manual Setup menu, press [14]**Cursor** △ / ▽.

### "A)Config" display (example)

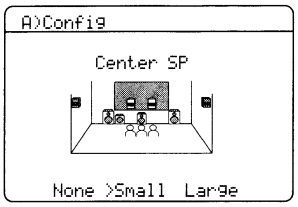


- You can change other items by repeating step 4.

**5 To finish the setting, press [12]SETUP.**

- When [14]**Cursor** or other keys do not work after completing the menu, select the input source again using [7]**Input selection keys**.

## Speaker Setup

You can set various items for speakers. Two kinds of adjustments are available. One is "Auto Setup (YPAO)" for automatic adjustment and another is "Manual Setup" for manual adjustment.

- The default settings are marked with "*."

### 1 Auto Setup

Automatically adjusts output characteristics of speakers to obtain optimum balance for the output sound based on positions and performances of the speakers and acoustic characteristics or the room, which are automatically measured. For details on operations, see page 18.

### 2 Manual Setup

Adjusts output characteristics of speakers based on manually set parameters.
After Auto Setup (YPAO) is performed, you can check automatically adjusted parameters in the Manual Setup menu. Fine adjust the parameters for your preference if necessary.

#### ■ A)Config

Sets speaker configurations, such as connection status of speaker and a size of the connected speaker (sound reproduction capacity), suitable for the listening environment.

- The speaker configuration includes items for defining a speaker size: Large or Small. Large and Small refer to speakers with woofer diameters 16 cm or larger and smaller than 16 cm, respectively.

#### LFE/Bass Out

**Choices:** SWFR/Front/Both*

Selects speaker(s) for outputting low-frequency components of the LFE (low-frequency effect sound) channel or other channels. The output status is as follows.

LFE channel signals

| Parameter | Subwoofer | Front speakers | Other speakers |
|---|---|---|---|
| Both | Output | Not output | Not output |
| SWFR | Output | Not output | Not output |
| Front | Not output | Output | Not output |

Low-frequency components of other channel signals

| Parameter | Subwoofer | Front speakers | Other speakers |
|---|---|---|---|
| Both | [1] | [2] | [3] |
| SWFR | [4] | [3] | [3] |
| Front | Not output | [1] | [3] |

[1] Outputs low-frequency components of the front left and right channels and the channel of speaker, the size of which is set to "Small."
[2] Outputs low-frequency components of the front left and right channels.
[3] Outputs low frequency components when the sizes of speakers are set to "Large."
[4] Outputs low-frequency components of the channel of speaker, the size of which is set to "Small."

### Front SP

**Choices:** Small/Large*

Sets the sizes of front left and right speakers.

Small — Select this when small speakers are connected. Low-frequency components of the front left and right channels are output from a subwoofer.
Large — Select this when large speakers are connected.

**Note**

- When "LFE/Bass Out" is set to "Front," you can only select "Large." If "LFE/Bass Out" is changed to "Front," "Front SP" automatically switches to "Large" even when it is set to "Small."

### Center SP

**Choices:** None/Small*/Large

Sets the size of center speaker.

None — Select this when no center speaker is connected. Center channel signals are spread to front left and right speakers.
Small — Select this when a small center speaker is connected. Low-frequency components of center channel are output from a subwoofer. If a subwoofer is not connected they are output from front speakers.
Large — Select this when a large center speaker is connected.

### Sur. L/R SP

**Choices:** None/Small*/Large

Sets sizes of left and right surround speakers.

None — Select this when no surround speakers are connected. Surround channel signals are spread to front left and right speakers. "Sur.B L/R SP" automatically switches to "None" when this is selected.
Small — Select this when small surround speakers are connected. Low-frequency components of surround channels are output from a subwoofer. If a subwoofer is not connected they are output from front speakers.
Large — Select this when large surround speakers are connected.

- When "None" is selected, the sound field programs automatically enter the Virtual CINEMA DSP mode.

### Sur.B L/R SP

**Choices:** None/SMLx1/SMLx2*/LRGx1/LRGx2

Sets sizes of left and right surround back speakers.

None — Select this when no surround back speaker are connected. Surround back channel signals are output from the surround L/R speakers and subwoofer. If the subwoofer is disabled, they are output from the surround L/R speakers and front speakers.
SMLx1 — Select this when one small surround back speaker is connected.
SMLx2 — Select this when two small surround back speakers are connected.
LRGx1 — Select this when one large surround back speaker is connected.
LRGx2 — Select this when two large surround back speakers are connected.

- When "None" is selected, "PLIIx Movie" or "PLIIx Music" cannot be selected.

### Crossover Freq.

**Choices:** 40Hz/60Hz/80Hz*/90Hz/100Hz/110Hz/120Hz/160Hz/200Hz

Sets the lower limit of the low frequency component output from a speaker with a size set to "Small (SMLx1/SMLx2)." Sound with a frequency below that limit is output from a subwoofer or front speakers.
If your subwoofer has a volume control or a crossover frequency control, set the volume to half or the crossover frequency at the maximum.

### Subwoofer Phase

**Choices:** Normal*/Reverse

Sets the phase of your subwoofer if bass sounds are lacking or unclear.

Normal — Select this not to change the phase of your subwoofer.
Reverse — Select this to reverse the phase of your subwoofer.

## ■ B)Level

**Adjustable range:** -10.0dB to +10.0dB (0.5 dB step)
**Defaults:** "FR.L/FR.R/SWFR" 0dB*
"CNTR/SUR.L/SUR.R/SBL/SBR" -1.0dB

Separately adjusts volume of each speaker so that the sounds form speakers are at the same volume at the listening position. Items to be displayed vary depending on the number of speakers connected.

- When only one surround back speaker is connected, "SB" appears instead of "SBL" and "SBR."
- You can adjust the volume listening to test tones when you set "Test Tone" to "On" (see page 41).
- If your subwoofer has a volume control or a crossover frequency control, set the volume to half or the crossover frequency at the maximum.

## ■ C)Distance

Adjusts timing at which each speaker outputs sound so that sounds from speakers reach the listening position at the same time. Set unit (Unit) first and set the distance of each speaker.

### Unit

**Choices:** meters (m)/feet (ft)*

meters (m) Displays the speaker distance in meters.
feet (ft) Displays the speaker distance in feet.

### Front L/Front R/Center/Sur. L/Sur. R/Sur.B L/Sur.B R/SWFR

**Adjustable range:** 0.30m to 24.00m (1.0ft to 80.0ft)
**Defaults:** 3.00m (10.0ft) "Front L/Front R/SWFR"
2.60m (8.5ft) "Center"
2.40m (8.0ft) "Sur. L/Sur. R/Sur.B L/Sur.B R"

- Different items are displayed depending on settings of "A)Config" (see page 39).
- When only one surround back speaker is connected, "Sur.B" appears instead of "Sur.B L" and "Sur.B R."

## ■ D)Equalizer

Adjusts sound quality and tone using a parametric graphic equalizer.

### EQ Type Select

**Choices:** Auto PEQ/GEQ*/Off

Select an equalizer type.

Auto PEQ Uses a parametric equalizer selected in "Auto Setup." Characteristics of the currently used parametric equalizer (see page 18) are displayed below "Auto PEQ."
GEQ Uses a graphic equalizer. Press [14]**ENTER** to adjust the characteristics of the graphic equalizer.
Off Not use a graphic equalizer.

### GEQ

**Choices:** 63Hz/160Hz/400Hz/1kHz/2.5kHz/6.3kHz/16kHz
**Adjustable range:** -6.0dB to 0dB* to +6.0dB (0.5 dB step)

Adjusts sound quality of each speaker using a graphic equalizer. The graphic equalizer of this unit can adjust signal levels in 7 frequency ranges.
To adjust the signal level in each range, select the desired speaker with [14]**Cursor** ◁ / ▷ while "→" is displayed next to "Channel," then select the desired frequency band with [14]**Cursor** △ / ▽, and adjust the signal level with [14]**Cursor** ◁ / ▷.

## ■ E)Test Tone

**Choices:** Off*/On

Switches between on and off of an oscillator that generates test tones. To turn on the oscillator, select "On" using [14]**Cursor** ◁ / ▷. When "On" is selected, you can adjust the settings of "2 Manual Setup" while listening to a test tone.

Off Not generate test tones.
On Generates test tones.

# Sound Setup

You can set various items for sound outputs.

## ■ 1 Dynamic Range

**Choices:** Min/Auto/STD/Max*

Selects the dynamic range adjustment method for reproducing bitstream signals.

Min/Auto (Min) Sets the dynamic range suitable for low volume or a quiet environment, such as at night, for bitstream signals except for Dolby TrueHD signals.
(Auto) Adjusts the dynamic range for Dolby TrueHD signals based on input signal information.
STD Sets the standard dynamic range recommended for regular home use.
Max Outputs sound without adjusting the dynamic range of the input signals.

## ■ 2 Lipsync

Adjusts delay between video output and audio output.

### HDMI Auto

**Choices:** Off*/On

Automatically adjusts output timing of audio and video signals when a monitor that supports an automatic lip-sync function is connected to this unit.

Off Select this when the connected monitor does not support the automatic lip-sync function or you do not use the automatic lip-sync function. Set the correction time in "Manual Delay."
On Select this when the connected monitor supports the automatic lip-sync function. Fine adjust the correction time in "Auto Delay."

### Auto Delay

**Adjustable range:** 0 to 240ms (1 ms step)

Fine adjust the correction time when "HDMI Auto" is set to "On." The actual correction time is displayed under in "Auto Delay" field and an offset time set by the user in "Offset" field.

### Manual Delay

**Adjustable range:** 0* to 240ms (1 ms step)

Manually fine adjusts the correction time. Select this when the connected monitor does not support the automatic lip-sync function or you set "HDMI Auto" to "Off."

## Function Setup

You can set various items for HDMI and display.

### 1 HDMI

You can set items for HDMI.

#### ■ Standby Through

**Choices:** On/Off*

Selects on or off of output of HDMI signals input from the HDMI IN jack to the HDMI OUT jack when this unit is on standby. When this parameter is set to "On" signals input from the HDMI 1-4 jacks can be output to a monitor component.

| | |
|---|---|
| On | Outputs the HDMI signals to the HDMI OUT jack. |
| Off | Not output the HDMI signals to the HDMI OUT jack. |

- To enables pass-through output, any one of the input sources connected to the HDMI1-4 must be selected before switching to standby.
- When Standby Through turns on, the HDMI THROUGH indicator on the front panel display lights up. While the indicator lights up, this unit consumes up to 3W of power even on standby.

#### ■ Audio Output

**Choices:** Amp*/TV/Amp+TV

Selects this unit or a component connected to this unit via the HDMI OUT jack of this unit for reproducing sound signals input from the HDMI IN jack.

| | |
|---|---|
| Amp | Outputs HDMI sound signals form the speakers connected to this unit. |
| TV | Outputs HDMI sound signals from the speakers of a TV connected to this unit. Sound output from the speakers connected to this unit is muted. |
| Amp+TV | Outputs HDMI sound signals from the speakers connected to this unit and the speakers of a TV connected to this unit. |

**Note**

- Signal formats of audio and visual signals output from this unit to the monitor vary depending on specifications of the monitor.

#### ■ Resolution

**Choices:** Through*/480p/720p/1080i/1080p

Upscales the resolution of HDMI output that is converted from analog video input signals and output from the HDMI OUT jack.

**Notes**

- Resolution of the HDMI output converted from 720p or 1080i analog video signals cannot be upscaled.
- When a video monitor is connected to this unit via the HDMI jack, this unit automatically detects a resolution that the monitor supports. An asterisk (*) appears on the left of the detected resolution.
- If this unit cannot detect the resolution that the monitor supports, set "MON.CHK" in the advanced setup menu to "SKIP" (see page 45) and try it again.

#### ■ Aspect

**Choices:** Thrgh*/16:9/Smart

Set a horizontal to vertical ratio (aspect ratio) of images reproduced by HDMI signals output from the HDMI OUT jack when the HDMI signals are converted from analog video input signals by a video conversion function.

| | |
|---|---|
| Thrgh | Outputs the video signals without changing the aspect ratio. |
| 16:9 | Outputs the video signals that displays 4:3 images on a 16:9 monitor with black bands on the right and left sides of the monitor screen. |
| Smart | Outputs the video signals that displays 4:3 images on a 16:9 monitor by stretching right and left of images to fit in the monitor screen. |

**Notes**

- You cannot change the aspect ratio of the screen when "Resolution" is set to "Thrgh."
- The setting is not effective for inputs with the aspect ratio other than 4:3.
- You cannot obtain an effect of the aspect ratio when visual signals are input from the HDMI IN jack or 720p, 1080i or 1080p signals are input.

### 2 Display

You can set items for a monitor or the front panel display.

#### ■ Dimmer

**Adjustable range:** -4 to 0*

Sets brightness of the front panel display. As the value is lowered, the brightness of the front panel display is darkened.

**Note**

- The brightness of display does not become bright in direct mode even if the value is increased.

#### ■ FL Scroll

**Choices:** Continue*/Once

Selects the way to scroll the screen when a total number of characters exceed a display area of the front panel display.

| | |
|---|---|
| Continue | Repeatedly displays all characters by scrolling. |
| Once | Displays all characters by scrolling once, halts scrolling, and then displays first 14 characters. |

■ OSD Shift

**Adjustable range:** -5 to 0* to +5

Adjusts top and bottom positions of the screen displayed on the video monitor. To move up the screen, set this value larger. To move down the screen, set it smaller.

## 3 Volume

You can set items for volumes.

■ Adaptive DRC

**Choices:** Auto/Off*

Adjust the dynamic range in conjunction with the volume level. This feature is useful when you are listening at lower volumes or at night. When this function is enabled, the dynamic range is adjusted as follows.

If the VOLUME setting is low:
the dynamic range is narrow
If the VOLUME setting is high:
the dynamic range is wide

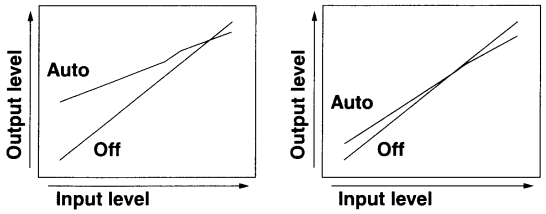


| | |
|---|---|
| Auto | Adjusts the dynamic range automatically. |
| Off | Not adjust the dynamic range automatically. |

- The Adaptive DRC setting is effective for headphones.

■ Max Volume

**Adjustable range:** -30.0dB to +15.0dB/+16.5dB* (5.0 dB step)

Sets the maximum volume level so that the volume will not be accidentally increased. For example, you can adjust the volume between –80.0 dB and –5.0 dB when you set this parameter to "–5.0dB." The volume increases to the maximum level when this parameter is set to +16.5 dB (default).

■ Init. Volume

**Choices:** Off*/Mute/-80.0dB to +16.5dB (0.5 dB step)

Sets the volume at the time this unit is turned on. When this parameter is set to "Off," the volume is set to a level that last time this unit is set to standby.

***Note***

- When you set "Max Volume" and "Init. Volume," the setting of "Max Volume" becomes effective. For example, when you set "Max Volume" to "–30.0dB" and "Init. Volume" to "0.0dB," the volume is automatically set to "–30.0dB" at the next time this unit is turned on.

## 4 Input Rename

Changes input source names to be displayed on the front panel display.
You can select an input source that you want to change the name to be displayed using 14**Cursor**.

### Selecting a name to be displayed from templates

Select an input source that you want to change the name, and select a name from the following templates using Cursor.

- Blu-ray
- DVD
- SetTopBox
- Game
- TV
- DVR
- CD
- CD-R
- Satellite
- VCR
- Tape
- MD
- PC
- iPod
- HD DVD
- "blank"

### Entering an original name

Select an input source that you want to name, and press 14**ENTER**. You can enter up to 9 characters by selecting one character at a time with the following keys according to the following operation.

| | |
|---|---|
| 14**Cursor** ◁ / ▷ | For selecting characters that you want to change |
| 14**Cursor** △ / ▽ | For selecting characters to be entered |
| 14**ENTER** | For entering the selected characters |

The following characters are available for input.
A to Z, 0 to 9, a to z, symbols (#, *, –, +, etc.) and space

## DSP Parameter

You can set parameters for the sound field programs. For details, see page 36.

## Memory Guard

**Choices:** Off*/On

Protects settings of setup menu against accidental alteration.

| | |
|---|---|
| Off | Not protect settings. |
| On | Protects the settings of the setup menu (except for the Memory Guard setting). |

***Note***

- When this parameter is switched to "On," "G" appears while the setup menu is displayed on the video monitor.

# Controlling other components with the remote control

You can control external components for a selected input source with the remote control. The keys available for controlling external components are as follows:

### [4]SOURCE POWER
Turns on and off an external component.

### [14]Cursor, ENTER, RETURN
Operates the menus of external components.

### [16]DISPLAY
Switches between the screens of external components.

### [18]External component operation keys
Function as a recording or playback key of an external component, or a menu display key.

### [19]Numeric keys
Function as numeric keys of an external component.

### [20]TV control keys

**INPUT** Switches visual inputs of TV
**MUTE** Mute audio of TV
**TV VOL +/–** Controls the volume of TV
**TV CH +/–** Switches channels of TV
**POWER** Turns on and off TV

- You can use **[20]TV control keys** only for controls of TV regardless of selected input sources.
- You need to set the remote control code first to control external components.
- The remote control keys for controlling external components are available only when the external components have corresponding control keys.

The following remote control codes are assigned to input sources as factory default settings. For a complete list of available remote control codes, refer to "List of remote control codes" at the end of this manual.

## ■ Default remote control code settings

| Input source | Category | Manufacturer | Default code |
|---|---|---|---|
| [HDMI1] | Blu-ray Disc | Yamaha | 2018 |
| [HDMI2] | — | — | — |
| [HDMI3] | — | — | — |
| [HDMI4] | — | — | — |
| [AV1] | — | — | — |
| [AV2] | — | — | — |
| [AV3] | CD | Yamaha | 5013 |
| [AV4] | — | — | — |
| [AV5] | — | — | — |
| [AV6] | — | — | — |
| [AUDIO1] | — | — | — |
| [AUDIO2] | — | — | — |
| [V-AUX] | — | — | — |
| [TUNER] | Tuner | Yamaha | 5007 |
| [DOCK] | DOCK | Yamaha | 5011 |
| [A]/[B] | — | — | — |

"—" indicates no assignment

- An external component that is controlled by the remote control can be automatically selected according to selection of the scenes (see page 21).

## Setting remote control codes

You can control other components by setting the appropriate remote control codes. For a complete list of available remote control codes, refer to "List of remote control codes" at the end of this manual.

**1 Press [3]CODE SET on the remote control using a pointed object such as the tip of a ballpoint pen.**
[2]**TRANSMIT** on the remote control blinks twice.

**2 Press [7]Input selection keys.**

**3 Enter a remote control code using [19]Numeric keys.**
Once the remote control code is registered, [2]**TRANSMIT** on the remote control blinks twice. If it fails, [2]**TRANSMIT** blinks six times. Repeat from step 1.

## Resetting all remote control codes

You can clear all the remote control codes previously set, and reset all of them to the initial factory settings.

**1 Press [3]CODE SET on the remote control using a pointed object such as a tip of a ballpoint pen.**
[2]**TRANSMIT** on the remote control blinks twice.

**2 Press [12]SETUP on the remote control.**

**3 Enter "9981" using [19]Numeric keys.**
Once the initialization is complete, [2]**TRANSMIT** on the remote control blinks twice. If it fails, [2]**TRANSMIT** blinks six times. Repeat from step 1.

# Advanced setup

In the advanced setup, you can set basic operations of this unit, such as on and off of a bi-amp connection, or initialize user settings. Perform the following steps to change settings.

**1 Set this unit to the standby mode.**

**2 Press ⒶSTANDBY/ON while pressing and holding ⓁSTRAIGHT on the front panel.**

The advanced setup menu appears on the front panel display.

```
ADVANCED SETUP
```

**3 Press ⓀPROGRAM ◁ / ▷ repeatedly to select the parameter you want to change.**

The default setting are marked with "*."

- Set values are placed in XXX of the following parameters on an actual display screen.

SP IMP. -XXX

**Choices:** 6Ω MIN/8Ω MIN*

Selects output impedance of this unit according to connected speakers.

REMOTE ID -XXX

**Choices:** ID1*/ID2

Sets a remote control ID. When using multiple Yamaha AV receivers, you can operate them with a single remote control by setting the receiver IDs to the same setting.

BI AMP - XXX

**Choices:** ON/OFF*

Switches on and off of bi-amp connection of main speakers. For bi-amp connection, see page 12.

MON.CHK - XXXX

**Choices:** YES*/SKIP

Adds upscaling limitation on output signals to a video monitor connected to this unit via the HDMI OUT jack.

INIT-XXXXXXXXX

**Choices:** DSP PARAM/VIDEO/ALL/CANCEL

Initializes various settings stored in this unit. You can select an initialization method from the following.

| | |
|---|---|
| DSP PARAM: | All parameters of sound field programs |
| VIDEO: | Video conversion settings (resolution/ aspect) in the setup menu and the OSD display position |
| ALL: | Reset this unit to initial factory settings |
| CANCEL: | Cancellation of initialization |

**4 Press ⓁSTRAIGHT a few times to select the value you want to change.**

The value selected here becomes effective when this unit is turned on the next time. You can change multiple settings by repeating steps 3 and 4.

**5 Press ⒶSTANDBY/ON, turns off this system, and press ⒶSTANDBY/ON again.**

The value set in step 3 becomes effective, and this unit turns on. When you select initialization in step 3, the initialization is performed.

## Setting a remote control ID

Two IDs are provided for the remote control of this unit. If another Yamaha amplifier is in the same room, setting a different remote control ID to this unit prevents unwanted operation of the other amplifier.

ID1 is set for both remote control and amplifier by default. When you change the remote control ID, display "Advance Setup" (see the previous section) and change the ID for the amplifier too.

**1 Press 3 CODE SET on the remote control using a pointed object such as the tip of a ballpoint pen.**

2 **TRANSMIT** blinks twice.

**2 Press 12 SETUP on the remote control.**

**3 Enter the desired remote control ID code.**

To switch to ID1:
Enter "5019" using 19 **Numeric keys**.
To switch to ID2:
Enter "5020" using 19 **Numeric keys**.
Once the remote control code is registered, 2 **TRANSMIT** blinks twice.
If it fails, 2 **TRANSMIT** blinks six times. Repeat from step 1.

- Initializing the remote control code (see page 44) returns it to ID1.

ADVANCED OPERATION

English

# APPENDIX

## Troubleshooting

Refer to the table below when this unit does not function properly. If the problem you are experiencing is not listed below or if the instruction below does not help, turn off this unit, disconnect the power cable, and contact the nearest authorized Yamaha dealer or service center.

### General

| Problem | Cause | Remedy | See page |
|---|---|---|---|
| **This unit fails to turn on or enters the standby mode soon after the power is turned on.** | The power cable is not connected or the plug is not completely inserted. | Connect the power cable properly to an AC wall outlet. | — |
| | The speaker impedance setting is incorrect. | Set the speaker impedance to match your speakers. | 45 |
| | (When this unit is turned back on and "CHECK SP WIRES!" is displayed.) The protection circuitry has been activated because this unit was turned on while a speaker cable was shorted. | Make sure that all speaker cables between this unit and speakers are connected properly. | 11 |
| **This unit cannot be turned off.** | The internal microcomputer is frozen due to an external electric shock (such as lightning or excessive static electricity) or by a drop in power supply voltage. | Disconnect the power cable from the AC wall outlet, wait about 30 seconds and then plug it in again. | — |
| **No sound.** | "Audio Output" in "1 HDMI" of Function Setup is set to "TV." | Select a choice for "Audio Output" (Function Setup→1 HDMI→Audio Output) other than "TV." | 42 |
| | A proper audio decoder is not selected. | Display the OPTION menu and set "Decoder Mode" to "Auto." | 33 |
| | Incorrect input or output cable connections. | Connect the cables properly. If the problem persists, the cables may be defective. | 14-16 |
| | No appropriate input source has been selected. | Select an appropriate input source with ⓃINPUT ◁ / ▷ or the 7**Input selection keys** on the remote control. | 21 |
| | Speaker connections are not secure. | Secure the connections. | 11 |
| | The volume is turned down or muted. | Turn up the volume. | — |
| | Signals this unit cannot reproduce are being input from a source component, such as a CD-ROM. | Display Signal info of the option menu and check the input signal format.<br>If "No Signal" is displayed, check if the playback component is properly connected to this unit (or a proper input source is selected).<br>If "___" is displayed, the input signal in that format cannot be reproduced by this unit. | — |
| | The HDMI components connected to this unit do not support the HDCP copy protection standards. | Connect HDMI components that support the HDCP copy protection standards. | 55 |

| Problem | Cause | Remedy | See page |
|---|---|---|---|
| **No picture.** | An appropriate video input is not selected on the monitor. | Select an appropriate video input on the monitor. | — |
| | The composite output terminals are used to output a component video signal, or the COMPONENT VIDEO jacks are used to output a composite video signal. | If your monitor does not support the HDMI connection, connect it to the COMPONENT OUT jacks or the composite output terminals and select an appropriate video input on the monitor. | 14 |
| | This unit outputs the video signals are not supported on the video monitor connected to the HDMI OUT jack. | Displays the advanced setup menu and select "VIDEO" in "INIT" to reset the video parameters. | 45 |
| | | Displays the advanced setup menu and set "MON.CHK" to "YES." | 45 |
| | Non-standard video signals are input. | Connect the monitor to this unit via the COMPONENT OUT jacks or the composite output terminals. | 14 |
| **The sound suddenly goes off.** | The protection circuitry has been activated because of a short circuit, etc. | Check that the speaker impedance setting is correct. | 45 |
| | | Check that the speaker wires are not touching each other and then turn this unit back on. | — |
| | The sleep timer has turned off this unit. | Turn on this unit, and play the source again. | — |
| **Sound is heard from the speaker on one side only.** | The playback component or speakers are not connected properly. | Connect the cables properly. If the problem persists, the cables may be defective. | 11 |
| | The speaker level settings are incorrect. | Adjust "B)Level" settings. | 41 |
| **Only the center speaker outputs substantial sound.** | When a monaural source sound field program is applied, sound of all channels are output from the center speaker for some surround decoders. | Try another sound field program. | 24 |
| **No sound is output from a specific speaker.** | Output from that speaker is disabled. | Check the Speaker indicators on the front panel display. If the corresponding indicator is turned off, try the following.<br>1) Change the input source to another one.<br>2) With the selected sound field program, sound is not output from that speaker. Select another sound field program.<br>3) "None" may have been selected for that speaker on this unit. Display Speaker Setup in the Setup menu and enables output of that speaker. | 6, 21, 24, 40 |
| | The volume of that speaker is set to minimum in Speaker Setup in the Setup menu. | Display Speaker Setup in the Setup menu and adjust the volume (Manual Setup→B)Level). | 41 |
| | This unit or speaker is malfunction. | Check the Speaker indicators on the front panel display. If the corresponding indicator lights up, connect another speaker and check if sound is output. If sound is not output, this unit may be malfunction. | 6, 10 |
| **No sound is heard from the surround speakers.** | This unit is in the "STRAIGHT" mode and a monaural source is being played back. | Press Ⓛ**STRAIGHT** or the [10]**STRAIGHT** on the remote control to turn off the "STRAIGHT" mode. | 27 |
| | Sound may not be output from certain channels depending on input sources or sound field programs. | Try another sound field program. | 24 |

| Problem | Cause | Remedy | See page |
|---|---|---|---|
| **No sound is heard from the subwoofer.** | "LFE/Bass Out" of "A)Config" in "Speaker Setup" of the setup menu (Speaker Setup→Manual Setup→A)Config) is set to "Front" when a Dolby Digital, DTS or AAC signal is being played. | Set "LFE/Bass Out" to "SWFR" or "Both." | 39 |
| | "LFE/Bass Out" of "A)Config" in "Speaker Setup" of the setup menu (Speaker Setup→Manual Setup→A)Config) is set to "SWFR" or "Front" when a 2-channel source is being played. | Set "LFE/Bass Out" to "Both." | 39 |
| | The source does not contain low frequency signals. | | |
| **No sound is heard from the surround back speakers.** | "Extended Surround" in the OPTION menu is set to "Off," or an input signal does not contain a surround back flag with "Extended Surround" set to "Auto." | Set "Extended Surround" other than "Off" or "Auto." | 40 |
| **The audio input sources cannot be played in the desired digital audio signal format.** | The connected component is not set to output the desired digital audio signals. | Set the playback component properly referring to its operating instructions. | — |
| **Noise/hum noise is heard.** | Incorrect cable connection. | Connect the audio cables properly. If the problem persists, the cables may be defective. | — |
| | A DTS-CD is being played back. | 1) When only noise is output<br>If a DTS bitstream signal is not properly input to this unit, only noise is output. Connect the playback component to this unit by digital connection and play back the DTS-CD. If the condition is not improved, the problem may results from the playback component. Consult the manufacturer of the playback component.<br>2) When noise is output during playback or skip operation<br>Before playing back the DTS-CD, display the option menu after selecting the input source and set "Decoder Mode" to "DTS." | 16, 34 |
| **"Memory Guard!" is displayed and the setting cannot be changed.** | "Memory Guard" in "Set Menu" is set to "On." | Set "Memory Guard" to "Off." | 43 |
| **This unit does not operate properly.** | The internal microcomputer is frozen due to an external electric shock (such as lightning or excessive static electricity) or by a drop in power supply voltage. | Disconnect the power cable from the AC wall outlet, wait about 30 seconds and then plug it in again. | — |
| **"CHECK SP WIRES!" appears on the front panel display.** | Speaker cables are short-circuited. | Make sure all speaker cables are connected correctly. | 12 |
| **There is noise interference from digital or radio frequency equipment.** | This unit is too close to other digital or radio frequency equipment. | Move this unit further away from such equipment. | — |

| Problem | Cause | Remedy | See page |
|---|---|---|---|
| **The picture is disturbed.** | The video software is copy-protected. | | |
| **This unit suddenly enters the standby mode.** | The internal temperature becomes too high and the overheat protection circuitry has been activated. | Wait about 1 hour for this unit to cool down and then turn it back on. | — |

## HDMI

| Problem | Cause | Remedy | See page |
|---|---|---|---|
| **No picture or sound.** | The number of the connected HDMI components is over the limit. | Disconnect some of the HDMI components. | — |
| | The connected HDMI component does not support high-bandwidth digital copyright protection (HDCP). | Connect an HDMI component that supports HDCP. | 15 |

## Tuner (FM/AM)

| | Problem | Cause | Remedy | See page |
|---|---|---|---|---|
| FM | **FM stereo reception is noisy.** | You are too far from the station transmitter or the input from the antenna is weak. | Check the antenna connections. | 17 |
| | | | Replace the outdoor antenna with a more sensitive multi-element antenna. | — |
| | | | Switch to monaural mode. | 34 |
| | **There is distortion, and clear reception cannot be obtained even with a good FM antenna.** | There is multi-path interference. | Adjust the antenna height or orientation, or place it in a different location. | — |
| | **The desired station cannot be tuned into with the automatic tuning method.** | You are in an area far from a station or an input from the antenna is weak. | Replace an outdoor antenna with more sensitive multi element antenna. | — |
| | | | Tune in manually or by direct frequency tuning. | 28 |
| AM | **The desired station cannot be tuned into with the automatic tuning method.** | The signal is weak or the antenna connections are loose. | Adjust the AM loop antenna orientation. | 17 |
| | | | Use the manual tuning method. | 28 |
| | **There are continuous crackling and hissing noises.** | Supplied AM loop antenna is not connected. | Connect the AM loop antenna correctly even if you use an outdoor antenna. | 17 |
| | | The noises may be caused by lightning, fluorescent lamps, motors, thermostats and other electrical equipment. | It is difficult to completely eliminate noise, but it can be reduced by installing and properly grounding an outdoor AM antenna. | 17 |
| | **There are buzzing and whining noises.** | A TV set is being used nearby. | Move this unit away from the TV set. | — |

## Remote control

| Problem | Cause | Remedy | See page |
|---|---|---|---|
| **The remote control does not work or function properly.** | Wrong distance or angle. | The remote control will function within a maximum range of 6 m (20 ft) and no more than 30 degrees offaxis from the front panel. | 9 |
| | Direct sunlight or lighting (from an inverter type of fluorescent lamp, strobe light, etc.) is striking the remote control sensor of this unit. | Adjust the lighting angle or reposition this unit. | — |
| | The batteries are weak. | Replace all batteries. | 9 |
| | The remote control ID of the remote control and this unit do not match. | Match the remote control ID of this unit and the remote control. | 45 |
| | The remote control code is not correctly set. | Set the remote control code correctly using "List of remote control codes" at the end of this manual. | 44 |
| | | Try setting another code of the same manufacturer using "List of remote control codes" at the end of this manual. | 44 |
| | | If this unit does not work when you press [14]**Cursor**, do the following.<br>When the key does not work during DVD disc menu operation: press the [7]**Input selection keys** on the remote control again.<br>When the key does not work during OPTION menu/ SETUP menu operation: press the key applicable for the current menu operation again. | — |
| | Even if the remote control code is correctly set, there are some models that do not respond to the remote control. | | |

## iPod™

### Note

- In case of a transmission error without a status message appearing on the front panel display and the OSD, check the connection of your iPod (see page 16).

| Problem | Cause | Remedy | See page |
|---|---|---|---|
| Loading... | This unit is in the middle of recognizing the connection with your iPod. | | |
| | This unit is in the middle of acquiring song lists from your iPod. | | |
| Connect error | There is a problem with the signal path from your iPod to this unit. | Turn off this unit and reconnect the Yamaha iPod universal dock to the DOCK terminal of this unit. | 16 |
| | | Remove your iPod in the Yamaha iPod universal dock and then place it back in the dock. | 16 |
| Unknown iPod | The iPod being used is not supported by this unit. | This unit supports iPod Touch, iPod (Click Wheel), iPod nano and iPod mini. | — |
| iPod Connected | Your iPod is properly placed in the Yamaha iPod universal dock. | | |

| Problem | Cause | Remedy | See page |
|---|---|---|---|
| Disconnected | Your iPod is removed from the Yamaha iPod universal dock. | Place your iPod in the Yamaha iPod universal dock. | 16 |
| Unable to play | This unit cannot play back the songs currently stored on your iPod. | Check that the songs currently stored on your iPod are playable. | — |
| | | Store some other playable music files on your iPod. | — |

## Bluetooth™

| Problem | Cause | Remedy | See page |
|---|---|---|---|
| Searching... | The Bluetooth wireless audio receiver and the Bluetooth component are in the middle of the pairing. | | |
| | The Bluetooth wireless audio receiver and the Bluetooth component are in the middle of establishing the connection. | | |
| Completed | The pairing is completed. | | |
| Canceled | The pairing is canceled. | | |
| BT Connected | The connection between the Yamaha Bluetooth wireless audio receiver and the Bluetooth component is established. | | |
| BT Disconnected | The Bluetooth component is disconnected from the Yamaha Bluetooth wireless audio receiver. | | |

## Auto Setup (YPAO)

### Notes

- If the "ERROR" or "WARNING" screen appears, resolve the problem and then run "Auto Setup" again.
- Warning message "W-2" or "W-3" indicates that the adjusted settings may not be optimal.
- Depending on the speakers, warning message "W-1" may appears even if the speaker connections are correct.
- If error message "E-10" occurs repeatedly, contact a qualified Yamaha service center.

### Before Auto Setup

| Error message | Cause | Remedy | See page |
|---|---|---|---|
| Connect MIC! | Optimizer microphone is not connected. | Connect the supplied optimizer microphone to the OPTIMIZER MIC jack on the front panel. | 18 |
| Unplug HP! | Headphones are connected. | Unplug the headphones. | — |
| Memory Guard! | The parameters of this unit are protected. | Set "Memory Guard" to "Off." | 43 |

### During Auto Setup

| Error message | Cause | Remedy | See page |
|---|---|---|---|
| E-1:NO FRONT SP | Front L/R channel signals are not detected. | Check the front L/R speaker connections. | 11 |
| E-2:NO SUR. SP | Only a signal from one of the surround channels are detected. | Check the surround L/R speaker connections. | 11 |

| Error message | Cause | Remedy | See page |
|---|---|---|---|
| E-4:SBR->SBL | Only right surround back channel signal is detected. | If you connect only one surround back speaker, connect it to the L-side (SINGLE) terminal. | 11 |
| E-5:NOISY | Measurement cannot be performed accurately due to loud ambient noise. | Try running "Auto Setup" in a quiet environment. | — |
| | | Turn off noisy electric equipment like air conditioners or move them away from the optimizer microphone. | — |
| E-6:CHECK SUR. | Surround back speakers are connected, though surround L/R speakers are not. | When using surround back speakers, you need to connect surround L/R speakers. | 11 |
| E-7:NO MIC | The optimizer microphone was unplugged during the "Auto Setup" procedure. | Do not touch the optimizer microphone during "Auto Setup." | 18 |
| E-8:NO SIGNAL | The optimizer microphone does not detect test tones. | Check whether the microphone is properly placed. | 18 |
| | | Check whether the speakers are properly placed and connected. | 11 |
| | | The optimizer microphone or OPTIMIZER MIC jack may be defective. Contact the nearest Yamaha dealer or service center. | 18 |
| E-9:USER CANCEL | "Auto Setup" was cancelled due to an inappropriate user operation. | Run "Auto Setup" again. | 18 |
| E-10:INTERNAL ERROR | An internal error occurred. | Run "Auto Setup" again. | 18 |

## After Auto Setup

| Error message | Cause | Remedy | See page |
|---|---|---|---|
| W-1:OUT OF PHASE | Speaker polarity is not correct. This message may appear depending on the speakers even when the speakers are connected correctly. | Check the polarities (+, –) of the displayed speaker. If they are correct, the speakers work properly even when this message is displayed. | 11 |
| W-2:OVER 24m (80ft) | The distance between the speaker and the listening position is over 24 m (80 ft). | Bring the speaker within 24 m (80 ft.) area around the listening position. | — |
| W-3:LEVEL ERROR | The difference of volume level among speakers is excessive. | Recheck the speaker positions and make sure all speakers are placed in a similar environment. | — |
| | | Check the polarities (+, –) of the speakers. | 11 |
| | | We recommended that you use speakers with the same or similar specifications. | — |
| | | Adjust the output volume of the subwoofer. | — |

# Glossary

## ■ Audio and video synchronization (lip sync)

Lip sync, an abbreviation for lip synchronization, is a technical term that involves both a problem and a capability of maintaining audio and video signals synchronized during post-production and transmission. Whereas the audio and video latency requires complex end-user adjustments, HDMI version 1.3 incorporates an automatic audio and video syncing capability that allows devices to perform this synchronization automatically and accurately without user interaction.

## ■ Bi-amplification connection

A bi-amplification connection uses two amplifiers for a speaker. One amplifier is connected to the woofer section of a loudspeaker while the other is connected to the combined mid and tweeter section. With this arrangement each amplifier operates over a restricted frequency range. This restricted range presents each amplifier with a much simpler job and each amplifier is less likely to influence the sound in some way.

## ■ Component video signal

With the component video signal system, the video signal is separated into the Y signal for the luminance and the PB and PR signals for the chrominance. Color can be reproduced more faithfully with this system because each of these signals is independent. The component signal is also called the "color difference signal" because the luminance signal is subtracted from the color signal. A monitor with component input jacks is required in order to output component signals.

## ■ Composite video signal

With the composite video signal system, the video signal is composed of three basic elements of a video picture: color, brightness and synchronization data. A composite video jack on a video component transmits these three elements combined.

## ■ Deep Color

Deep Color refers to the use of various color depths in displays, up from the 24-bit depths in previous versions of the HDMI specification. This extra bit depth allows HDTVs and other displays go from millions of colors to billions of colors and eliminate on-screen color banding for smooth tonal transitions and subtle gradations between colors. The increased contrast ratio can represent many times more shades of gray between black and white. Also Deep Color increases the number of available colors within the boundaries defined by the RGB or YCbCr color space.

## ■ Dolby Digital

Dolby Digital is a digital surround sound system that gives you completely independent multi-channel audio. With 3 front channels (front L/R and center), and 2 surround stereo channels, Dolby Digital provides 5 full-range audio channels. With an additional channel especially for bass effects, called LFE (Low Frequency Effect), the system has a total of 5.1-channels (LFE is counted as 0.1 channel). By using 2-channel stereo for the surround speakers, more accurate moving sound effects and surround sound environment are possible than with Dolby Surround. The wide dynamic range from maximum to minimum volume reproduced by the 5 full-range channels and the precise sound orientation generated using digital sound processing provide listeners with unprecedented excitement and realism.
With this unit, any sound environment from monaural up to a 5.1-channel configuration can be freely selected for your enjoyment.

## ■ Dolby Digital Surround EX

Dolby Digital EX creates 6 full-bandwidth output channels from 5.1-channel sources.
For the best results, Dolby Digital EX should be used with movie sound tracks recorded with Dolby Digital Surround EX. With this additional channel, you can experience more dynamic and realistic moving sound especially with scenes with "fly-over" and "fly-around" effects.

## ■ Dolby Digital Plus

Dolby Digital Plus is an advanced audio technology developed for high-definition programming and media including HD broadcasts, and Blu-ray Disc. Selected as an optional audio standard for Blu-ray Disc, this technology delivers multichannel sound with discrete channel output. Supporting bitrates up to 6.0 Mbps, Dolby Digital Plus can carry up to 7.1 discreet audio channels simultaneously. Supported by HDMI version 1.3 and designed for the optical disc players and AV receivers/amplifiers of the future, Dolby Digital Plus also remains fully compatible with the existing multichannel audio systems that incorporate Dolby Digital.

## ■ Dolby Pro Logic II

Dolby Pro Logic II is an improved technique used to decode vast numbers of existing Dolby Surround sources. This new technology enables a discrete 5-channel playback with 2 front left and right channels, 1 center channel, and 2 surround left and right channels instead of only 1 surround channel for conventional Pro Logic technology. There are three modes available: "Music mode" for music sources, "Movie mode" for movie sources and "Game mode" for game sources.

## ■ Dolby Pro Logic IIx

Dolby Pro Logic IIx is a new technology enabling discrete multichannel playback from 2-channel or multi-channel sources. There are three modes available: "Music mode" for music sources, "Movie mode" for movie sources (for 2-channel sources only) and "Game mode" for game sources.

## ■ Dolby Surround

Dolby Surround is widely used with nearly all video tapes and laser discs, and in many TV and cable broadcasts as well. Dolby Surround uses a 4-channel analog recording system to reproduce realistic and dynamic sound effects: 2 front left and right channels (stereo), a center channel for dialog (monaural), and a surround channel for special sound effects (monaural). The surround channel reproduces sound within a narrow frequency range. The Dolby Pro Logic decoder built into this unit employs a digital signal processing system that automatically stabilizes the volume on each channel to enhance moving sound effects and directionality.

## ■ Dolby TrueHD

Dolby TrueHD is an advanced lossless audio technology developed for high-definition disc-based media including Blu-ray Disc. Selected as an optional audio standard for Blu-ray Disc, this technology delivers sound that is bit-for-bit identical to the studio master, offering a high-definition home theater experience.
Supporting bitrates up to 18.0 Mbps, Dolby TrueHD can carry up to 8 discrete channels of 24-bit/96 kHz audio simultaneously.
Dolby TrueHD also remains fully compatible with the existing multichannel audio systems and retains the metadata capability of Dolby Digital, allowing dialog normalization and dynamic range control.

## ■ DSD

Direct Stream Digital (DSD) technology stores audio signals on digital storage media, such as Super Audio CDs. Using DSD, signals are stored as single bit values at a high-frequency sampling rate of 2.8224 MHz, while noise shaping and oversampling are used to reduce distortion, a common occurrence with very high quantization of audio signals. Due to the high sampling rate, better audio quality can be achieved than that offered by the PCM format used for normal audio CDs. The frequency is equal to or higher than 100 kHz and the dynamic range is 120 dB. This unit can transmit or receive DSD signals via the HDMI jack.

## ■ DTS 96/24

DTS 96/24 offers an unprecedented level of audio quality for multi-channel sound on DVD video, and is fully backward-compatible with all DTS decoders. "96" refers to a 96 kHz sampling rate compared to the typical 48 kHz sampling rate. "24" refers to 24-bit word length. DTS 96/24 offers sound quality transparent to the original 96/24 master, and 96/24 5.1-channel sound with full-quality full-motion video for music programs and motion picture soundtracks on DVD video.

## ■ DTS Digital Surround

DTS digital surround was developed to replace the analog soundtracks of movies with a 5.1-channel digital sound track, and is now rapidly gaining popularity in movie theaters around the world. DTS, Inc. has developed a home theater system so that you can enjoy the depth of sound and natural spatial representation of DTS digital surround in your home. This system produces practically distortion-free 6-channel sound (technically, front left and right, center, surround left and right, and LFE 0.1 (subwoofer) channels for a total of 5.1 channels). This unit incorporates a DTS-ES decoder that enables 6.1-channel reproduction by adding the surround back channel to the existing 5.1-channel format.

## ■ DTS Express

This is an audio format for next-generation optical discs such as Blu-ray discs. It uses optimized low bit rate signals for network streaming. In the case of a Blu-ray disc, this format is used with secondary audio, enabling you to enjoy the commentary of the movie producer via the Internet while playing the main program.

## ■ DTS-HD High Resolution Audio

DTS-HD High Resolution Audio is a high resolution audio technology developed for high-definition disc-based media including Blu-ray Disc. Selected as an optional audio standard for Blu-ray Disc, this technology delivers sound that is virtually indistinguishable from the original, offering a high-definition home theater experience. Supporting bitrates up to 6.0 Mbps for Blu-ray Disc, DTS-HD High Resolution Audio can carry up to 7.1 discrete channels of 24-bit/96 kHz audio simultaneously.
DTS-HD High Resolution Audio also remains fully compatible with the existing multichannel audio systems that incorporate DTS Digital Surround.

## ■ DTS-HD Master Audio

DTS-HD Master Audio is an advanced lossless audio technology developed for high-definition disc-based media including Blu-ray Disc. Selected as an optional audio standard for Blu-ray Disc, this technology delivers sound that is bit-for-bit identical to the studio master, offering a high-definition home theater experience. Supporting bitrates up to 24.5 Mbps for Blu-ray Disc, DTS-HD Master Audio can carry up to 7.1 discrete channels of 24-bit/96 kHz audio simultaneously. Supported by HDMI version 1.3 and designed for the optical disc players and AV receivers/amplifiers of the future, DTS-HD Master Audio also remains fully compatible with the existing multichannel audio systems that incorporate DTS Digital Surround.

## ■ HDMI

HDMI (High-Definition Multimedia Interface) is the first industry-supported, uncompressed, all-digital audio/video interface. Providing an interface between any source (such as a set-top box or AV receiver) and an audio/video monitor (such as a digital television), HDMI supports standard, enhanced or high-definition video as well as multi-channel digital audio using a single cable. HDMI transmits all ATSC HDTV standards and supports 8-channel digital audio, with bandwidth to spare to accommodate future enhancements and requirements.
When used in combination with HDCP (High-bandwidth Digital Content Protection), HDMI provides a secure audio/video interface that meets the security requirements of content providers and system operators. For further information on HDMI, visit the HDMI website at "http://www.hdmi.org/."

## ■ LFE 0.1 channel

This channel reproduces low-frequency signals. The frequency range of this channel is from 20 Hz to 120 Hz. This channel is counted as 0.1 because it only enforces a low-frequency range compared to the full-range reproduced by the other 5/6 channels in Dolby Digital or DTS 5.1/6.1-channel systems.

## ■ Neo:6

Neo:6 decodes the conventional 2-channel sources for 6- channel playback by the specific decoder. It enables playback with the full-range channels with higher separation just like digital discrete signal playback. There are two modes available: "Music mode" for music sources and "Cinema mode" for movie sources.

## ■ PCM (Linear PCM)

Linear PCM is a signal format under which an analog audio signal is digitized, recorded and transmitted without using any compression. This is used as a method of recording CDs and DVD audio. The PCM system uses a technique for sampling the size of the analog signal per very small unit of time. Standing for "Pulse Code Modulation," the analog signal is encoded as pulses and then modulated for recording.

## ■ Sampling frequency and number of quantized bits

When digitizing an analog audio signal, the number of times the signal is sampled per second is called the sampling frequency, while the degree of fineness when converting the sound level into a numeric value is called the number of quantized bits. The range of rates that can be played back is determined based on the sampling rate, while the dynamic range representing the sound level difference is determined by the number of quantized bits. In principle, the higher the sampling frequency, the wider the range of frequencies that can be played back, and the higher the number of quantized bits, the more finely the sound level can be reproduced.

## ■ "x.v.Color"

A color space standard supported by HDMI version 1.3. It is a more extensive color space than sRGB, and allows the expression of colors that could not be expressed before. While remaining compatible with the color gamut of sRGB standards, "x.v.Color" expands the color space and can thus produce more vivid, natural images. It is particularly effective for still pictures and computer graphics.

# Sound field program information

## ■ CINEMA DSP

Since the Dolby Surround and DTS systems were originally designed for use in movie theaters, their effect is best felt in a theater having many speakers designed for acoustic effects. Since home conditions, such as room size, wall material, number of speakers, and so on, can differ so widely, it is inevitable that there are differences in the sound heard.

Based on a wealth of actually measured data, Yamaha CINEMA DSP provides the audiovisual experience of a movie theater in the listening room of your own home by using the Yamaha original sound field technology combined with various digital audio systems.

## ■ SILENT CINEMA

Yamaha has developed a natural, realistic sound effect DSP algorithm for headphones. Parameters for headphones have been set for each sound field so that accurate representations of all the sound field programs can be enjoyed on headphones.

## ■ Virtual CINEMA DSP

Yamaha has developed a Virtual CINEMA DSP algorithm that allows you to enjoy DSP sound field surround effects even without any surround speakers by using virtual surround speakers. It is even possible to enjoy Virtual CINEMA DSP using a minimal two-speaker system that does not include a center speaker.

## ■ Compressed Music Enhancer

The Compressed Music Enhancer feature of this unit enhances your listening experience by regenerating the missing harmonics in a compression artifact. As a result, flattened complexity due to the loss of high-frequency fidelity as well as lack of bass due to the loss of low-frequency bass is compensated, providing improved performance of the overall sound system.

# Information on HDMI™

## ■ HDMI signal compatibility

### Audio signals

| Audio signal types | Audio signal formats | Compatible media |
|---|---|---|
| 2ch Linear PCM | 2ch, 32-192 kHz, 16/20/24 bit | CD, DVD-Video, DVD-Audio, etc. |
| Multi-ch Linear PCM | 8ch, 32-192 kHz, 16/20/24 bit | DVD-Audio, Blu-ray Disc, HD DVD, etc. |
| DSD | 2/5.1ch, 2.8224 MHz, 1 bit | SA-CD, etc. |
| Bitstream | Dolby Digital, DTS | DVD-Video, etc. |
| Bitstream (High definition audio) | Dolby TrueHD, Dolby Digital Plus, DTS-HD Master Audio, DTS-HD High Resolution Audio, DTS Express | Blu-ray Disc, HD DVD, etc. |

- If the input source component can decode the bitstream audio signals of audio commentaries, you can play back the audio sources with the audio commentaries mixed down by using the DIGITAL INPUT OPTICAL (or COAXIAL) connections.
- Refer to the supplied instruction manuals of the input source component, and set the component appropriately.

***Notes***

- When CPPM copy-protected DVD-Audio is played back, video and audio signals may not be output depending on the type of the DVD player.
- This unit is not compatible with HDCP-incompatible HDMI or DVI components.
- To decode audio bitstream signals on this unit, set the input source component appropriately so that the component outputs the bitstream audio signals directly (does not decode the bitstream signals on the component). Refer to the supplied instruction manuals for details.
- This unit is not compatible with the audio commentary features (for example, the special audio contents downloaded via Internet) of Blu-ray Disc or HD DVD. This unit does not play back the audio commentaries of the Blu-ray Disc or HD DVD contents.

### Video signals

This unit is compatible with the video signals of the following resolutions:

- 480i/60 Hz
- 576i/50 Hz
- 480p/60 Hz
- 576p/50 Hz
- 720p/60 Hz, 50 Hz
- 1080i/60 Hz, 50 Hz
- 1080p/60 Hz, 50 Hz, 24 Hz

# Specifications

## AUDIO SECTION

- Minimum RMS Output Power for Front, Center, Surround, Surround back
  [U.S.A. and Canada models]
  1 kHz, 0.9% THD, 8 Ω ..... 90 W
  [Other models]
  1 kHz, 0.9% THD, 6 Ω ..... 90 W
- Dynamic Power (IHF)
  [U.S.A. and Canada models]
  Front Speakers 8/6/4/2 Ω ..... 95/110/130/150 W
  [Other models]
  Front Speakers 6/4/2 Ω ..... 100/110/125 W
- Maximum Useful Output Power (JEITA) [China, Korea, General and Asia models]
  1 kHz, 10% THD, 6 Ω ..... 115 W
- Maximum Output Power [U.K., Europe, Russia and Asia models]
  1 kHz, 0.7% THD, 4 Ω ..... 105 W
- Dynamic Headroom [U.S.A. and Canada models]
  8 Ω.....0.23 dB
- IEC Output Power [U.K., Europe, Russia and Asia models]
  Front Speakers 1 kHz, 0.9% THD, 8 Ω ..... 90 W
- Input Sensitivity/Input Impedance
  AV5, etc.....200 mV/47 kΩ
- Maximum Input Voltage
  AV5, etc. (1 kHz, 0.5% THD).....2.0 V or more
- Rated Output Voltage/Output Impedance
  AUDIO OUT.....200 mV/1.2 kΩ
  SUBWOOFER (2ch Stereo & Front: Small)
  ..... 1.0 V/1.2 kΩ
- Headphone Jack Rated Output/Impedance
  AV5, etc. (1 kHz, 50 mV, 8 Ω)..... 100 mV/470 Ω
- Frequency Response
  AV5 to FRONT .....10 Hz to 100 kHz, +0/–3 dB
- Total Harmonic Distortion
  AV5, etc. to FRONT, Pure Direct
  [U.S.A. and Canada models]
  (1 kHz, 50 W, 8 Ω).....0.06% or less
  [Other models]
  (1 kHz, 50 W, 6 Ω).....0.06% or less
- Signal to Noise Ratio (IHF-A Network)
  AV5, etc. Input Shorted (250 mV to Front Speakers)
  ..... 100 dB or more
- Residual Noise (IHF-A Network)
  Front Speakers..... 150 μV or less
- Channel Separation (1 kHz/10 kHz)
  AV5, etc. (5.1 kΩ shorted) ..... 60 dB/45 dB or more
- Volume Control ..... MUTE / –80 dB to +16.5 dB
- Tone Control (Front Speakers)
  BASS Boost/Cut.....±10 dB at 50 Hz
  BASS Turnover Frequency .....350 Hz
  TREBLE Boost/Cut .....±10 dB at 20 kHz
  TREBLE Turnover Frequency .....3.5 kHz
- Filter Characteristics (fc=40/60/80/90/100/110/120/160/200 Hz)
  H.P.F. (Front, Center, Surround, Surround back: Small)
  .....12 dB/oct.
  L.P.F. (Subwoofer) .....24 dB/oct.

## VIDEO SECTION

- Video Signal Type (Gray Back)
  [U.S.A., Canada, Korea and General models].....NTSC
  [Other models].....PAL
- Video Signal Type (Video Conversion) ..... NTSC/PAL
- Signal Level
  Composite..... 1 Vp-p/75 Ω
  S-video [U.K., Europe and Russia models]
  ..... 1 Vp-p/75 Ω (Y), 0.286 Vp-p/75 Ω (C)
  Component.....1 Vp-p/75 Ω (Y)
- Maximum Input Level (Video Conversion Off)
  .....1.5 Vp-p or more
- Signal to Noise Ratio.....50 dB or more
- Frequency Response [MONITOR OUT]
  Component (Video Conversion Off)
  ..... 5 Hz to 60 MHz, –3 dB

## FM SECTION

- Tuning Range
  [U.S.A. and Canada models] ..... 87.5 to 107.9 MHz
  [Asia and General models] ..... 87.5/87.50 to 108.0/108.00 MHz
  [Other models]..... 87.50 to 108.00 MHz
- 50 dB Quieting Sensitivity (IHF)
  Mono..... 3.0 μV (20.8 dBf)
- Signal to Noise Ratio (IHF)
  Mono/Stereo ..... 74 dB/69 dB
- Harmonic Distortion (1 kHz)
  Mono/Stereo ..... 0.3/0.3%
- Antenna Input (unbalanced) .....75 Ω

## AM SECTION

- Tuning Range
  [U.S.A. and Canada models] ..... 530 to 1710 kHz
  [Asia and General models] .....530/531 to 1710/1611 kHz
  [Other models]..... 531 to 1611 kHz

## GENERAL

- Power Supply
  [U.S.A. and Canada models] ..... AC 120 V, 60 Hz
  [General models] ..... AC 110/120/220/230–240 V, 50/60 Hz
  [China model]..... AC 220 V, 50 Hz
  [Korea model]..... AC 220 V, 60 Hz
  [Australia model]..... AC 240 V, 50 Hz
  [U.K., Europe and Russia models] ..... AC 230 V, 50 Hz
  [Asia models]..... AC 220/230–240 V, 50/60 Hz
- Power Consumption
  [U.S.A. and Canada models] .....270 W/320 VA
  [Other models]..... 280 W
- Standby Power Consumption
  Standby through off .....0.2 W or less
  Standby through on.....3 W or less
- Maximum Power Consumption
  [Asia and General models] .....490 W
- Dimensions (W x H x D).....435 x 151 x 364 mm (17-1/8 x 6 x 14-3/8 in)
- Weight..... 8.5 kg (18.7 lbs)

* Specifications are subject to change without notice.

# Index


## ■ Numerics

1 Dynamic Range, sound setup ....41
1 HDMI, function setup ....42
2 Display, function setup ....42
2 Lipsync, sound setup ....41
2ch Stereo, sound field program ....25
3 Volume, function setup ....43
4 Input Rename, function setup ....43
5.1-channel speaker layout ....10
6.1-channel speaker layout ....10
7.1-channel speaker layout ....10
7ch Enhancer, sound field program ....26
7ch Stereo, sound field program ....26

## ■ A

A)Config, speaker setup ....39
Action Game, sound field program ....25
Adaptive DRC, 3 Volume, function setup ....43
Adjusting high frequency sound ....22
Adjusting low frequency sound ....22
Advanced setup ....45
Adventure, sound field program ....24
AM antenna connection ....17
AM tuning ....28
AM, front panel ....4
ANTENNA jack, rear panel ....5
Aspect, 1 HDMI, function setup ....42
AUDIO 1/2, rear panel ....5
Audio and video player connection ....15
AUDIO jack ....13
Audio jack ....13
AUDIO L/R jack, front panel ....4
AUDIO OUT, rear panel ....5
Audio Output, 1 HDMI, function setup ....42
Audio player connection ....16
Auto Delay, 2 Lipsync, sound setup ....42
Auto Preset, OPTION menu ....35
Auto Setup (YPAO), troubleshooting ....51
Automatic setup ....18
AV 1-6, rear panel ....5
AV OUT, rear panel ....5

## ■ B

B)Level, speaker setup ....41
Basic operation, setup menu ....39
BI-AMP connection switch, advanced setup ....45
BI-AMP, advanced setup ....45
Bluetooth component playback ....32
Bluetooth wireless audio receiver connection ....16
Bluetooth, troubleshooting ....51

## ■ C

C)Distance, speaker setup ....41
C.Image, decoder parameter ....37
Cellar Club, sound field program ....25
Center SP, A)Config, speaker setup ....40
Center speaker ....10
Center width, decoder parameter ....37
Center, C)Distance, speaker setup ....41
Chamber, sound field program ....25
CINEMA DSP indicator, front panel display ....6
CINEMA DSP parameter ....36
Clear Preset, OPTION menu ....35
COAXIAL jack ....13
CODE SET, remote control ....7
COMPONENT VIDEO jack ....13
Connect, OPTION menu ....35
Connecting AM antenna ....17
Connecting audio and video player ....15
Connecting audio player ....16
Connecting Bluetooth wireless audio receiver ....16
Connecting FM antenna ....17
Connecting iPod universal dock ....16
Connecting power cable ....17
Connecting projector ....14
Connecting set-top box ....15
Connecting speaker ....11
Connecting speaker cable ....12
Connecting TV monitor ....14
Connection ....10
Controlling other component, remote control ....44
Crossover Freq., A)Config, speaker setup ....40
CT Level, sound field parameter ....37
Cursor indicator, front panel display ....6
Cursors △ / ▽ / ◁ / ▷, remote control ....7

## ■ D

D)Equalizer, speaker setup ....41
Decoder Mode, OPTION menu ....34
Decoder parameter ....37
Dimension, decoder parameter ....37
Dimmer, 2 Display, function setup ....42
DIRECT, front panel ....4
Direct, sound field parameter ....37
Disconnect, OPTION menu ....35
DISPLAY, remote control ....7
Displaying input signal information ....23
DOCK terminal, rear panel ....5
Drama, sound field program ....25
DSP Level, sound field parameter ....36
DSP Parameter, setup menu ....43

## ■ E

E)Test Tone, speaker setup ....41
Editing sound field program ....36
Editing surround decoder ....36
Effect Level, sound field parameter ....37
ENTER, remote control ....7
EQ Type Select, D)Equalizer, speaker setup ....41
Extended Surround, OPTION menu ....34
External component operation key, remote control ....7

## ■ F

FL Scroll, 2 Display, function setup ....42
FM antenna connection ....17
FM Mode, OPTION menu ....34
FM tuning ....28
FM, front panel ....4
Frequency tuning ....28
Front L, C)Distance, speaker setup ....41
Front left speaker ....10
Front panel ....4
Front panel display ....6
Front panel display, front panel ....4
Front R, C)Distance, speaker setup ....41
Front right speaker ....10
Front SP, A)Config, speaker setup ....40
Function setup, setup menu ....42

## ■ H

Hall in Munich, sound field program ....25
Hall in Vienna, sound field program ....25
HDMI Auto, 2 Lipsync, sound setup ....41
HDMI indicator, front panel display ....6
HDMI information ....55
HDMI jack ....13
HDMI OUT/HDMI 1-4, rear panel ....5
HDMI THROUGH, front panel ....4
HDMI, troubleshooting ....49
Headphones using ....22
Hi-fi sound playback ....22
High frequency sound adjustment ....22

## ■ I

INFO, front panel ....4
INFO, remote control ....7
INIT, advanced setup ....45
Init. Volume, 3 Volume, function setup ....43
Initialize setting, advanced setup ....45
INPUT ◁ / ▷, front panel ....4
Input selection key, remote control ....7
Input signal information displaying ....23
Input source registration ....21
Installing batteries, remote control ....9
iPod playback ....30
iPod universal dock connection ....16
iPod, troubleshooting ....50

## ■ L

LFE/Bass Out, A)Config, speaker setup ....39
Low frequency sound adjustment ....22

## ■ M

Manual Delay, 2 Lipsync, sound setup ....42
Max Volume, 3 Volume, function setup ....43
Memory guard, setup menu ....43
MEMORY, front panel ....4
MON.CHK, advanced setup ....45
MONITOR OUT, rear panel ....5
Mono Movie, sound field program ....25
Multi information display, front panel display ....6
Music Video, sound field program ....25
MUTE indicator, front panel display ....6
MUTE, remote control ....7

## ■ N

Numeric key, remote control ....7

## ■ O

OPTICAL jack ....13
OPTIMIZER MIC jack, front panel ....4
OPTION menu ....33
OPTION, remote control ....7
OSD Shift, 2 Display, function setup ....43

## ■ P

Pairing Bluetooth components ....32
Pairing, OPTION menu ....35
Panorama, decoder parameter ....37
PHONES jack, front panel ....4
Placing speaker ....10
PORTABLE jack, front panel ....4
Power cable connection ....17
Power Cable, rear panel ....5
POWER, remote control ....7
PRE OUT, rear panel ....5
PRESET ◁ / ▷, front panel ....4
Preset tuning ....28
PROGRAM ◁ / ▷, front panel ....4
Projector connection ....14

## ■ R

Registering input source ....21
Registering sound field program ....21
Remote control ....7
Remote control code resetting ....44
Remote control code setting ....44
Remote control ID, advanced setup ....45
Remote control signal transmitter, remote control ....7
Remote control, controlling other component ....44
Remote control, preparation ....9
Remote control, troubleshooting ....50
REMOTE ID, advanced setup ....45
Repeat playback, iPod ....31
Repeat, OPTION menu ....35
Resetting remote control code ....44
Resolution, 1 HDMI, function setup ....42
RETURN, remote control ....7


APPENDIX

English

Roleplaying Game, sound field program ..... 25

## ■ S

SB Level, sound field parameter ..... 37
SCENE function ..... 21
SCENE, front panel ..... 4
SCENE, remote control ..... 7
Sci-Fi, sound field program ..... 24
Selecting SCENE ..... 21
Setting remote control code ..... 44
Set-top box connection ..... 15
Setup menu ..... 38
Setup menu basic operation ..... 39
SETUP, remote control ..... 7
Shuffle playback, iPod ..... 31
Shuffle, OPTION menu ..... 35
Signal Info parameter ..... 34
Signal Info, OPTION menu ..... 34
SILENT CINEMA ..... 27
SL Level, sound field parameter ..... 37
SLEEP indicator, front panel display ..... 6
Sleep timer ..... 22
SLEEP, remote control ..... 7
Sound field parameter ..... 36
Sound field program editing ..... 36
Sound field program registration ..... 21
Sound selection key, remote control ..... 7
Sound setup, setup menu ..... 41
SOURCE POWER, remote control ..... 7
SP IMP., advanced setup ..... 45
Speaker cable connection ..... 12
Speaker connection ..... 11
Speaker impedance, advanced setup ..... 45
Speaker indicator, front panel display ..... 6
Speaker layout ..... 10
Speaker placement ..... 10
Speaker setup ..... 39
SPEAKERS terminal, rear panel ..... 5
Specifications ..... 56
Spectacle, sound field program ..... 24
Sports, sound field program ..... 25
SR Level, sound field parameter ..... 37
Standard, sound field program ..... 24
Standby Through, 1 HDMI, function setup ..... 42
STANDBY/ON, front panel ..... 4
Straight decoding mode ..... 27
Straight Enhancer, sound field program ..... 26
STRAIGHT, front panel ..... 4
Subwoofer ..... 10
Subwoofer Phase, A)Config, speaker setup ..... 40
Sur. L, C)Distance, speaker setup ..... 41
Sur. L/R SP, A)Config, speaker setup ..... 40
Sur. R, C)Distance, speaker setup ..... 41
Sur.B L, C)Distance, speaker setup ..... 41
Sur.B L/R SP, A)Config, speaker setup ..... 40
Sur.B R, C)Distance, speaker setup ..... 41
Surround back left speaker ..... 10
Surround back right speaker ..... 10
Surround back speaker ..... 10
Surround decoder editing ..... 36
Surround left speaker ..... 10
Surround right speaker ..... 10
SWFR, C)Distance, speaker setup ..... 41

## ■ T

The Bottom Line, sound field program ..... 25
The Roxy Theatre, sound field program ..... 25
Tone control ..... 22
TONE CONTROL, front panel ..... 4
TRANSMIT, remote control ..... 7
Troubleshooting ..... 46
Tuner indicator, front panel display ..... 6
Tuner key, remote control ..... 7
Tuner, troubleshooting ..... 49
TUNING ◁ / ▷, front panel ..... 4
Tuning, AM ..... 28
Tuning, FM ..... 28
Turning off ..... 17
Turning on ..... 17
TV control key, remote control ..... 7
TV monitor connection ..... 14

## ■ U

Using the remote control ..... 9

## ■ V

VIDEO jack ..... 13
Video jack ..... 13
VIDEO jack, front panel ..... 4
Video/audio jack ..... 13
Virtual CINEMA DSP ..... 27
VOLUME +/-, remote control ..... 7
VOLUME control, front panel ..... 4
VOLUME indicator, front panel display ..... 6
Volume Trim, OPTION menu ..... 33

## ■ Y

YPAO ..... 18
YPAO, troubleshooting ..... 51

"Ⓐ**STANDBY/ON**" or "6 **POWER**" (example) indicates the name of the parts on the front panel or the remote control. Refer to "Part names and functions" on page 4.

# List of remote control codes

## TV

| | |
|---|---|
| A.R. Systems | 0274 |
| Acme | 0260 |
| Acura | 0261, 0273 |
| ADC | 0259 |
| Admiral | 0100, 0224, 0257, 0258, 0259, 0264, 0265 |
| Advent | 0204 |
| Adventura | 0107 |
| Adyson | 0260, 0327, 0328 |
| Agashi | 0327, 0328 |
| Agazi | 0259 |
| Aiko | 0260, 0261, 0273, 0274, 0327, 0328 |
| Aim | 0274 |
| Aiwa | 0028, 0297 |
| Akai | 0063, 0096, 0101, 0205, 0231, 0261, 0262, 0268, 0271, 0273, 0274, 0327, 0328 |
| Akiba | 0262, 0274 |
| Akura | 0259, 0262, 0273, 0274 |
| Alaron | 0327 |
| Alba | 0243, 0260, 0261, 0262, 0266, 0269, 0271, 0273, 0274, 0294, 0300, 0327 |
| Albatron | 0222 |
| Alcyon | 0249 |
| Alleron | 0105 |
| Allorgan | 0328 |
| Allstar | 0268, 0274 |
| America Action | 0225 |
| AMOi | 0326 |
| Amplivision | 0243, 0260, 0275, 0328 |
| Amstrad | 0259, 0261, 0262, 0273, 0274 |
| Amtron | 0104 |
| Anam | 0225, 0261 |
| Anam National | 0102, 0104 |
| Anglo | 0261, 0273 |
| Anitech | 0249, 0259, 0261, 0273, 0274 |
| Ansonic | 0243, 0250, 0261, 0263, 0273, 0274 |
| AOC | 0072, 0090, 0096, 0103 |
| Apex | 0061, 0117, 0139 |
| Arcam | 0327, 0328 |
| Arcam Delta | 0260 |
| Aristona | 0268, 0271, 0274 |
| Arthur Martin | 0275 |
| ASA | 0257, 0265 |
| Asberg | 0249, 0268, 0274 |
| Astra | 0261 |
| Asuka | 0259, 0260, 0262, 0327, 0328 |
| Atlantic | 0260, 0268, 0271, 0274, 0327 |
| Atori | 0261, 0273 |
| Auchan | 0275 |
| Audiosonic | 0243, 0260, 0261, 0262, 0268, 0271, 0274, 0328 |
| AudioTon | 0243, 0260, 0328 |
| Audiovox | 0104, 0144, 0225 |
| Ausind | 0249 |
| Autovox | 0249, 0257, 0259, 0260, 0328 |
| Aventura | 0097 |
| Awa | 0327, 0328 |
| Axion | 0206 |
| Baird | 0328 |
| Bang & Olufsen | 0230, 0257 |
| Basic Line | 0261, 0262, 0268, 0273, 0274, 0328 |
| Bastide | 0260, 0328 |
| Baur | 0271, 0274 |
| Bazin | 0328 |
| Beko | 0243, 0269, 0274, 0282, 0351, 0357, 0372, 0380 |
| Belcor | 0090 |
| Bell & Howell | 0065, 0100 |
| Benq | 0051, 0160, 0315 |
| Beon | 0268, 0271, 0274 |
| Best | 0243 |
| Bestar | 0243, 0268, 0274 |
| Binatone | 0260, 0328 |
| Blue Sky | 0262, 0274 |
| Blue Star | 0270 |
| Boots | 0260, 0328 |
| BPL | 0270, 0274 |
| Bradford | 0104, 0225 |
| Brandt | 0267, 0272 |
| Brillian | 0228 |
| Brinkmann | 0274 |
| Brionvega | 0257, 0268, 0271, 0274 |
| Britannia | 0260, 0327, 0328 |
| Brockwood | 0090 |
| Broksonic | 0063, 0225 |
| Bruns | 0257 |
| BTC | 0262 |
| Bush | 0261, 0262, 0264, 0266, 0268, 0270, 0271, 0273, 0274, 0282, 0286, 0294, 0300, 0328, 0329, 0351, 0388, 0394, 0413 |
| Candle | 0072, 0090, 0096, 0107 |
| Capsonic | 0259 |
| Carena | 0274 |
| Carnivale | 0096 |
| Carrefour | 0266 |
| Carver | 0088 |
| Cascade | 0261, 0273, 0274 |
| Casio | 0317 |
| Cathay | 0268, 0271, 0274 |
| CCE | 0229, 0328 |
| Celebrity | 0057, 0101 |
| Celera | 0117 |
| Centurion | 0268, 0271, 0274 |
| Century | 0257 |
| CGE | 0243, 0249 |
| Changhong | 0117 |
| Chimei | 0323 |
| Cimline | 0261, 0273 |
| Citizen | 0072, 0085, 0090, 0096, 0104 |
| City | 0261, 0273 |
| Clarion | 0225 |
| Clarivox | 0271 |
| Clatronic | 0243, 0249, 0259, 0260, 0261, 0262, 0268, 0269, 0273, 0274, 0328 |
| CMS | 0327 |
| CMS Hightec | 0328 |
| Coby | 0151 |
| Colortyme | 0072, 0090 |
| Commercial Solutions | 0071 |
| Concerto | 0072, 0090 |
| Concorde | 0261, 0273 |
| Condor | 0243, 0260, 0268, 0269, 0273, 0274, 0327 |
| Contec | 0225, 0260, 0261, 0266, 0273, 0327 |
| Contec/Cony | 0094, 0104 |
| Continental Edison | 0267 |
| Cosmel | 0261, 0273 |
| Craig | 0104, 0225 |
| Crosley | 0088, 0119, 0249, 0257 |
| Crown | 0104, 0225, 0243, 0249, 0261, 0268, 0269, 0271, 0273, 0274 |
| CS Electronics | 0260, 0262, 0327 |
| CTC Clatronic | 0263 |
| CTX | 0159 |
| Curtis Mathes | 0065, 0071, 0072, 0085, 0088, 0090, 0096, 0099, 0224 |
| CXC | 0104, 0225 |
| Cybertron | 0262 |
| Cytron | 0202 |
| Daewoo | 0072, 0085, 0090, 0103, 0119, 0245, 0260, 0261, 0268, 0273, 0274, 0281, 0285, 0303, 0321, 0327, 0328, 0344, 0361, 0387 |
| Dainichi | 0262, 0327 |
| Dansai | 0259, 0268, 0271, 0274, 0327, 0328 |
| Dantax | 0243, 0271 |
| Dawa | 0274 |
| Daytron | 0072, 0085, 0090, 0261, 0273 |
| De Graaf | 0264 |
| Decca | 0260, 0268, 0271, 0274, 0328 |
| Dell | 0167, 0195 |
| Denver | 0308, 0312 |
| Desmet | 0268, 0271, 0274 |
| Diamant | 0274 |
| Diamond | 0327 |
| DiamondVision | 0213, 0221 |
| Dimensia | 0099 |
| Disney | 0137 |
| Dixi | 0261, 0268, 0271, 0273, 0274, 0328 |
| Dream Vision | 0415, 0416 |
| DTS | 0261, 0273 |
| Dual | 0260, 0274, 0328 |
| Dual-Tec | 0260, 0261 |
| Dumont | 0076, 0090, 0108, 0257, 0260, 0263, 0328 |
| Durabrand | 0077, 0097, 0133, 0225 |
| Dux | 0271 |
| Dwin | 0224 |
| Dynatron | 0268, 0271, 0274 |
| Dynex | 0181, 0182 |
| Elbe | 0243, 0250, 0274, 0328 |
| Elcit | 0257 |
| Electa | 0270 |
| ELECTRO TECH | 0261 |
| Electroband | 0057, 0101 |
| Electrograph | 0226 |
| Electrohome | 0072, 0090, 0101, 0102 |
| Element | 0180 |
| Elin | 0260, 0268, 0271, 0273, 0274, 0327 |
| Elite | 0262, 0268, 0274 |
| Elman | 0263 |
| Elta | 0261, 0273, 0327 |
| Emerson | 0065, 0072, 0077, 0082, 0085, 0090, 0094, 0095, 0097, 0104, 0105, 0119, 0225, 0243, 0257, 0274 |
| Emprex | 0200 |
| Envision | 0072, 0090, 0096 |
| Epson | 0156, 0201, 0309 |
| Erres | 0268, 0271, 0274 |
| ESA | 0097 |
| ESC | 0328 |
| Etron | 0261 |
| Eurofeel | 0328 |
| Euro-Feel | 0259 |
| Euroline | 0271 |
| Euroman | 0243, 0327, 0328 |
| Euromann | 0259, 0260, 0268, 0274 |
| Europhon | 0260, 0263, 0268, 0274, 0327, 0328 |
| Expert | 0275 |
| Exquisit | 0274 |
| Fenner | 0261, 0273 |
| Ferguson | 0267, 0271, 0272 |
| Fidelity | 0260, 0264, 0274, 0327 |
| Filsai | 0328 |
| Finlandia | 0264 |
| Finlux | 0249, 0257, 0260, 0263, 0268, 0271, 0274, 0328 |
| FIRST LINE | 0260, 0261, 0268 |
| Firstline | 0273, 0274, 0327, 0328 |
| Fisher | 0065, 0243, 0257, 0260, 0266, 0269, 0328 |
| Flint | 0268, 0274 |
| Formenti | 0249, 0257, 0258, 0260, 0271, 0327 |
| Formenti/Phoenix | 0327 |
| Fortress | 0257, 0258 |
| Fraba | 0243, 0274 |
| Friac | 0243 |
| Frontech | 0259, 0261, 0264, 0265, 0273, 0328 |
| Fujitsu | 0023, 0024, 0025, 0105, 0328 |
| Fujitsu General | 0328 |

| | |
|---|---|
| Fujitsu Siemens | 0425, 0426, 0427, 0428, 0429 |
| Funai | 0033, 0034, 0035, 0036, 0037, 0097, 0104, 0105, 0225, 0259 |
| Futuretech | 0104, 0225 |
| Galaxi | 0269, 0274 |
| Galaxis | 0243, 0274 |
| Gateway | 0163, 0226, 0227 |
| GBC | 0261, 0266, 0273 |
| GE | 0069, 0071, 0072, 0073, 0077, 0090, 0099, 0102, 0106, 0112, 0131 |
| Geant Casino | 0275 |
| GEC | 0260, 0265, 0268, 0271, 0274, 0328 |
| Geloso | 0261, 0264, 0273 |
| General Technic | 0261, 0273 |
| Genexxa | 0262, 0265, 0268, 0274 |
| GFM | 0177, 0210 |
| Giant | 0328 |
| Gibralter | 0076, 0090, 0096, 0108 |
| GoldHand | 0327 |
| Goldline | 0274 |
| GoldStar | 0072, 0077, 0085, 0090, 0094, 0096, 0103, 0243, 0260, 0261, 0264, 0268, 0271, 0273, 0274, 0327, 0328 |
| Goodmans | 0164, 0259, 0261, 0266, 0268, 0271, 0273, 0274, 0322, 0328, 0395, 0399, 0412 |
| Gorenje | 0243, 0269 |
| GPM | 0262 |
| GPX | 0211 |
| Gradiente | 0162 |
| Graetz | 0265 |
| Granada | 0249, 0260, 0264, 0266, 0268, 0271, 0274, 0275, 0328 |
| Grandin | 0261, 0262, 0270, 0271 |
| Gronic | 0328 |
| Grundig | 0242, 0243, 0249, 0274, 0356 |
| Grunpy | 0104, 0105, 0225 |
| Haier | 0187, 0207 |
| Halifax | 0259, 0260, 0327, 0328 |
| Hallmark | 0072, 0077, 0090 |
| Hampton | 0260, 0327, 0328 |
| Hanseatic | 0243, 0250, 0260, 0261, 0266, 0268, 0271, 0273, 0274, 0328 |
| Hantarex | 0261, 0273, 0274 |
| Hantor | 0274 |
| Harman/Kardon | 0088 |
| Harvard | 0104, 0225 |
| Harwood | 0273, 0274 |
| Havermy | 0224 |
| HCM | 0259, 0260, 0261, 0270, 0273, 0274, 0328 |
| Hema | 0273, 0328 |
| Hewlett Packard | 0146 |
| Higashi | 0327 |
| HiLine | 0274 |
| Hinari | 0261, 0262, 0266, 0268, 0271, 0273, 0274 |
| Hisawa | 0262, 0270, 0275 |
| Hisense | 0165 |
| Hitachi | 0006, 0014, 0015, 0016, 0042, 0072, 0090, 0094, 0173, 0254, 0255, 0256, 0260, 0264, 0265, 0266, 0274, 0285, 0300, 0319, 0328, 0348, 0349, 0385, 0402, 0410 |
| Hornyphon | 0268, 0274 |
| Hoshai | 0262 |
| Huanyu | 0260, 0327 |
| Hygashi | 0260, 0327, 0328 |
| Hyper | 0260, 0261, 0273, 0327, 0328 |
| Hypson | 0259, 0260, 0268, 0270, 0271, 0274, 0275, 0328 |
| Hyundai | 0223 |
| Iberia | 0274 |
| ICE | 0259, 0260, 0261, 0262, 0268, 0273, 0274, 0327, 0328 |
| ICeS | 0327 |
| Ilo | 0198, 0203 |
| IMA | 0104 |
| Imperial | 0243, 0249, 0265, 0268, 0269, 0274 |
| Indiana | 0268, 0271, 0274 |
| Infinity | 0088 |
| InFocus | 0168, 0277, 0313, 0397, 0430 |
| Ingelen | 0265 |
| Ingersol | 0261, 0273 |
| Initial | 0203 |
| Inno Hit | 0249, 0260, 0261, 0262, 0268, 0271, 0273, 0274, 0328 |
| Innovation | 0259, 0261 |
| Insignia | 0182, 0188, 0190, 0209 |
| Inteq | 0076 |
| Interactive | 0243 |
| Interbuy | 0261, 0273 |
| Interfunk | 0243, 0257, 0265, 0268, 0271, 0274 |
| International | 0327 |
| Intervision | 0243, 0259, 0260, 0263, 0274, 0328 |
| Irradio | 0249, 0261, 0262, 0268, 0271, 0273, 0274 |
| Isukai | 0262, 0274 |
| ITC | 0260, 0328 |
| ITS | 0262, 0268, 0270, 0274, 0327 |
| ITT | 0261, 0265 |
| ITV | 0261, 0271, 0274 |
| Janeil | 0107 |
| JBL | 0088 |
| JC Penney | 0072, 0073, 0085, 0090, 0099, 0103, 0106 |
| JCB | 0057, 0101 |
| Jensen | 0072, 0090 |
| JVC | 0017, 0018, 0019, 0092, 0093, 0094, 0106, 0251, 0252, 0266, 0268, 0293, 0360, 0379 |
| Kaisui | 0260, 0261, 0262, 0270, 0273, 0274, 0327, 0328 |
| Kamosonic | 0260 |
| Kamp | 0260, 0327 |
| Kapsch | 0265 |
| Karcher | 0243, 0260, 0261, 0271, 0274 |
| Kawasho | 0072, 0090, 0101, 0327 |
| KEC | 0225 |
| Kendo | 0243, 0263, 0264, 0274 |
| Kenwood | 0072, 0090, 0096 |
| KIC | 0328 |
| Kingsley | 0260, 0327 |
| KLH | 0117 |
| Kloss Novabeam | 0104, 0107 |
| Kneissel | 0243, 0250, 0274 |
| Kolster | 0268, 0274 |
| Konka | 0262 |
| Korpel | 0268, 0271, 0274 |
| Korting | 0243, 0257 |
| Kosmos | 0274 |
| Koyoda | 0261 |
| KTV | 0085, 0096, 0104, 0225, 0229, 0260, 0328 |
| Kyoto | 0327, 0328 |
| Lasat | 0243 |
| Lenco | 0261, 0273 |
| Lenoir | 0260, 0261, 0273 |
| Leyco | 0259, 0268, 0271, 0274 |
| LG | 0016, 0038, 0039, 0077, 0103, 0145, 0222, 0243, 0246, 0253, 0260, 0261, 0264, 0268, 0271, 0273, 0274, 0282, 0290, 0299, 0316, 0327, 0328, 0351, 0359, 0367, 0382, 0384, 0389, 0396 |
| LG/GoldStar | 0246 |
| Liesenk | 0271 |
| Liesenkotter | 0274 |
| Life | 0259, 0261 |
| Lifetec | 0259, 0261, 0273, 0274 |
| Lloyds | 0273 |
| Loewe | 0243, 0250, 0274, 0280, 0306, 0347 |
| Loewe Opta | 0257, 0268, 0271 |
| Logik | 0100 |
| Luma | 0264, 0271, 0273, 0274 |
| Lumatron | 0264, 0268, 0271, 0274, 0328 |
| Lux May | 0268 |
| Luxman | 0072, 0090 |
| Luxor | 0260, 0264, 0328 |
| LXI | 0061, 0065, 0071, 0072, 0073, 0077, 0088, 0099 |
| M Electronic | 0260, 0261, 0265, 0267, 0268, 0271 |
| MAG | 0050 |
| Magnadyne | 0257, 0263, 0271 |
| Magnafon | 0249, 0260, 0263, 0327 |
| Magnavox | 0072, 0088, 0090, 0091, 0095, 0096, 0098, 0114, 0115, 0129, 0134, 0176, 0178, 0189, 0210 |
| Magnum | 0259, 0261 |
| Majestic | 0100 |
| Mandor | 0259 |
| Manesth | 0259, 0260, 0268, 0271, 0274, 0328 |
| Marantz | 0072, 0088, 0090, 0096, 0158, 0268, 0271, 0274 |
| Marelli | 0257 |
| Mark | 0268, 0271, 0273, 0274, 0327, 0328 |
| Masuda | 0328 |
| Matsui | 0260, 0261, 0264, 0266, 0268, 0271, 0273, 0274, 0328, 0405 |
| Matsushita | 0067 |
| Maxent | 0193, 0226 |
| Mediator | 0268, 0271, 0274 |
| Medion | 0259, 0261, 0274 |
| Megapower | 0222 |
| Megatron | 0072, 0077 |
| MElectronic | 0273, 0274, 0327, 0328 |
| Melvox | 0275 |
| Memorex | 0065, 0072, 0077, 0100, 0103, 0133, 0219, 0261, 0273 |
| Memphis | 0261, 0273 |
| Mercury | 0273, 0274 |
| Metz | 0257 |
| MGA | 0072, 0077, 0090, 0096, 0103 |
| Micromaxx | 0259, 0261 |
| Microstar | 0259, 0261 |
| Midland | 0069, 0071, 0073, 0076, 0085, 0106, 0108 |
| Minerva | 0249 |
| Minoka | 0268, 0274 |
| Mintek | 0203 |
| Mitsubishi | 0006, 0015, 0016, 0048, 0072, 0077, 0090, 0103, 0196, 0224, 0257, 0266, 0268, 0274, 0298, 0371 |
| Mivar | 0243, 0249, 0250, 0260, 0327, 0328 |
| Monivision | 0222 |
| Montgomery Ward | 0100 |
| Motion | 0249 |
| Motorola | 0102, 0224 |
| MTC | 0072, 0090, 0096, 0103, 0243, 0327 |
| Multi System | 0271 |
| Multitech | 0104, 0225, 0229, 0243, 0260, 0261, 0263, 0264, 0266, 0271, 0273, 0274, 0327, 0328 |
| Murphy | 0260, 0327 |
| NAD | 0061, 0072, 0077 |
| Naonis | 0264 |
| NEC | 0026, 0053, 0072, 0090, 0096, 0102, 0103, 0266, 0328 |

Neckermann 0243, 0257, 0260, 0264, 0268, 0269, 0271, 0274, 0328
NEI 0268, 0271, 0274
Net-TV 0226
Neufunk 0273, 0274
New Tech 0261, 0268
New World 0262
NewTech 0273, 0274, 0328
Nicamagic 0260, 0327
Nikkai 0259, 0260, 0262, 0268, 0271, 0273, 0274, 0327, 0328
Nikko 0072, 0077, 0096
Nobliko 0249, 0260, 0263, 0327
Nokia 0265
Norcent 0155
Nordic 0328
Nordmende 0257, 0265, 0267, 0268
Nordvision 0271
Novatronic 0274
Oceanic 0265, 0275
Okano 0243, 0269, 0274
Olevia 0052, 0140, 0149, 0154, 0157
ONCEAS 0260
Onwa 0104, 0225
Opera 0274
Oppo 0208
Optimus 0065, 0067
Optoma 0194
Optonica 0224
Orbit 0268, 0274
Orion 0121, 0192, 0261, 0268, 0271, 0273, 0274, 0282, 0329
Orline 0274
Osaki 0259, 0260, 0262, 0274, 0328
Oso 0262
Otto Versand 0258, 0260, 0266, 0268, 0270, 0271, 0274, 0328
Pael 0260, 0327
Palladium 0243, 0260, 0269, 0274, 0328
Palsonic 0328
Panama 0259, 0260, 0261, 0273, 0274, 0327, 0328
Panasonic 0006, 0007, 0066, 0067, 0068, 0069, 0070, 0102, 0106, 0113, 0147, 0215, 0241, 0265, 0274, 0279, 0310, 0332, 0334, 0368, 0374
Panavision 0274
Pathe Cinema 0243, 0250, 0260, 0275, 0327
Pausa 0261, 0273
Penney 0061, 0069, 0071, 0077, 0096
Perdio 0274, 0327
Perfekt 0274
Philco 0072, 0088, 0090, 0091, 0094, 0096, 0102, 0103, 0243, 0249, 0257, 0274
Philharmonic 0260, 0328
Philips 0040, 0088, 0089, 0090, 0091, 0094, 0098, 0099, 0102, 0114, 0135, 0143, 0176, 0178, 0189, 0210, 0212, 0232, 0233, 0257, 0260, 0268, 0271, 0274, 0278, 0287, 0301, 0302, 0307, 0311, 0314, 0330, 0331, 0333, 0337, 0338, 0339, 0341, 0343, 0345, 0355, 0363, 0365, 0377, 0378, 0381, 0383, 0406, 0409, 0414
Philips Magnavox 0089, 0114, 0115
Phoenix 0243, 0257, 0268, 0271, 0274, 0327
Phonola 0257, 0268, 0271, 0274, 0327
Pilot 0085, 0090, 0096
Pioneer 0012, 0013, 0072, 0090, 0243, 0265, 0267, 0268, 0271, 0274, 0408
Plantron 0259, 0268, 0273, 0274
Playsonic 0328
Polaroid 0117, 0152, 0184, 0220
Poppy 0261, 0273
Portland 0072, 0085, 0090, 0103
Prandoni-Prince 0249, 0264
Precision 0260, 0328
Prima 0161, 0207, 0261, 0265, 0273
Princeton 0222
Prism 0069, 0106
Profex 0261, 0273
Profi-Tronic 0268, 0274
Proline 0268, 0274
Proscan 0071, 0073, 0099
Prosonic 0243, 0260, 0271, 0274, 0327, 0328
Protech 0259, 0260, 0261, 0263, 0268, 0271, 0328
Proton 0072, 0077, 0090, 0094
Protron 0150
PROVIEW 0050, 0164
Provision 0271, 0274
Pulsar 0076, 0090, 0108
Pye 0268, 0271, 0274, 0296, 0338
Pymi 0261, 0273
Quandra Vision 0275
Quasar 0067, 0069, 0102, 0106
Quelle 0259, 0260, 0268, 0271, 0274, 0328
Questa 0266
Radialva 0274
RadioShack 0065, 0071, 0077, 0096, 0225, 0274
RadioShack/Realistic 0072, 0085, 0090, 0094, 0099, 0104
Radiola 0268, 0271, 0274, 0328
Radiomarelli 0257, 0274
Radiotone 0243, 0268, 0273, 0274
Rank 0266
RCA 0071, 0072, 0073, 0074, 0075, 0090, 0099, 0102, 0103, 0109, 0120, 0179, 0218
Realistic 0065, 0077, 0096, 0225
Recor 0274
Redstar 0274
Reflex 0274
Revox 0243, 0268, 0271, 0274
Rex 0259, 0264, 0265
RFT 0243, 0250, 0257
Rhapsody 0327
R-Line 0268, 0271, 0274
Roadstar 0259, 0261, 0262, 0273
Robotron 0257
Rowa 0327, 0328
Royal Lux 0243
RTF 0257
Runco 0076, 0096, 0108
Saba 0257, 0265, 0267, 0272, 0376
Saisho 0259, 0260, 0261, 0273, 0328
Salora 0264, 0265
Sambers 0249, 0263
Sampo 0072, 0085, 0090, 0096, 0226
Samsung 0029, 0030, 0031, 0032, 0044, 0045, 0046, 0047, 0072, 0077, 0084, 0085, 0086, 0087, 0090, 0094, 0096, 0103, 0118, 0217, 0229, 0235, 0236, 0237, 0243, 0259, 0260, 0261, 0268, 0269, 0271, 0273, 0274, 0284, 0295, 0327, 0328, 0336, 0346, 0390, 0407
Sandra 0260, 0327, 0328
Sansui 0063, 0121, 0268, 0274
Sanyo 0020, 0021, 0022, 0049, 0065, 0090, 0141, 0191, 0243, 0250, 0260, 0266, 0273, 0291, 0327, 0328, 0370, 0373, 0391
SBR 0271, 0274
Sceptre 0166, 0185
Schaub Lorenz 0265
Schneider 0260, 0262, 0268, 0271, 0274, 0287, 0300, 0328, 0364, 0366
Scotch 0072, 0077
Scott 0072, 0077, 0090, 0094, 0104, 0105, 0199, 0225
Sears 0061, 0065, 0071, 0072, 0073, 0077, 0088, 0090, 0097, 0099, 0105
SEG 0259, 0260, 0263, 0266, 0271, 0273, 0274, 0300, 0327, 0328
SEI 0274
SEI-Sinudyne 0257, 0263, 0265
Seleco 0264, 0265, 0266
Sencora 0261, 0273
Sentra 0273
Serino 0327
Sharp 0009, 0010, 0011, 0072, 0080, 0081, 0082, 0083, 0085, 0090, 0094, 0110, 0148, 0183, 0216, 0224, 0247, 0248, 0258, 0266, 0288, 0304, 0324, 0325, 0340, 0358, 0362, 0369, 0386, 0392, 0398, 0400, 0401, 0403
Sheng Chia 0224
Shogun 0090
Siarem 0257, 0263, 0274
Sierra 0268, 0274
Siesta 0243
Signature 0100
Silva 0327
Silver 0266
Singer 0257, 0263, 0275
Sinudyne 0257, 0263, 0271, 0274
Skantic 0265
Solavox 0265
Sonitron 0243, 0328
Sonoko 0259, 0260, 0261, 0268, 0271, 0273, 0274, 0328
Sonolor 0265, 0275
Sontec 0243, 0268, 0271, 0274
Sony 0041, 0057, 0058, 0059, 0060, 0101, 0116, 0125, 0126, 0127, 0142, 0169, 0170, 0171, 0172, 0174, 0234, 0261, 0266, 0276, 0289, 0292, 0393, 0411
Sound & Vision 0262, 0263
Soundesign 0072, 0077, 0090, 0104, 0105, 0225
Soundwave 0268, 0271, 0274
Squareview 0097
SSS 0090, 0104, 0225
Standard 0260, 0261, 0262, 0268, 0273, 0274, 0328
Starlite 0104, 0225, 0271, 0273, 0274
Stenway 0270
Stern 0264, 0265
Strato 0273, 0274
Stylandia 0328
Sunkai 0261
Sunstar 0273, 0274
Sunwood 0261, 0268, 0273, 0274
Superla 0260, 0327, 0328
Superscan 0095, 0224
SuperTech 0273, 0274, 0327
Supra 0261, 0273
Supre-Macy 0107
Supreme 0057, 0101
Susumu 0262
Sutron 0261, 0273
SVA 0197
Sydney 0260, 0327, 0328

Sylvania 0072, 0088, 0089, 0090, 0091, 0095, 0096, 0097, 0098, 0175, 0177, 0210
Symphonic 0097, 0104, 0108, 0133, 0210, 0225
Syntax 0149
Syntax-Brillian 0149
Sysline 0271
Sytong 0327
Tandy 0224, 0258, 0260, 0262, 0265, 0328
Tashiko 0260, 0264, 0266, 0327, 0328
Tatung 0102, 0227, 0260, 0268, 0271, 0274, 0328
TCM 0259, 0261
Teac 0274, 0328
Tec 0260, 0261, 0273, 0328
Technics 0067, 0069, 0106
TechniSat 0320, 0417, 0418, 0419
Techwood 0069, 0072, 0090, 0106
TEDELEX 0328
Teknika 0072, 0085, 0088, 0090, 0094, 0100, 0103, 0104, 0105, 0225
Teleavia 0267
Telecor 0274, 0328
Telefunken 0267, 0268, 0272, 0274
Telegazi 0274
Telemeister 0274
Telesonic 0274
Telestar 0274
Teletech 0261, 0271, 0273, 0274
Teleton 0260, 0328
Televideon 0327
Televiso 0275
Tensai 0261, 0262, 0268, 0273, 0274, 0328
Tesmet 0268
Tevion 0259, 0261
Texet 0260, 0273, 0327, 0328
Thomson 0238, 0239, 0240, 0260, 0267, 0268, 0272, 0274, 0335
Thorn 0271, 0274
TMK 0072, 0077, 0090
TNCi 0076
Tokai 0268, 0274, 0328
Tokyo 0260, 0327
Tomashi 0270
Toshiba 0027, 0043, 0053, 0054, 0061, 0062, 0063, 0064, 0065, 0122, 0123, 0124, 0128, 0130, 0132, 0139, 0214, 0244, 0266, 0283, 0305, 0328, 0329, 0342, 0350, 0352, 0353, 0354, 0375, 0404
Totevision 0085
Towada 0265, 0328
Trakton 0328
Trans Continens 0274, 0328
Transtec 0327
Trident 0328
Triumph 0274
Uher 0243, 0249, 0265, 0268, 0274
Ultravox 0257, 0260, 0263, 0274, 0327
Unic Line 0274
United 0271
Universum 0243, 0249, 0259, 0268, 0269, 0271, 0274, 0328
Univox 0274
Vector Research 0096
Vestel 0264, 0265, 0268, 0269, 0271, 0274, 0328
Vexa 0261, 0271, 0273, 0274
Victor 0093, 0266, 0268
VIDEOLOGIC 0327
Videologique 0260, 0262, 0327, 0328
VideoSystem 0268, 0274
Videotechnic 0327, 0328
Vidikron 0088
Vidtech 0072, 0077, 0090, 0103
Viewsonic 0153, 0186, 0226, 0318
Viking 0107
Viore 0198
Visiola 0260, 0327
Vision 0268, 0274, 0328
Vizio 0090, 0136, 0160, 0227, 0420, 0421, 0422, 0423, 0424
Vortec 0268, 0271, 0274
Voxson 0249, 0257, 0264, 0265, 0268, 0274
Waltham 0260, 0274, 0328
Wards 0072, 0077, 0088, 0090, 0091, 0096, 0098, 0099, 0100, 0103, 0105
Watson 0268, 0271, 0274
Watt Radio 0260, 0263, 0327
Waycon 0061
Wega 0257, 0266, 0274
Wegavox 0273
Weltblick 0268, 0271, 0274, 0328
Westinghouse 0057, 0138, 0142
White Westinghouse 0008, 0119, 0260, 0263, 0271, 0274, 0327
Wincom 0055, 0056
Xrypton 0274
Yamaha 0000, 0001, 0002, 0003, 0004, 0005, 0072, 0090, 0096, 0103
Yamishi 0274, 0328
Yokan 0274
Yoko 0243, 0259, 0260, 0261, 0262, 0268, 0271, 0273, 0274, 0327, 0328
Yorx 0262
Zanussi 0264, 0328
Zenith 0076, 0077, 0078, 0079, 0090, 0100, 0108, 0111


## VCR


ABS 1066
Adventura 1023
Adyson 1090
Aiwa 1023, 1072, 1073, 1074
Akai 1071, 1073
Akiba 1079, 1090
Akura 1073, 1079, 1090
Alba 1074, 1075, 1076, 1079, 1090, 1091
Alienware 1066
Ambassador 1076
American High 1022
Amstrad 1072, 1090, 1091
Anitech 1079, 1090
Apex 1010
ASA 1077, 1078
Asha 1020
Asuka 1072, 1077, 1078, 1079, 1090
Audio Dynamics 1018
Audiosonic 1091
Audiovox 1021
Baird 1072, 1073, 1075, 1091
Bang & Olufsen 1067
Basic Line 1074, 1075, 1076, 1079, 1090, 1091
Baur 1078
Beaumark 1020
Bell & Howell 1019
Bestar 1075, 1076, 1091
Black Panther Line 1075, 1091
Blaupunkt 1078
Bondstec 1076, 1090
Broksonic 1054
Bush 1074, 1075, 1079, 1090, 1091, 1097, 1099, 1109, 1139
Calix 1021
Candle 1020, 1021
Canon 1022
Cathay 1091
Catron 1076
CGE 1072, 1073
Cimline 1074, 1079, 1090
CineVision 1058
Citizen 1020, 1021
Clatronic 1076, 1090
Colortyme 1018
Condor 1075, 1076, 1091
Craig 1020, 1021
Crown 1075, 1076, 1079, 1090, 1091
Curtis Mathes 1018, 1020, 1022
Cybernex 1020
CyberPower 1066
Daewoo 1023, 1075, 1076, 1091, 1116, 1141
Dansai 1079, 1090, 1091
Dantax 1074
Daytron 1075, 1091
DBX 1018
De Graaf 1078
Decca 1072, 1073, 1078
Dell 1066
Denko 1090
DiamondVision 1050
DigiFusion 1092
DIRECTV 1035, 1038, 1040, 1059, 1060, 1061, 1065
Dish Network 1064
Dishpro 1064
Dual 1073, 1078, 1091
Dumont 1072, 1078
Durabrand 1032
Dynatech 1023
Echostar 1064
Elbe 1091
Elcatech 1090
Electrohome 1021
Electrophonic 1021
Elsay 1090
Elta 1079, 1090, 1091
Emerson 1021, 1022, 1023, 1070, 1090
ESC 1075, 1091
Etzuko 1079, 1090
Expressvu 1064
Ferguson 1073
Fidelity 1072, 1090
Finlandia 1078
Finlux 1072, 1073, 1078
Firstline 1074, 1077, 1079, 1090
Fisher 1019
Flint 1074
Formenti/Phoenix 1078
Frontech 1076
Fuji 1022
Fujitsu 1072
Funai 1023, 1072
Galaxy 1072
Garrard 1023
Gateway 1066
GBC 1076, 1079
GE 1020, 1022
GEC 1078
Geloso 1079
General 1076
General Technic 1074
GOI 1064
GoldHand 1079, 1090
Goldstar 1018, 1021, 1072, 1077
Goodmans 1072, 1075, 1076, 1077, 1079, 1090, 1091
Gradiente 1023
Graetz 1073
Granada 1078
Grandin 1072, 1075, 1076, 1077, 1079, 1090, 1091
Grundig 1078, 1079
Hanseatic 1077, 1078, 1091
Harley Davidson 1023
Harman/Kardon 1018
Harwood 1090
HCM 1079, 1090
Headquarter 1019
Hewlett Packard 1066
Hinari 1074, 1079, 1090, 1091
Hisawa 1074
Hitachi 1072, 1073, 1078, 1089, 1108, 1124
HNS 1060
Howard Computers 1066
HP 1066
HTS 1064
Hughes 1035, 1040, 1061
Hughes Network Systems 1038, 1060
Humax 1035, 1060, 1094
Hush 1066
Hypson 1074, 1079, 1090, 1091

iBUYPOWER 1066
Impego 1076
Imperial 1072
Inno Hit 1075, 1076, 1078, 1079, 1090, 1091
Innovation 1074
Instant Replay 1022
Interbuy 1077, 1090
Interfunk 1078
Intervision 1072, 1091
Irradio 1077, 1079, 1090
ITT 1073
ITV 1075, 1077, 1091
JC Penney 1018, 1019, 1020, 1021, 1022
JCL 1022
JVC 1011, 1012, 1013, 1014, 1015, 1016, 1017, 1018, 1019, 1028, 1035, 1064, 1073, 1085, 1117, 1130, 1131, 1133, 1134, 1135, 1136
Kaisui 1079, 1090
Karcher 1078
Kendo 1074, 1075, 1076, 1090
Kenwood 1018, 1019, 1073
Kodak 1021, 1022
Korpel 1079, 1090
Kyoto 1090
Lenco 1075
Leyco 1079, 1090
LG 1021, 1053, 1072, 1077, 1088, 1100, 1106, 1125, 1143
Lifetec 1074
Linksys 1066
Lloyd's 1023
Loewe Opta 1077, 1078
Logik 1079, 1090
Lumatron 1075, 1091
Luxor 1090
LXI 1021
M Electronic 1072
Magnavox 1022, 1032, 1044, 1070
Magnin 1021
Manesth 1079, 1090
Marantz 1018, 1019, 1022, 1078
Mark 1091
Marta 1021
Matsui 1074, 1077
Matsushita 1022
Media Center PC 1066
Mediator 1078
Medion 1074
MEI 1022
Memorex 1019, 1020, 1021, 1022, 1023, 1032, 1048, 1069, 1072, 1077
Memphis 1079, 1090
MGN Technology 1020
Micromaxx 1074
Microsoft 1066
Microstar 1074
Migros 1072
Mind 1066
Mitsubishi 1029, 1072, 1078
Motorola 1022
MTC 1020
Multitech 1020, 1023, 1072, 1076, 1078, 1079, 1090
Murphy 1072
NEC 1018, 1019, 1073
Neckermann 1073, 1078
NEI 1078
Nesco 1079, 1090
Nikkai 1076, 1090, 1091
Nikko 1021
Niveus Media 1066
Noblex 1020
Nokia 1073, 1091
Nordmende 1073
Northgate 1066
Oceanic 1072, 1073
Okano 1074, 1090, 1091
Olympus 1022
Optimus 1021
Orion 1033, 1069, 1074, 1097, 1139
Orson 1072
Osaki 1072, 1077, 1079, 1090
Otto Versand 1078
Palladium 1073, 1077, 1079, 1090
Panasonic 1007, 1008, 1009, 1022, 1026, 1042, 1043, 1068, 1082, 1101, 1126, 1132
Pathe Marconi 1073
Perdio 1072
Philco 1022, 1090
Philips 1022, 1030, 1035, 1038, 1039, 1040, 1044, 1055, 1060, 1078, 1084, 1095, 1096, 1104, 1105, 1111, 1113, 1122, 1124, 1127, 1128, 1129
Philips Magnavox 1030
Phonola 1078
Pilot 1021
Pioneer 1078, 1118
Polaroid 1010, 1049
Portland 1075, 1076, 1091
Prinz 1072
Profex 1079
Proline 1072
Proscan 1065
Prosonic 1074, 1091
Pulsar 1032
Pye 1052, 1078
Quarter 1019
Quartz 1019
Quasar 1022
Quelle 1072, 1078
Radialva 1090
RadioShack 1021
RadioShack/Realistic 1019, 1020, 1021, 1022, 1023
Radiola 1078
Radix 1021
Randex 1021
RCA 1020, 1022, 1025, 1035, 1040, 1047, 1060, 1065
Realistic 1019, 1020, 1021, 1022, 1023
ReplayTV 1041, 1068
Rex 1073
RFT 1076, 1078, 1090
Ricavision 1066
Roadstar 1075, 1077, 1079, 1090, 1091
Royal 1090
Runco 1032
Saba 1073
Saisho 1074, 1079
Samsung 1006, 1020, 1038, 1040, 1046, 1060, 1080, 1107, 1110, 1112, 1121, 1123, 1140, 1142
Samurai 1076, 1090
Sanky 1032
Sansui 1033, 1056, 1069, 1073
Sanyo 1019, 1020, 1114
Saville 1091
SBR 1078
Schaub Lorenz 1072, 1073
Schneider 1072, 1074, 1075, 1076, 1077, 1078, 1079, 1090, 1091
Sears 1019, 1021, 1022
SEG 1079, 1090, 1091
SEI-Sinudyne 1078
Seleco 1073
Sentra 1076, 1090
Sentron 1079, 1090
Sharp 1031, 1045, 1057, 1081, 1115, 1137
Shintom 1079, 1090
Shivaki 1077
Shogun 1020
Siemens 1077
Silva 1077
Silver 1091
Singer 1022
Sinudyne 1078
Solavox 1076
Sonic Blue 1041, 1068
Sonneclair 1090
Sonoko 1075, 1091
Sontec 1077
Sony 1000, 1001, 1002, 1003, 1024, 1027, 1036, 1062, 1066, 1083, 1098, 1103, 1138
Stack 1066
Stack 9 1066
Standard 1075, 1091
Stern 1091
STS 1022
Sunkai 1074
Sunstar 1072
Suntronic 1072
Sunwood 1079, 1090
Superscan 1070
Sylvania 1022, 1023, 1044, 1052, 1070
Symphonic 1023, 1044, 1090
Systemax 1066
Tagar Systems 1066
Taisho 1074
Tandberg 1091
Tandy 1019
Tashiko 1021, 1072
Tatung 1072, 1073, 1078
TCM 1074, 1093, 1120
Teac 1023, 1091
Tec 1076, 1090, 1091
Technics 1022
Teknika 1021, 1022, 1023
Teleavia 1073
Telefunken 1073
Teletech 1090, 1091
Tenosal 1079, 1090
Tensai 1072, 1077, 1079, 1090
Tevion 1074
Thomson 1073, 1087
Thorn 1073
Tivo 1035, 1036, 1037, 1039, 1040, 1060, 1061, 1062
TMK 1020
Tokai 1077, 1079, 1090
Tonsai 1079
Toshiba 1004, 1005, 1034, 1051, 1063, 1066, 1073, 1078, 1086, 1099, 1102, 1119, 1144
Totevision 1020, 1021
Touch 1066
Towada 1079, 1090
Towika 1079, 1090
TVA 1076
Uher 1077
UltimateTV 1065
Ultravox 1091
Unitech 1020
United Quick Star 1075, 1091
Universum 1072, 1077, 1078
Vector Research 1018
Video Concepts 1018
Videon 1074
Videosonic 1020
Viewsonic 1066
Voodoo 1066
Wards 1020, 1021, 1022, 1023
Weltblick 1077
XR-1000 1022, 1023
Yamaha 1018, 1019
Yamishi 1079, 1090
Yokan 1079, 1090
Yoko 1076, 1077, 1079, 1090
Zenith 1032
ZT Group 1066


## DVD


4Kus 2097
Accurian 2220
Advent 2169, 2201
AEG 2312
Airis 2318
Aiwa 2272
Akai 2170, 2195, 2225, 2227
Akura 2310
Alba 2018, 2232, 2247, 2259, 2264
Alco 2199
Alize 2315
Allegro 2215
Amitech 2312
Amphion MediaWorks 2145
AMW 2145, 2313
Apex 2044, 2045, 2046, 2047, 2076, 2208, 2209
Apple 2163
Arrgo 2216
Asono 2318
Aspire 2140, 2202
Astar 2162

ATACOM 2318
Audiovox 2111, 2199
Avious 2317
Awa 2313
Axion 2171
Bang & Olufsen 2210
Baze 2317
BBK 2318
Bellagio 2313
Best Buy 2309
Blaupunkt 2209
Blue Parade 2207
Boghe 2300
Brainwave 2312
Brandt 2198, 2238
Broksonic 2192, 2195
Bush 2018, 2060, 2248, 2264, 2301, 2308, 2317, 2350, 2368
California Audio Labs 2197
Cambridge Audio 2304
CAT 2306, 2307
CAVS 2146
Centrum 2307
CGV 2304, 2312
Changhong 2222
Cinetec 2313
CineVision 2191, 2215
Clatronic 2308, 2317
Coby 2077, 2124, 2314
Conia 2301
Continental Edison 2313
Crown 2312
C-Tech 2305
Curtis Mathes 2217
CVG 2299
CyberHome 2048, 2068, 2216, 2233, 2258
Cytron 2166
Daenyx 2313
Daewoo 2083, 2215, 2280, 2299, 2312, 2313, 2326, 2376
Daewoo International 2313
Dalton 2311
Dansai 2303, 2312
Daytek 2145, 2234, 2313
Dayton 2313
DEC 2308
Decca 2312
Denon 2105, 2147, 2197, 2286
Denver 2288, 2308, 2310, 2314
Denzel 2302
Desay 2159
Diamond 2304, 2305
DiamondVision 2179, 2186
Disney 2078, 2088
DK Digital 2257
Dmtech 2226
Dual 2302
Durabrand 2218
DVX 2305
Easy Home 2309
Eclipse 2304
E-Dem 2318
Electrohome 2312
Elin 2312
Elta 2263, 2312, 2315
Emerson 2196, 2211, 2219
Enterprise 2211
Enzer 2302
Epson 2165
ESA 2219
Finlux 2304, 2312, 2317
Fintec 2299
Fisher 2212
Funai 2219
Gateway 2097
GE 2079, 2206, 2209
Gericom 2269
GFM 2176
Giec 2300
Global Solutions 2305
Global Sphere 2305
Go Video 2135, 2215
Goodmans 2247, 2289, 2298, 2300, 2308, 2330, 2369
GPX 2177
Gradiente 2197
Graetz 2302
Greenhill 2209
Grundig 2271
Grunkel 2312, 2316
GVG 2299
H&B 2308
H_her 2318
Haaz 2304, 2305
Haier 2172
Harman/Kardon 2125, 2213
HiMAX 2309
Hitachi 2008, 2033, 2108, 2302, 2309, 2320, 2366
Hiteker 2208
Home Tech Industries 2318
Hyundai 2316
Ilo 2167
Initial 2167, 2209
Innovation 2228
Insignia 2080, 2175, 2219
Integra 2207
Irradio 2103
iSymphony 2164
JBL 2213
JVC 2049, 2050, 2051, 2052, 2053, 2054, 2055, 2056, 2057, 2070, 2242, 2261, 2275, 2276, 2277, 2278, 2339, 2340, 2341, 2342, 2386, 2387, 2389, 2390, 2391
Jwin 2148
Kansai 2314
Kawasaki 2199
Kennex 2312
Kenwood 2123, 2197, 2270
KeyPlug 2312
Kiiro 2312
Kingavon 2308
Kiss 2302
KLH 2199, 2209
Koda 2308
Koss 2095, 2198, 2204
KXD 2309
Landel 2221
Lasonic 2214
Lawson 2305
Lecson 2303
Lenco 2308, 2312, 2317
Lenoxx 2203, 2218
LG 2080, 2107, 2115, 2116, 2141, 2188, 2211, 2215, 2237, 2239, 2285, 2293, 2295, 2348, 2370
Life 2228
Lifetec 2228
Limit 2305
Liquid Video 2204
Liteon 2097, 2121, 2220
Loewe 2274
LogicLab 2305
Magnavox 2075, 2096, 2178, 2180, 2196, 2205, 2219, 2308
Magnex 2317
Majestic 2314
Marantz 2282
Marquant 2312
Matsui 2198, 2296
McIntosh 2149
Mecotek 2312
Medion 2228
Memorex 2078, 2184, 2195
MiCO 2300, 2304
Micromaxx 2228
Microsoft 2206
Microstar 2228
Minoka 2312
Minowa 2317
Mintek 2167, 2209
Mitsubishi 2081
Mizuda 2308, 2309
Monyka 2302
Mustek 2232
Mx Onda 2304
Mystral 2316
Naiko 2312
Nesa 2209
Neufunk 2302
Nevir 2312
Next Base 2221
Nexxtech 2161
NU-TEC 2301
Onkyo 2205, 2290
Oopla 2097
Oppo 2150, 2173
Optim 2303
Optimus 2230
Orava 2308
Orbit 2313
Orion 2027, 2060
Oritron 2198, 2204
P&B 2308
Pacific 2305
Panasonic 2015, 2016, 2017, 2036, 2037, 2038, 2039, 2040, 2041, 2042, 2043, 2074, 2089, 2104, 2108, 2112, 2120, 2131, 2132, 2197, 2205, 2244, 2245, 2246, 2253, 2254, 2255, 2292, 2321, 2324, 2327, 2328, 2329, 2331, 2383, 2388
Parasound 2151
peeKTON 2318
Philips 2026, 2061, 2062, 2075, 2090, 2094, 2096, 2097, 2103, 2110, 2126, 2180, 2193, 2205, 2231, 2235, 2241, 2251, 2252, 2256, 2260, 2268, 2282, 2332, 2333, 2343, 2344, 2345, 2367, 2371, 2373, 2380, 2382, 2385
Phonotrend 2317
Pioneer 2012, 2013, 2014, 2063, 2064, 2065, 2066, 2067, 2113, 2134, 2207, 2230, 2236, 2265, 2266, 2267, 2297, 2322, 2351, 2352, 2353, 2354, 2355, 2356, 2357, 2358, 2359, 2377
Pointer 2312
Polaroid 2047, 2133, 2185
Portland 2312
Powerpoint 2313
Prima 2174
Proceed 2208
Proscan 2206
Prosonic 2299, 2314
Protron 2152
Provision 2308
Pye 2194
Qwestar 2198
Raite 2302
RCA 2058, 2059, 2071, 2079, 2183, 2199, 2206, 2207, 2209
RedStar 2310, 2312, 2314
Regent 2203
Reoc 2305
Rimax 2315
Rio 2215
Roadstar 2281, 2308
Ronin 2313
Rotel 2153
Rowa 2200, 2301
Rownsonic 2307
Saba 2198, 2238
Sabaki 2305
Saivod 2312
Sampo 2223
Samsung 2031, 2032, 2033, 2034, 2035, 2082, 2127, 2137, 2138, 2154, 2182, 2197, 2283, 2319, 2325, 2346, 2347, 2349, 2372, 2381
Sansui 2027, 2195, 2304, 2305, 2312
Sanyo 2139, 2195, 2212, 2374
ScanMagic 2232
Schaub Lorenz 2312
Schneider 2226
Scientific Labs 2305
Scott 2243, 2311
Seeltech 2318
SEG 2240, 2302, 2305, 2313
Sharp 2009, 2010, 2084, 2122, 2142, 2143, 2144, 2181, 2190, 2228, 2262, 2375
Shinsonic 2167
Sigmatek 2309, 2318
Silva 2310
Singer 2304, 2305
Skymaster 2279, 2305

Skyworth 2310
Slim Art 2312
SM Electronic 2305
Sonic Blue 2215
Sontech 2316
Sony 2005, 2006, 2007, 2020, 2021, 2022, 2023, 2024, 2025, 2069, 2072, 2073, 2085, 2086, 2087, 2091, 2092, 2093, 2102, 2128, 2129, 2130, 2249, 2250, 2323, 2334, 2335, 2336, 2360, 2361, 2362, 2363, 2364, 2365, 2384
Soundmaster 2305
Soundmax 2305
Spectra 2313
Spectroniq 2155
Standard 2305
Star Cluster 2305
Starmedia 2308, 2318
Sungale 2158
Sunkai 2312
Superscan 2196
Supervision 2305
Sylvania 2094, 2180, 2189, 2196, 2219, 2224
Symphonic 2062, 2180
Synn 2305
T.D.E. Systems 2316
Tatung 2083, 2312
TCM 2228, 2379
Teac 2199, 2287, 2301, 2305
Tec 2310
Technics 2197
Technika 2312, 2317
Telefunken 2307
Tensai 2312
Tevion 2228, 2305, 2311
Theta Digital 2207
Thomson 2229, 2238, 2284, 2294
Tokai 2302, 2310
Top Suxess 2318
Toshiba 2004, 2026, 2027, 2028, 2029, 2030, 2098, 2099, 2100, 2101, 2114, 2117, 2118, 2119, 2136, 2187, 2195, 2205, 2291, 2337, 2338, 2378
TRANScontinents 2313, 2317
Transonic 2317
Trio 2312
Trutech 2160
TruVision 2309
TSM 2318
Umax 2315
United 2317
Urban Concepts 2205
US Logic 2167
Venturer 2199
Viewmaster 2318
Vocopro 2156
VocoStar 2157
Waitec 2318
Welltech 2300
Westinghouse 2109, 2168
Wharfedale 2304, 2305
Woxter 2315, 2318
Xbox 2206, 2229
Xlogic 2305, 2312
XMS 2312
Xoro 2300
Yamada 2097, 2313, 2315
Yamaha 2000, 2001, 2002, 2003, 2011, 2018, 2019, 2036, 2106, 2197, 2273
Yamakawa 2302, 2313
Yukai 2232
Zenith 2080, 2141, 2205, 2211, 2215


## Blu-ray Disc


LG 2115
Panasonic 2089, 2131, 2132
Pioneer 2134
Samsung 2035, 2127
Sharp 2142, 2143, 2144
Sony 2025
Yamaha 2018


## DVR


Bush 2060
Panasonic 2037, 2038, 2039, 2040, 2041, 2042
Philips 2061, 2062
Pioneer 2063, 2064, 2065, 2066, 2067
RCA 2059
Samsung 2035
Yamaha 2036


## DVD Recorder


Aspire 2140
Astar 2162
Broksonic 2192
Go Video 2135
Hitachi 2108
Insignia 2080
Irradio 2103
JVC 2054, 2055, 2056, 2057
LG 2107, 2115, 2141, 2188
Liteon 2121
Panasonic 2037, 2038, 2039, 2041, 2042, 2043, 2089, 2104, 2108, 2112
Philips 2090, 2096, 2097, 2126, 2193
Pioneer 2067, 2113
Pye 2194
Samsung 2034, 2082, 2138
Sansui 2027
Sanyo 2139
Sony 2022, 2023, 2024, 2085, 2086, 2087, 2102, 2128, 2129, 2130
Sylvania 2189
Toshiba 2030, 2099, 2100, 2101, 2114, 2117, 2118, 2119
Yamaha 2106


## Cable


ABC 3004, 3015, 3016, 3017, 3037, 3040, 3067, 3080, 3081
ADB 3070
Adelphia 3003
Alcatel 3066
Americast 3046
Amstrad 3048, 3068
Antronix 3019, 3020
Archer 3020
Arcon 3048
AT&T 3013
Axis 3048
Bell South 3046
Cable Vision 3014
Cabletenna 3019
Cabletime 3058
Cableview 3005
Clearmaster 3045
ClearMax 3045
Clyde Cablevision 3059
Colour Voice 3022
Comcast 3006, 3010, 3039
Comcrypt 3057
Comtronics 3023
Contec 3024
Coolmax 3045
COX 3006
Cryptovision 3060
Director 3006
Eastern 3025
Everquest 3041
Fidelity 3048
Filmnet 3057
Filmnet Cablecrypt 3061
Filmnet Comcrypt 3061
Finlux 3051
Focus 3044
Foxtel 3068
France Telecom 3054, 3055
Freebox 3069
GC Electronics 3020
GE 3015, 3016
GEC 3059
Gemini 3026, 3041
General Instrument 3006, 3008, 3016, 3039, 3050, 3067, 3075
Goldstar 3042
Gooding 3049
Grundig 3048, 3049
Hamlin 3027, 3028
Hirschmann 3051
Hitachi 3016
HomeChoice 3056
Humax 3001, 3002, 3071
ITT Nokia 3051
Jasco 3041
Jerrold 3006, 3008, 3016, 3026, 3037, 3041, 3050, 3064, 3067, 3075
JVC 3049
Kabel Deutschland 3043, 3073, 3074
Macab 3055
Magnavox 3029
Maspro 3049
Matsui 3049
MegaCable 3039
Memorex 3030, 3040
Minerva 3049
Mnet 3057
Motorola 3006, 3008, 3010, 3013, 3039, 3072, 3075
Movie Time 3031, 3063
Mr Zapp 3055
Multichoice 3057
Multitech 3045
NEC 3018
NET Brazil 3007
Nokia 3051
Noos 3055
NSC 3031
Oak 3024
Pace 3011, 3043, 3084
Palladium 3049
Panasonic 3034, 3036, 3040
Paragon 3040
Philips 3021, 3022, 3029, 3049, 3053, 3054, 3055
Pioneer 3012, 3032, 3038, 3042, 3048, 3083, 3084
Popular Mechanics 3044
Proscan 3015, 3016
Pulsar 3040
PVP Stereo Visual Matrix 3064
Quasar 3040
RadioShack 3041, 3045
RCA 3005, 3036, 3076, 3077
Realistic 3020
Recoton 3044
Regal 3028
Regency 3025
Rembrandt 3016
Runco 3040
Sagem 3055
Samsung 3011, 3023, 3032, 3042
SAT 3048
Scientific Atlanta 3003, 3004, 3011, 3012, 3013, 3062, 3078, 3079, 3080, 3081, 3082, 3083, 3084
Signal 3026, 3041
Signature 3016
Sony 3014, 3047
Sprucer 3036
Standard Component 3033
Starcom 3026, 3037, 3041, 3067
Stargate 3026, 3041
Starquest 3026, 3041
Supercable 3008
Supermax 3045
Tele+1 3057, 3061
Telepiu 3057
Thomson 3000, 3009
TIME WARNER 3006
Tocom 3017
Torx 3067
Toshiba 3040
Tristar 3045
Tudi 3052
Tusa 3026, 3041
TV86 3031
Unika 3019, 3020
United Cable 3037, 3064
Universal 3019, 3020
Universum 3049, 3051
V2 3045
Videoway 3065
View Star 3024, 3029, 3031

Viewmaster 3045
Vision 3045
Visiopass 3051, 3054, 3055
Vortex View 3045
Wittenberg 3048
Zenith 3035, 3040, 3046
Zentek 3044


## Sattelite


AB Sat 4138, 4139
AccessHD 4058
ADB 4142
AGS 4138
Akai 4101, 4103
Alba 4083, 4084, 4085, 4086, 4108, 4139
Aldes 4085, 4087, 4088
Allsat 4098, 4101, 4103
Allsonic 4074, 4087, 4090
Alltech 4139
Alpha 4103
Alpha Digital 4058
Alphastar 4031
Amitronica 4139
Amstrad 4089, 4113, 4136, 4139
Anglo 4139
Ankaro 4074, 4087, 4090, 4139
Anttron 4083, 4086
Apollo 4083
Armstrong 4089, 4103
Artec 4054
Asat 4101, 4103
ASLF 4139
Astacom 4138
Astra 4089, 4091, 4100, 4137, 4139
Astro 4074, 4086, 4088, 4090, 4093, 4135, 4136, 4137
AudioTon 4086, 4098
Aurora 4140
Austar 4140
Axiel 4138
Axis 4074, 4090, 4091, 4096
Best 4074, 4090
Blaupunkt 4093
Blue Sky 4139
Boca 4089, 4100, 4105, 4139
Boston 4138
Brain Wave 4095
Broadcast 4094
Broco 4139
BSkyB 4113, 4123
BT 4138
Bubu Sat 4139
Bush 4084, 4127
Cambridge 4136
Canal Satellite 4135
Canal+ 4135
CaptiveWorks 4049
Channel Master 4060, 4085
Chaparral 4025
CHEROKEE 4138
Chess 4134, 4139
CityCom 4084, 4133, 4137
Clatronic 4095
CNT 4088
Comag 4000, 4001, 4002, 4003, 4004
Commlink 4087
Comtech 4096
Condor 4074, 4090, 4137
Connexions 4074, 4092
Conrad 4074, 4133, 4136, 4137
Conrad Electronic 4137, 4139
Contec 4096
Coolsat 4050
Cosat 4098
Coship 4063
Crown 4089
Daeryung 4092
Daewoo 4107, 4139
DDC 4085
Delega 4085
Dew 4096
Diamond 4097
Digiality 4137
Digital Stream 4059
DIRECTV 4017, 4018, 4020, 4021, 4022, 4024, 4037, 4038, 4040, 4041, 4043, 4045, 4057, 4106, 4143, 4144, 4145, 4146, 4147, 4148, 4149, 4150, 4151, 4152, 4153, 4154, 4155, 4156, 4157
Discoverer 4134
Discovery 4138
Diseqc 4138
Dish Network 4011, 4012, 4013, 4014, 4019, 4039, 4064
Dishpro 4039, 4064
Distrisat 4103
Ditristrad 4098
DNT 4092, 4101, 4103
Drake 4026
DStv 4140
Dune 4074
Echostar 4011, 4019, 4039, 4064, 4092, 4139
Einhell 4083, 4087, 4089, 4136, 4139
Elap 4138, 4139
Elekta 4088
Elsat 4139
Elta 4074, 4083, 4090, 4098, 4101, 4103
Emanon 4083
Emme Esse 4074, 4090
Engel 4139
Ep Sat 4084
EURIEULT 4077
Eurodec 4102
Europa 4103, 4136, 4137
Europhon 4137
Eurosat 4089
Eurosky 4074, 4089, 4090, 4133, 4136, 4137
Eurostar 4089, 4133, 4137
Eutelsat 4139
Exator 4083, 4086
Expressvu 4039
Fenner 4074, 4134, 4139
Ferguson 4084, 4102, 4132
Fidelity 4136
Finlandia 4084
Finlux 4084
FinnSat 4096, 4102
Flair Mate 4139
Foxtel 4140
Freecom 4083, 4099, 4136
FTEmaximal 4074, 4139
Fuba 4074, 4083, 4090, 4092, 4093, 4101, 4133
Galaxis 4074, 4087, 4090, 4091, 4096, 4098, 4133, 4140
GE 4015, 4016, 4061, 4151
General Instrument 4027, 4065
GMI 4089
GOI 4039
Goldbox 4135
GoldStar 4099
Goodmans 4079, 4080, 4084
Goodmind 4061
Grandin 4077
Grothusen 4083, 4099
Grundig 4084, 4086, 4093, 4113, 4129, 4136, 4140
Hänsel & Gretel 4137
Hantor 4083, 4095
Hanuri 4088
Hauppauge 4126
Heliocom 4137
Helium 4137
Hinari 4085
Hirschmann 4074, 4093, 4128, 4136, 4137, 4138
Hisawa 4095
Hisense 4066
Hitachi 4032, 4084, 4149, 4153
Homecast 4005, 4006, 4007
Houston 4098
HTS 4039
Hughes 4018, 4022, 4144, 4146, 4150, 4152
Hughes Network Systems 4021
Humax 4051, 4075, 4076, 4110
Huth 4087, 4089, 4094, 4095, 4096, 4098, 4137, 4141
Hypson 4077
Ilo 4066
Imex 4077
Innovation 4090
Insignia 4057
Intertronic 4089
Intervision 4098, 4137
ITT Nokia 4084
Jerrold 4065
Johansson 4095
JOK 4138
JSR 4098
JVC 4011, 4019, 4039, 4079
Kamm 4139
Kathrein 4093, 4101, 4103, 4109, 4112, 4120, 4133, 4138, 4139
Kathrein Eurostar 4133
Klap 4138
Konig 4137
Kosmos 4099
KR 4086
Kreiselmeyer 4093
K-SAT 4139
Kyostar 4083
L&S Electronic 4074
Lasat 4074, 4088, 4090, 4100, 4133, 4134, 4137
Lasonic 4062
Lenco 4074, 4083, 4099, 4133, 4137, 4139
Leng 4095
Lennox 4098
Lenson 4136
Lexus 4103
LG 4053, 4057, 4099
Lifesat 4074, 4090, 4134, 4139
Lifetec 4090
Lorenzen 4137
Lorraine 4099
Lupus 4074, 4090
Luxor 4136
Lyonnaise 4102
Macab 4102
Magnavox 4045, 4055
Manata 4077, 4138, 4139
Manhattan 4084, 4088, 4098, 4138
Marantz 4101
Mascom 4088
Maspro 4084, 4139
Matsui 4138
Max 4137
Mediabox 4135
Mediamarkt 4089
Mediasat 4091, 4135, 4136
Medion 4074, 4090, 4139
Medison 4139
Mega 4101, 4103
Memorex 4045
Metronic 4077, 4078, 4083, 4086, 4087, 4088, 4139
Metz 4093
Micro electronic 4136, 4137, 4139
Micro Technology 4139
MicroGem 4056
Micromaxx 4074, 4090
Microstar 4090
Microtec 4139
Minerva 4093
Mitsubishi 4084, 4093, 4152
Mitsumi 4100
Morgan's 4089, 4100, 4101, 4103, 4139
Motorola 4008, 4009, 4010, 4065
Multichoice 4140
Multitec 4134
Muratto 4099
Mysat 4139
Navex 4095
Neuhaus 4091, 4098, 4136, 4137, 4139
Neusat 4139
Next Level 4065
NextWave 4141
Nikko 4089, 4139
Nokia 4084, 4122
Nordmende 4083, 4084, 4085, 4088, 4102
Nova 4140
Novis 4095
Oceanic 4097
Octagon 4083, 4086, 4096
Okano 4089
Optex 4098
Optus 4135, 4140, 4141

| | |
|---|---|
| Orbitech | 4083, 4134, 4135, 4136 |
| OSat | 4086 |
| Otto Versand | 4093 |
| Pace | 4084, 4093, 4113, 4121, 4125, 4138 |
| Pacific | 4097 |
| Packsat | 4138 |
| Palcom | 4085 |
| Palladium | 4089, 4136 |
| Palsat | 4134, 4136 |
| Panasat | 4140 |
| Panasonic | 4043, 4044, 4046, 4084, 4113, 4118, 4143, 4148 |
| Panda | 4084, 4137 |
| Pansat | 4047 |
| Patriot | 4138 |
| Paysat | 4045 |
| PCT | 4060 |
| Philco | 4055 |
| Philips | 4021, 4022, 4045, 4084, 4101, 4103, 4111, 4115, 4135, 4138, 4150, 4152, 4153, 4155, 4156 |
| Phoenix | 4096 |
| Phonotrend | 4084, 4087, 4098 |
| Pioneer | 4124, 4135 |
| Polsat | 4102 |
| Predki | 4095 |
| Premiere | 4098, 4135 |
| Priesner | 4089 |
| Primestar | 4030 |
| Profile | 4138 |
| Promax | 4084 |
| Prosat | 4085, 4087 |
| Proscan | 4015, 4016, 4040, 4151 |
| Protek | 4097 |
| Proton | 4066 |
| Provision | 4088 |
| Quadral | 4074, 4085, 4087, 4090, 4138 |
| Quelle | 4093, 4133, 4137 |
| Quiero | 4102 |
| RadioShack | 4065 |
| Radiola | 4101, 4103 |
| Radix | 4092, 4119 |
| Rainbow | 4086 |
| RCA | 4015, 4016, 4034, 4035, 4036, 4037, 4038, 4040, 4151, 4157 |
| Realistic | 4028 |
| Redpoint | 4091 |
| Redstar | 4074, 4090 |
| RFT | 4087, 4101, 4103 |
| Roadstar | 4139 |
| Roch | 4077 |
| Rover | 4074, 4139 |
| Saba | 4088, 4133, 4137, 4138 |
| Sabre | 4084 |
| Sagem | 4069, 4102 |
| Sakura | 4096 |
| Samsung | 4018, 4021, 4023, 4041, 4042, 4081, 4082, 4083, 4114, 4150, 4154 |
| SAT | 4085, 4136 |
| Sat Cruiser | 4141 |
| Sat Partner | 4083, 4086, 4088, 4095, 4099, 4136 |
| Sat Team | 4139 |
| Satcom | 4094, 4137 |
| Satec | 4139 |
| Satelco | 4074 |
| Satford | 4094 |
| Satmaster | 4094 |
| Satplus | 4134 |
| Schneider | 4090, 4134, 4138 |
| Schwaiger | 4097, 4134, 4137 |
| SCS | 4133 |
| Seemann | 4089, 4091, 4092 |
| SEG | 4074, 4083, 4090, 4095 |
| Seleco | 4098 |
| Servi Sat | 4077, 4139 |
| Siemens | 4093 |
| Silva | 4099 |
| Skantin | 4139 |
| Skardin | 4091 |
| Skinsat | 4136 |
| SKR | 4139 |
| Skymaster | 4067, 4068, 4087, 4134, 4139 |
| Skymax | 4101, 4103 |
| SkySat | 4134, 4136, 4137, 4139 |
| Skyvision | 4098 |
| SM Electronic | 4134, 4139 |
| Smart | 4133, 4139 |
| Sony | 4017, 4020, 4135 |
| SR | 4089, 4100 |
| Star Choice | 4065 |
| Starland | 4139 |
| Starring | 4095 |
| Start Trak | 4083 |
| Strong | 4074, 4083, 4086, 4090, 4099, 4140 |
| STS | 4033 |
| STVI | 4077 |
| Sumida | 4089 |
| Sunny Sound | 4074 |
| Sunsat | 4139 |
| Sunstar | 4074, 4089, 4100 |
| Supermax | 4141 |
| Tandberg | 4102 |
| Tandy | 4086 |
| Tantec | 4084 |
| TCM | 4090 |
| Techniland | 4094 |
| TechniSat | 4071, 4072, 4073, 4092, 4103, 4116, 4117, 4134, 4135, 4136 |
| Technology | 4140 |
| Technosat | 4141 |
| Technowelt | 4137 |
| Teco | 4089, 4100 |
| Telanor | 4085 |
| Telasat | 4133, 4137 |
| Telecom | 4139 |
| Telefunken | 4067, 4083, 4138 |
| Teleka | 4086, 4089, 4092, 4136, 4137 |
| Telemaster | 4088 |
| Telesat | 4137 |
| Telestar | 4134, 4135, 4136 |
| Televes | 4084, 4136 |
| Telewire | 4098 |
| Tempo | 4141 |
| Tevion | 4090, 4139 |
| Thomson | 4070, 4084, 4102, 4104, 4130, 4133, 4135, 4137, 4138, 4139 |
| Thorens | 4097 |
| Thorn | 4084 |
| Tivax | 4058 |
| Tivo | 4150 |
| Tokai | 4103 |
| Tonna | 4084, 4094, 4098, 4136, 4139 |
| Toshiba | 4144, 4152, 4153 |
| Triad | 4099 |
| Triasat | 4136 |
| Triax | 4093, 4133, 4136, 4139 |
| Turnsat | 4139 |
| Tvonics | 4132 |
| Twinner | 4077, 4139 |
| UEC | 4140 |
| Uher | 4134 |
| UltimateTV | 4020 |
| Uniden | 4029, 4045 |
| Unisat | 4089, 4096, 4103 |
| Unitor | 4095 |
| Universum | 4093, 4133, 4137 |
| US Digital | 4066 |
| Variosat | 4093 |
| Vega | 4074 |
| Ventana | 4101, 4103 |
| Viewsat | 4048 |
| Visiosat | 4095, 4098, 4138, 4139 |
| Voom | 4065 |
| Vortec | 4083 |
| Welltech | 4134 |
| WeTeKom | 4134, 4136 |
| Wevasat | 4084 |
| Wewa | 4084 |
| Winersat | 4095 |
| Wisi | 4084, 4092, 4093, 4136, 4137 |
| Woorisat | 4088 |
| Worldsat | 4138 |
| Xrypton | 4074 |
| XSat | 4139 |
| Zehnder | 4074, 4088, 4090, 4131, 4133 |
| Zenith | 4052, 4057, 4145 |
| Zodiac | 4086 |

## CD

| | |
|---|---|
| Yamaha | 5000, 5013 |

## CD Recoder

| | |
|---|---|
| Yamaha | 5001 |

## MD

| | |
|---|---|
| Yamaha | 5002, 5003, 5004 |

## Tape

| | |
|---|---|
| Yamaha | 5005, 5006 |

## Tuner

| | |
|---|---|
| Yamaha | 5007, 5008, 5009, 5010, 5014, 5015, 5016, 5017, 5018 |

## USB

| | |
|---|---|
| Yamaha | 5012, 5021 |

## DOCK

| | |
|---|---|
| Yamaha | 5011, 5022 |

## LD

| | |
|---|---|
| Yamaha | 2002 |

© 2009 Yamaha Corporation All rights reserved.

YAMAHA CORPORATION
Printed in China @ WQ95460

English

# Additional information

## About the HDMI control function

This unit supports the HDMI control function.
When a TV that supports the HDMI control function is connected with this unit via the HDMI connection, the following operations of this unit can be controlled with the TV remote control (except for some TVs).

- Switching between on and standby (linked to the TV)
- Volume control (up/down, mute)
- Switching the sound output between a TV and this unit.

- If you connect this unit to an HDMI control-compatible DVD player or Blu-ray Disc player via HDMI, you can also control the connected component in synchronization with this unit (except some models).

You can turn on or off the HDMI control function from the following setup menu item.

Setup menu
Function Setup → 1 HDMI → Control

### Control

**Choices:** On/Off*

Selects on or off of HDMI control function when a component that supports the HDMI control function is connected with this unit.

| | |
|---|---|
| On | Enables the HDMI control function. |
| Off | Disables the HDMI control function. |

- When the HDMI control function is enabled, display of the following items in "1 HDMI" of the setup menu turns off.
  – Standby Through
  – Audio Output
- During standby, the HDMI THROUGH indicator on the front panel display lights up under the following conditions:
  – the HDMI control function is enabled
  – An HDMI signal input to this unit passes through this unit and output. See "Standby Through" or "Standby" (Setup menu → Function setup → 1 HDMI) on the manual for the details on the pass-through output of an HDMI signal.
- While this unit is on standby with the HDMI control turned on, it consumes 1 to 3W of power depending on a condition of an HDMI signal passing through this unit.

## Using the HDMI control function

When you use the HDMI control function, do the following referring to the operating instructions of the TV.

- Turn on the HDMI control function on the TV.
- Connect the TV to this unit following the instructions for connecting the TV to an AV amplifier.

- The HDMI control-compatible components include Panasonic VIERA Link compatible TV, DVD player/recorder and Blu-ray Disc player.
- When a DVD recorder/Blu-ray recorder/HD DVD recorder that supports the HDMI control function is connected via the HDMI connection, its operations are also linked to those of this unit. For details, refer to its operating instructions.
- We recommend that you use a TV, DVD recorder, Blu-ray recorder and HD DVD recorder of the same manufacturer.

**1 Connect a TV that supports the HDMI control function to this unit via the HDMI connection.**

**2 Turn on all components connected to this unit via the HDMI connection.**

For details on operations of external components, refer to their operating instructions.

**3 Check the settings of those components and enable the HDMI control function.**

Bring up to setup menu, and set "Control" to "On." For details on settings of the external components, refer to their operating instructions.

- You do not need to do step 1 through 3 from the second time.

**4 Turn off the TV.**

**5 Check if all components connected via the HDMI connection except for the TV are turned on.**

If they are turned off, turn them on.

**6 Turn on the TV.**

**7 Set the input of the TV according to the component connected to this unit such as [HDMI].**

**8 Set the input of this unit to the DVD recorder or Blu-ray recorder, and check if images from the recorder appear normal.**

**9 Perform operations with the TV remote control, such as switching this unit between on and standby, adjusting the volume and switching the sound output components.**

- If this unit does not work, check the following. It may also work normally after turning it off and back on or unplugging it and plugging it back in.
  – "Control" is set to "On."
  – The HDMI control function is enabled in the TV settings (refer to the operating instructions of the TV).

### Note

- If your monitor supports the HDMI control function, the scene of this unit is automatically set to "TV" according to switching of input on the monitor when the HDMI control function of this unit and the monitor are turned on. AV1 input is assigned to "TV" by default. By connecting an audio output terminal of the monitor to an optical digital terminal of AV1, you can watch a movie or a TV program right away. When the audio output of the monitor is connected to AV2-6, AUDIO1-2, and V-AUX assign the input source for that terminal to "TV" with the SCENE function.

© 2009 YAMAHA CORPORATION All rights reserved.

Printed in China @ WR87570

UABG
YAMAHA CORPORATION
© 2009 Yamaha Corporation All rights reserved.
Printed in China @ WT92370

# Addendum for audio/video connection

When AV3, AV4, AUDIO1 or AUDIO2 is selected as the input source, a video signal input from an external component connected to the HDMI1-4, AV1-6 or V-AUX jack can be output to the video monitor. This feature is useful when you connect a component such as the following.

Example 1: A game console that outputs an analog audio signal and a video signal via component video jacks.

Example 2: A set-top box that does not output an audio signal at the HDMI output jack.

To connect such a component, do the following connection/setting.

Part 1: Connecting an external component

Part 2: Assigning the video input jacks

## Part 1: Connecting an external component

- **HDMI jacks:** Connect the HDMI output jack of the external component to the available HDMI jack of this unit (see next section).
- **Audio output jacks:** Connect the audio output jacks of the external component to the AV3-4 or AUDIO1-2 audio input jacks.
- **Video output jacks:** Connect the video output jacks of the external component to the AV1-6 or VIDEO AUX video input jacks.

### Note

- Make sure that this unit and other components are unplugged from the AC wall outlets.

### ■ HDMI and audio connection

| Audio output jacks on the connected source component | Input sources/ jacks of this unit | | Available HDMI jack |
|---|---|---|---|
| Analog audio output | AUDIO1 | AUDIO | HDMI1 |
| | AUDIO2 | AUDIO | HDMI2 |
| Coaxial digital output | AV3 (CD) | COAXIAL | HDMI3 |
| Optical digital output | AV4 | OPTICAL | HDMI4 |

### ■ Audio connection

| Output jacks on the connected source component | Input sources/jacks of this unit | |
|---|---|---|
| Coaxial digital output | AV3 (CD) | COAXIAL |
| Optical digital output | AV4 | OPTICAL |
| Analog audio output | AUDIO1 | AUDIO |
| | AUDIO2 | AUDIO |

### ■ Video connection

| Output jacks on the connected source component | Jacks of this unit | |
|---|---|---|
| Component video output | AV1 (TV) | COMPONENT VIDEO |
| | AV2 | COMPONENT VIDEO |
| Composite video output | AV3 (CD) | VIDEO |
| | AV4 | VIDEO |
| | AV5 | VIDEO |
| | AV6 | VIDEO |
| | VIDEO AUX (Front panel) | VIDEO |
| S-Video output | AV5 | S-VIDEO* |

* Some models only.

### Note

- If the video monitor is connected to this unit via an analog video connection (component video or composite video connection), connect the external component to this unit via the same analog connection.

Continues to the back side

**Example of connection**

Example 1: Connecting a game console

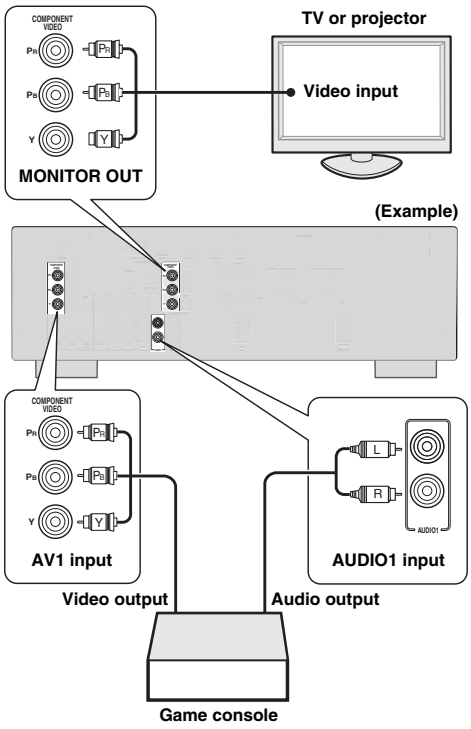


Example 2: Connecting a set-top box

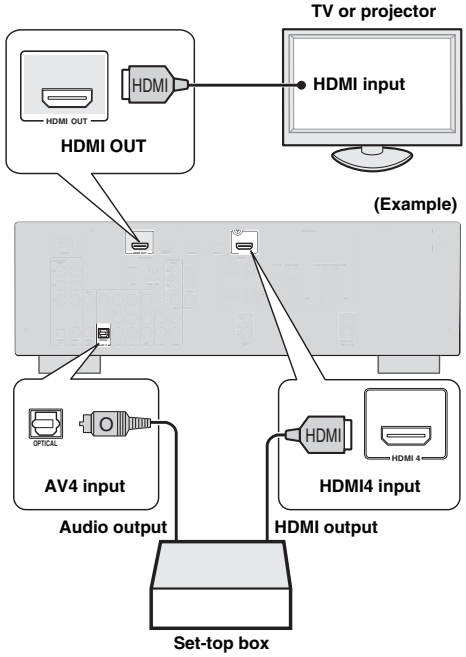


## *Part 2: Assigning the video input jacks*

**1 Turn on this unit.**

**2 Press AV3-4 or AUDIO1-2 on the remote control to select the input source.**

Select the input source that the audio output jack of the external component is connected to.
When you made the connection same as the example 1, press **AUDIO1**.

**3 Press OPTION on the remote control.**

The OPTION menu appears.

**4 Press Cursor △ / ▽ to display "Video Out," and press ENTER.**

**5 Press Cursor ◁ / ▷ to select the video input terminal connected to the video output jacks of the external component.**

- HDMI1-4*
- AV1-2 (COMPONENT VIDEO)
- AV3-6 (VIDEO)
- AV5 (S-VIDEO)**
- V-AUX (VIDEO)
- Off (no video input)

* You can only select the available HDMI jack (See previous page).
** Some models only.

When you made the connection same as the example 1, select AV1.

**6 To end the setting, press OPTION.**

August, 2009

**Subject: RX-V465/565/665/765 Firmware Update Version K032**

Yamaha is pleased to offer the following firmware update to ensure the best possible performance and features for your Yamaha RX-V465/565/665/765 AV Receiver. This firmware allows adds optional video assign menu to the input of AV3, AV4, AUDIO1 and AUDIO 2.

Requirements:

- A personal computer capable of burning an audio CD
- CD or DVD player* with digital audio connection (Optical or Coaxial, not HDMI)

*Note:
In some instances a DVD player or a BD player will not work for this update procedure, so connecting a CD player is preferred

**CHECK THE UNIT'S FIRMWARE VERSION PRIOR TO THIS UPDATE**
The firmware version consists of a letter followed by three numbers [ex. "K032"]. If the three numbers in the firmware version are 032 or higher, you **DO NOT** need to perform this update.

**How to check your firmware version:**
Press and hold the [STRAIGHT] button on the front panel and keep it pressed while you press the [STANDBY/ON] button. Once the front panel displays "Advance Setup", release the [STRAIGHT] button. Then, press and hold the [TONE CONTROL] button for about 3 seconds until front panel display shows the version of firmware.

The following pages contain the firmware update instructions for Yamaha AV receiver RX-V465/565/665/765. The outline of the update is as follows:

1. **Download the firmware** and create an update disc (Audio CD)
2. Connect digital audio with CD or DVD player
3. Enter firmware update mode
4. Play the update disc (Reprogramming)
5. Confirm update firmware version

**Note: Executing this update will RESET the receiver's setting to factory default.**

**< IMPORTANT NOTICE >**
Do not attempt to update your Yamaha receiver using any other data file except those provided directly from the Yamaha website.

Follow the instructions carefully and do not attempt any other procedures not specified in the instructions provided by Yamaha.
Improperly updated products may cause improper operation, and any parts or service required to restore proper operation will not be covered under the Yamaha Limited Warranty.

## Instructions for Firmware Update:

**STEP1** **Download from YAMAHA website**. Unzip the downloaded content and burn the WAV file as an Audio-CD. This will be your update disc.

1a) If you need instructions on creating this firmware update CD, see your Personal Computer ("PC") CD burning software instructions on how to burn a WAV file as an Audio CD.

Note:
Conventional CD burning software is recommended. An audio CD burned by Windows Media Player may not work.

**STEP2** Unplug the AC power cable of the receiver and CD/DVD player from the wall outlet. Then, connect CD or DVD player* using digital connection (Coaxial or Optical) into any input of your receiver.

**<Connection with OPTICAL cable>**

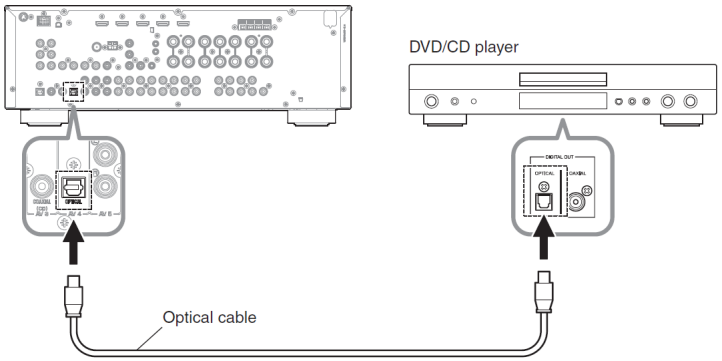


**<Connection with COAXIAL cable>**

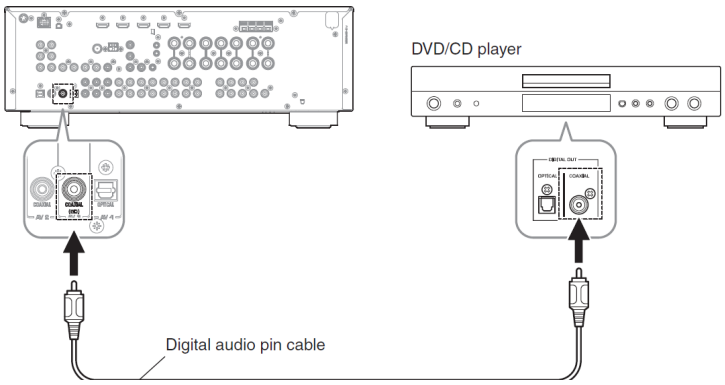


*Some DVD players use digital filters, which affects the output signal of the devices. The firmware update will not work with DVD players the use these digital filters. CD player usually does not use these filters so using CD player is preferred.

Picture shows a sample of the connection. Depending on your CD/DVD player's digital output, connect the receiver with either optical or coaxial.

**Note:**
**Executing this update will RESET the receiver's setting to factory default.**

**STEP3** Plug the AC power cable of the CD/DVD player to the wall outlet.
Insert the Firmware Update CD (Audio CD) into the CD/DVD player and close the tray.
If the disc begins to play automatically, press STOP button on the CD/DVD player.

**STEP4** **ENTER FIRMWARE UPDATE MODE**
While pressing the “STRAIGHT” key on the front panel of the AV receiver, connect the power cable of this unit to the AC outlet.
The firmware update mode is activated and “CDDA UPGRADER” is displayed.

**STEP5** **START FIRMWARE UPDATE**
Press the “PLAY” key of the CD/DVD player.
Then, writing of the firmware is started. “Found Header” will appear for few seconds.

While update is in progress, **DO NOT interrupt the AV receiver by pressing the buttons or switching off the power.**

If an unintended failure occurs, you may start the update process again from the beginning. Or see IN CASE OF ERROR on the last page to recover.

**STEP6** When writing of the firmware is completed, “Update Success”, “Please...” and “Power off!!” are displayed repeatedly.

**STEP7** Stop the DVD/CD player, remove update disc and power off.

**STEP8** Turn off the power of AV receiver.

**STEP9** **CHECK UPDATED VERSION**
Press and hold the [STRAIGHT] button on the front panel and keep it pressed while you press the [STANDBY/ON] button. Once the front panel displays "Advance Setup", release the [STRAIGHT] button. Then, press and hold the [TONE CONTROL] button for about 3 seconds until front panel displays **“M:K032 8FFD”**.
K032: version of firmware
8FFD: checksum

If your firmware version number and checksum don't match, retry from step 2. Or try the **IN CASE OF ERROR** method on the last page.

**STEP10** Turn off the power of AV receiver.

## Congratulations!

You have completed the firmware update. Your AV receiver is ready for normal use.

## IN CASE OF ERROR

**Case1 Display on the receiver “CDDA UPGRADER” doesn’t change after playing the CD/DVD player.**

- Check digital cable wiring. Only optical or coaxial connection can be used for this update. HDMI connection will not work.
- Check digital out setting. When using DVD players, make sure the digital out is set to “PCM”. Once update is complete, reset DVD player to its original settings.
- Check update disc. Make sure that your CD-R/RW is finalized and created as an “AUDIO CD”. (playable on any CD/DVD player)
- If all above are cleared, your CD/DVD player may not be suited for this update. Try another CD/DVD player or contact your local authorized service center to update the receiver for you.

**Case2 Other unintended error occurred.**

- "ERROR" was displayed during the update
- Receiver doesn't power up after the update.

Solution: Try the following recovery method

**Step PL1.** Unplug the AC power cable of the Yamaha receiver from wall outlet.

**Step PL2.** On the front panel of the AV receiver, press and hold the [STRAIGHT] button and keep it pressed, which you plug the AC power cord of the Yamaha receiver to the wall outlet. Once the front panel displays "CDDA UPGRADER" release the [STRAIGHT] button.

**Step PL3.** Go to Step 5 START FIRMWARE UPDATE.

# YAMAHA

# RX-V565/V465

The letters in circles and the numbers in squares correspond to those in the Owner's Manual.
Les lettres dans les cercles et les numéros dans les carrés correspondent à ceux du mode d'emploi.
Die Buchstaben in Kreisen und die Nummern in Kästchen entsprechen denen in der Bedienungsanleitung.
Bokstäverna i cirklarna och siffrorna i rutorna motsvarar de i bruksanvisningen.
Le lettere cerchiate e i numeri nei quadratini corrispondono a quelli nel Manuale di istruzioni.
Las letras enmarcadas en un círculo y los números enmarcados en un cuadrado se corresponden con aquellos del manual de instrucciones.
De letters in cirkels en de nummers in hokjes corresponderen met de in de Gebruiksaanwijzing.
Буквы в кружочках и цифры в квадратиках соответствуют таковым в инструкции по эксплуатации.
圆圈内的字母和正方形内的数字与说明书内的同类字母和数字相对应。
원 안의 문자들과 사각형 안의 숫자들은 사용자 설명서에 있는 것들과 일치합니다 .

## ■ Front panel/Face avant/Frontblende/Frontpanelen/Pannello anteriore/Panel delantero/Voorpaneel/ Фронтальная панель/ 前部面板 / 전변 패널

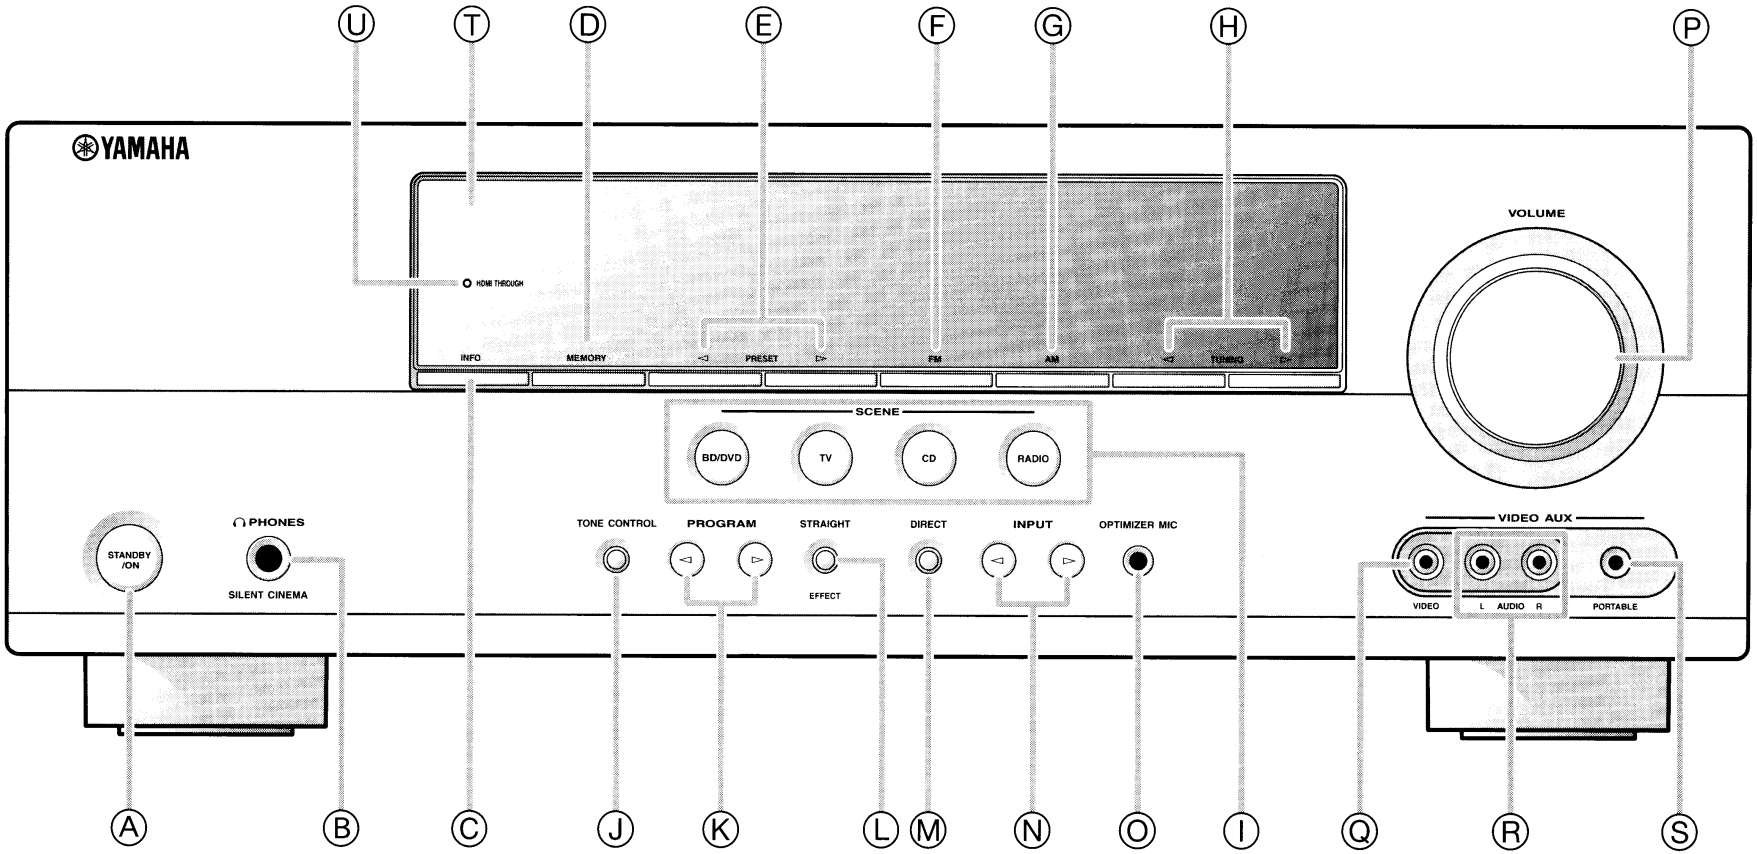

## ■ Remote control/Boîtier de télécommande/Fernbedienung/Fjärrkontrollen/ Telecomando/Mando a distancia/Afstandsbediening/Пульт ДУ/ 遥控器 / 리모콘

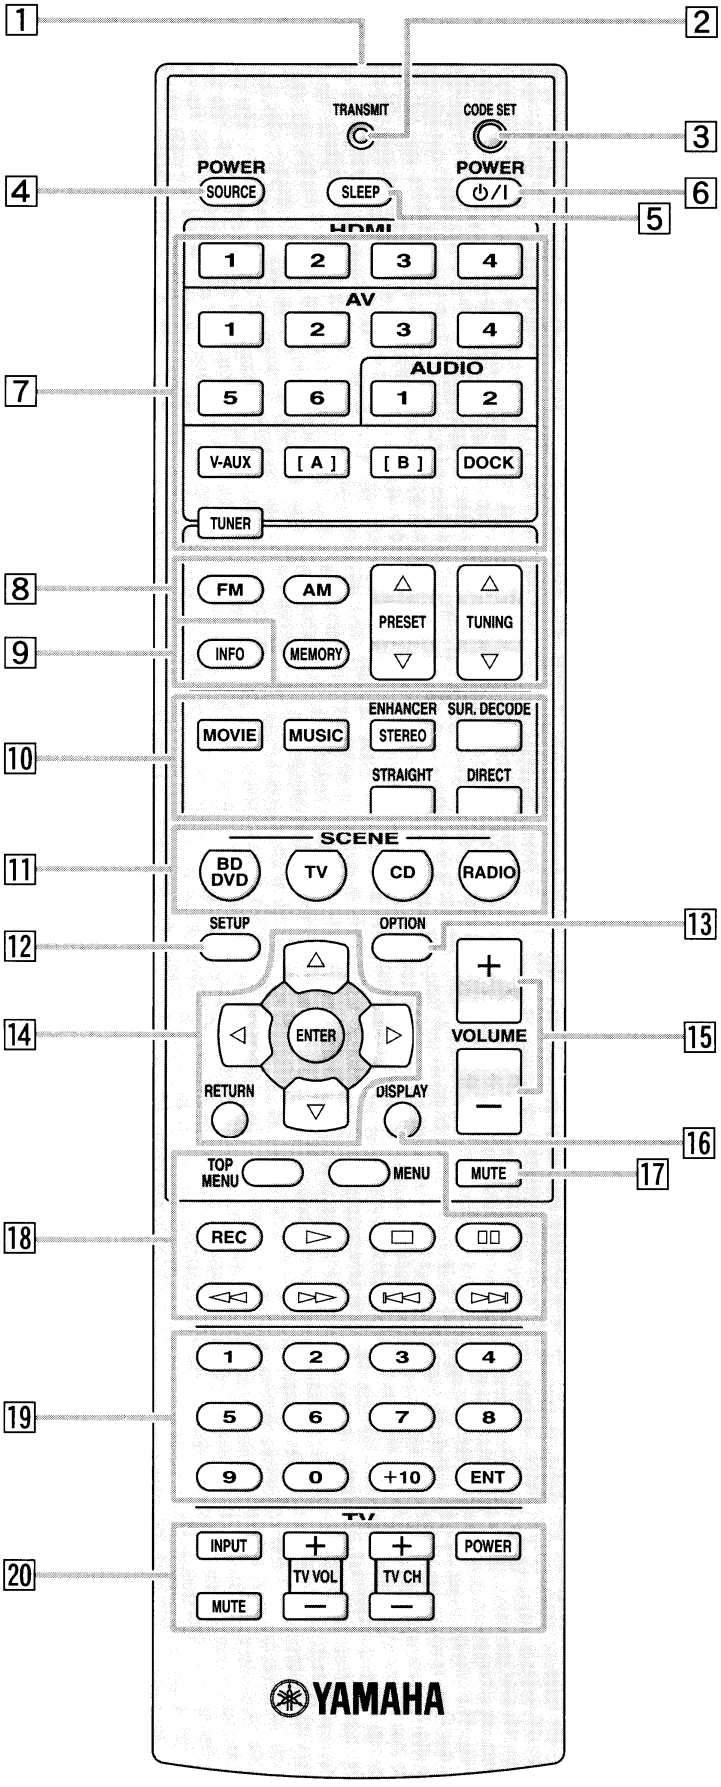


PRINTED WITH SOY INK

YAMAHA CORPORATION
Printed in China @ WQ95580

YAMAHA

# Registering Your New Yamaha Product is Fast and Easy

Thank you for purchasing a new product from Yamaha Electronics. We'd like to continue providing you with high quality products and better service. So, we've made it simple to register your new product purchase online. Please take a few minutes to visit our website at **www.yamaha.com/YEC/registration/** and complete the information and questions included there. We appreciate your business and we look forward to hearing from you.

Failure to complete the registration form does not diminish your warranty rights in any way.

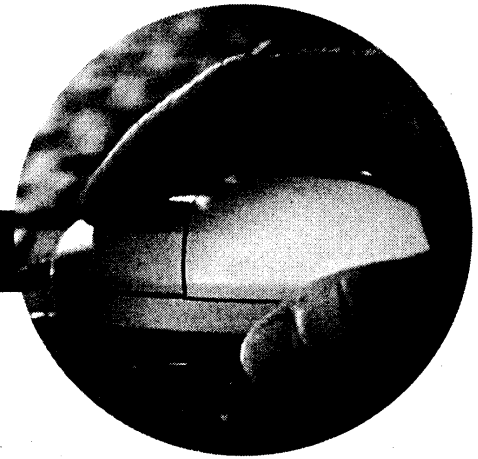

Register online at **www.yamaha.com/YEC/registration/**

***Product registration applies to USA customers only.***

WF15740

YAMAHA Home Audio products are designed and manufactured to provide a high level of trouble-free performance. YAMAHA Electronics Corporation, USA, is proud of the experienced craftsmanship that goes into each and every YAMAHA Home Audio product. YAMAHA sells its Home Audio products only through a network of high quality, specially authorized dealers and is pleased to offer the following Limited Warranty, which applies only to products purchased from our authorized dealers. YAMAHA Home Audio products are backed by a nationwide network of high quality YAMAHA Authorized Service Centers, providing prompt, courteous, and professional service. We suggest that you read the Limited Warranty thoroughly, and invite you to contact your authorized YAMAHA dealer or the YAMAHA Electronics Corporation, USA, Service Department if you have any questions.

YAMAHA

# LIMITED WARRANTY
# HOME AUDIO PRODUCTS

| Type of Product | Duration of Warranty (beginning from first consumer purchase) |
|---|---|
| A/V and Stereo Receivers, Processor and Integrated Amplifiers, Separate Amplifiers and Preamplifiers, Tuners, CD Players and Changers, HDD Players and Recorders, Powered Loudspeakers, Media Controllers and Speaker Systems purchased individually, as a pair, or as part of an Integrated or Packaged system. | 2 years |
| Cassette Decks, BLU-RAY Disc Players, DVD Players and Changers, Integrated Systems (Receiver or Amplifier combined or on same chassis with CD or DVD Player), Desktop Audio Systems (i.e. TSX and PDX Series), Multimedia Speakers and Accessories. | 1 year |

**What is Covered and what is Not Covered:**

This warranty covers all defects in materials or workmanship in this product, but DOES NOT COVER the following:

(1) Damage, deterioration or malfunction resulting from:
   a. Accident, negligence, misuse, abuse, improper installation or operation or failure to follow instructions contained in your Owner's Manual.
   b. Any shipment of the product. (Claims must be presented to the carrier.)
   c. Repair or attempted repair by anyone other than YAMAHA or an authorized YAMAHA Service Center.

(2) Any unit which has been altered or on which the serial number has been defaced, modified or removed.

(3) Normal wear, battery replacement and any periodic maintenance.

(4) Any unit which has not been purchased from an authorized YAMAHA Home Audio dealer in the USA. If you are uncertain as to whether a dealer has been authorized by YAMAHA, please contact YAMAHA's Service Department.

(5) Any unit used for industrial or commercial purposes.

**Who may enforce the warranty:**

This warranty is enforceable only by the original purchaser.

**What we will pay for and what you must pay for:**

YAMAHA will repair or replace units covered by this warranty, without charge to the consumer for labor or materials. Some repair parts may be used or rebuilt replacements, that meet or exceed Yamaha specifications for new parts, in exchange for defective parts. YOU ARE RESPONSIBLE FOR ANY INSTALLATION OR REMOVAL CHARGES AND FOR ANY INITIAL SHIPPING CHARGES, if the product(s) must be shipped for warranty service. However, we will pay the return shipping charges to any destination within the USA if the repairs are covered by the warranty.

**How you can get Warranty Service:**

(1) If your YAMAHA product(s) require service, contact the authorized YAMAHA dealer and the dealer will advise you of the procedures to be followed. If this is not practical, contact YAMAHA at the address, telephone number or Internet URL shown below. We may request that you send the defective product(s) to a local authorized YAMAHA Service Center, to an authorized YAMAHA Regional Service Center, or authorize return of the defective product(s) to YAMAHA for repair.

(2) Product(s) shipped for service should be packed securely and must be accompanied by a detailed explanation of the problem(s) requiring service, as well as your sales receipt or other proof of date and place of purchase, as evidence of warranty coverage.

(3) Warranty registration is not required for warranty coverage.

**Limitation of Implied Warranties:**

ANY IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE LENGTH OF THIS WARRANTY. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

**Exclusion of Damages:**

YAMAHA'S LIABILITY FOR ANY DEFECTIVE PRODUCT IS LIMITED TO REPAIR OR REPLACEMENT OF THE PRODUCT, AT OUR OPTION. IF WE ELECT TO REPLACE THE PRODUCT, THE REPLACEMENT MAY BE A RECONDITIONED UNIT. YAMAHA SHALL NOT BE LIABLE FOR DAMAGES BASED UPON INCONVENIENCE, LOSS OF USE, DAMAGE TO ANY OTHER EQUIPMENT OR OTHER ITEMS AT THE SITE OF USE, OR ANY OTHER DAMAGES WHETHER INCIDENTAL, CONSEQUENTIAL OR OTHERWISE. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS AND/OR DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

Should you have any questions about service received or if you need assistance in locating an authorized YAMAHA Service Center, please contact:

YAMAHA

**SERVICE DEPARTMENT**

**YAMAHA Electronics Corporation, USA**

6660 Orangethorpe Avenue, Buena Park, California 90620-1345
Telephone: (800) 292-2982, 8 AM to 4 PM Pacific time
Internet URL: http://www.yamaha.com/yec/

Do not return any product to the above address; it is not a service location. YAMAHA products are backed by a nationwide network of high quality YAMAHA authorized Service Centers, providing prompt, courteous and professional service. **For referral to your nearest authorized YAMAHA Preferred Customer Service Center or authorized YAMAHA Regional Service Center call 1-800-4 YAMAHA.**